

GB**WARNING**

THIS BURNER MUST BE INSTALLED IN ACCORDANCE WITH THE RULES IN FORCE AND USED ONLY IN A WELL-VENTILATED SPACE. CONSULT THE INSTRUCTIONS BEFORE INSTALLATION AND USE OF THIS BURNER. BEFORE CARRYING OUT ANY MAINTENANCE OPERATION, THE BURNER MUST BE SWITCHED OFF AND THE GAS SUPPLY MUST BE ISOLATED.

CN**警告**

在安装和使用本燃烧器之前，请参考相关操作说明。燃烧器必须严格按照相关要求安装，安装的空间应具有良好的通风条件。在实施任何维护前，一定要把电源的主开关切断，必须与供应燃气隔离开。

GB**WARNING**

THIS BURNER MUST BE INSTALLED IN ACCORDANCE WITH THE RULES IN FORCE AND USED ONLY IN A WELL-VENTILATED SPACE. CONSULT THE INSTRUCTIONS BEFORE INSTALLATION AND USE OF THIS BURNER. BEFORE CARRYING OUT ANY MAINTENANCE OPERATION, THE BURNER MUST BE SWITCHED OFF AND THE GAS SUPPLY MUST BE ISOLATED.

CN**警告**

在安装和使用本燃烧器之前，请参考相关操作说明。燃烧器必须严格按照相关要求安装，安装的空间应具有良好的通风条件。在实施任何维护前，一定要把电源的主开关切断，必须与供应燃气隔离开。

BURNER OPERATION**A TO START-UP THE BURNER:**

- CHECK IF THE MANUAL GAS VALVE IS OPENED
- SWITCH ON THE MAIN SWITCH

B TO SHUT -DOWN THE BURNER:

- SWITCH OFF THE MAIN SWITCH

燃烧器操作**A 启动燃烧器:**

- 检查手动燃气阀是否已打开；
- 合上主电源开关。

B 关闭燃烧器:

- 切断主电源开关。

BURNER OPERATION**A TO START-UP THE BURNER:**

- CHECK IF THE MANUAL GAS VALVE IS OPENED
- SWITCH ON THE MAIN SWITCH

B TO SHUT -DOWN THE BURNER:

- SWITCH OFF THE MAIN SWITCH

燃烧器操作**A 启动燃烧器:**

- 检查手动燃气阀是否已打开；
- 合上主电源开关。

B 关闭燃烧器:

- 切断主电源开关。