

# AMW P

SERIES R32

EN INSTALLATION AND TECHNICAL SERVICE INSTRUCTIONS

# RIELLO

Dear Technician,

We would like to congratulate you on having recommended a **RIELLO** unit: a modern product that is capable of ensuring maximum comfort at length, with a high degree of reliability, efficiency, quality and safety.

While your technical skills and knowledge will certainly be more than sufficient, this booklet contains all the information that we have deemed necessary for the device's correct and easy installation.

Thank you again, and keep up the good work.

RIELLO

## COMPLIANCE

**RIELLO AMW P** heat pumps are compliant with the following European Directives:

- Low Voltage Directive 2014/35/EU
- Electromagnetic Compatibility Directive 2014/30/EU
- RoHS Directive 2011/65/EU
- ErP Directive 2009/125/EC and Regulation 2012/206/EC
- WEEE Directive 2012/19/EU
- F-Gas Regulation 2014/517/EU



## WARRANTY

**RIELLO** product has a **Conventional Warranty** (valid for Italy, Republic of San Marino, Vatican City), starting from the product's date of purchase.


### WARNING

Keep the product purchase documents for tax purposes to be presented to the Authorised Technical Support upon request of a service call under warranty.

Find the nearest Authorised Technical Support by visiting the website

[www.riello.it](http://www.riello.it)

**Support // Authorized Support Centre**

 The product must be used for its intended purpose, as stated by **RIELLO** for which it has been expressly manufactured. **RIELLO** shall bear no responsibility, whether of a contractual or non-contractual nature, for any damage caused to people, animals, or property due to incorrect installation, adjustments, or maintenance, or improper use.

## RANGE

Model	Code
AMW 25 P	20127839
AMW 35 P	20127841
AMW 50 P	20127842
AMW 20 P	20148316
AMW 70 P	20148318

## ACCESSORIES

For the complete list of accessories and the information relating to their usage combinations, please refer to the catalogue.

## TABLE OF CONTENTS

<b>1</b>	<b>GENERAL INFORMATION</b>	<i>p. 4</i>
1.1	General Notices	<i>p. 4</i>
1.2	Safety precautions	<i>p. 4</i>
1.3	Unit description	<i>p. 5</i>
1.4	Safety and adjustment devices	<i>p. 5</i>
1.5	Identification	<i>p. 5</i>
1.6	Layout	<i>p. 5</i>
1.7	Technical specifications	<i>p. 6</i>
1.8	Cooling circuit	<i>p. 6</i>
<b>2</b>	<b>INSTALLATION</b>	<i>p. 7</i>
2.1	Receiving the product	<i>p. 7</i>
2.2	Labels positioning	<i>p. 7</i>
2.3	Dimensions and weight	<i>p. 7</i>
2.4	Storage	<i>p. 8</i>
2.5	Handling and removal of the packing	<i>p. 8</i>
2.6	Place of installation	<i>p. 8</i>
2.7	Recommended distances	<i>p. 9</i>
2.8	Installation on old systems or systems in need of upgrading	<i>p. 10</i>
2.9	Positioning	<i>p. 10</i>
2.10	Condensate discharge position	<i>p. 12</i>
2.11	Refrigerating connection	<i>p. 12</i>
2.12	Condensate discharge connection	<i>p. 15</i>
2.13	Wiring diagram	<i>p. 16</i>
2.14	Electrical connection	<i>p. 16</i>
2.15	Remote control	<i>p. 17</i>
2.16	Unit display	<i>p. 19</i>
<b>3</b>	<b>COMMISSIONING AND MAINTENANCE</b>	<i>p. 20</i>
3.1	Preparation for first commissioning	<i>p. 20</i>
3.2	Putting into service	<i>p. 21</i>
3.3	Temporary shutdown	<i>p. 21</i>
3.4	Stop for an extended period of time	<i>p. 21</i>
3.5	Ordinary maintenance	<i>p. 22</i>
3.6	Extraordinary maintenance	<i>p. 23</i>
3.7	Alarms	<i>p. 23</i>
<b>4</b>	<b>DISPOSAL</b>	<i>p. 24</i>

The following symbols are used on the product:



The R32 refrigerant gas is slightly inflammable and odourless. Avoid proximity to sources of ignition in continuous operation (open flames, gas household appliances, electric stoves, lit cigarettes, etc).



For more information, see the installation and technical service instructions.



Before performing maintenance and service tasks, read the installation and technical service instructions.



Before the installation, read the installation and technical service instructions.

The following symbols are used in this publication:















**WARNING** = actions requiring special care and appropriate training.





**DO NOT** = actions that **MUST ON NO ACCOUNT** be carried out.


## 1 GENERAL INFORMATION

### 1.1 General Notices

-  When you get the product, check immediately that the contents are all present and undamaged. Contact the dealer **RIELLO** if you notice any problems.
-  The product's installation must be carried out by an authorised company that will issue a declaration of the installation's conformity to the product's owner once the work has been completed, indicating that the work has been carried out in accordance with the standards of good practice, current National and Local regulations, and the indications provided by **RIELLO** in the instruction booklet accompanying the device.
-  The R32 refrigerant gas is slightly inflammable and odourless. Carefully read the safety data sheet available from the dealer and see table "Minimum floor area" *p. 9*.
-  The product must be used for its intended purpose, as stated by **RIELLO** for which it has been expressly manufactured. **RIELLO** shall bear no responsibility, whether of a contractual or non-contractual nature, for any damage caused to people, animals, or property due to incorrect installation, adjustments, or maintenance, or improper use.
-  Suitable clothing, instrumentation, and accident-prevention devices must be utilized during the installation and/or maintenance operations. **RIELLO** shall bear no responsibility for any failure to comply with current safety and accident-prevention regulations.
-  During installation and/or service operations, keep the area around the unit tidy and clean.
-  Comply with the legislation in force on the country of deployment with regard to the use and disposal of packaging, of cleaning and maintenance products and for the management of the unit's decommissioning.
-  Any repair and maintenance interventions must be carried out by **RIELLO** Technical Support Service, in accordance with the provisions contained in this publication. Do not modify or tamper with the unit as dangerous situations may arise and the unit manufacturer will not be liable for any damage caused.
-  In the event of any functional anomalies or fluid leaks, set the system's main switch to its "off" position. Promptly contact your local **RIELLO** Technical Support Service, and do not perform any interventions upon the device on your own.
-  The units contain refrigerant gas: operate carefully so as to avoid damaging the gas circuit and the fin bank.
-  Any gas leaks indoors can generate toxic gases if they come into contact with naked flames or high temperature bodies, in case of leaks, please air the rooms thoroughly.
-  Do not place any inflammable object (spray cans) within a 1 metre radius from the air expulsion.









 According to EU Regulation no. 517/2014 regarding certain fluorinated greenhouse gases, the total amount of refrigerant contained within the installed system must be indicated. This information can be found on the unit technical data plate.

 This unit contains fluorinated greenhouse gases covered by the Kyoto protocol. Maintenance and disposal activities must be carried out exclusively by skilled personnel.

 This booklet is an integral part of the device, and must therefore be carefully preserved, and must ALWAYS accompany it, even in the event that it is sold to another Owner or User, or is transferred to another system. If it is damaged or lost, another copy can be requested to **RIELLO** Technical Support Service in your Area.

### 1.2 Safety precautions

It should be noted that the use of products that utilize electric energy requires certain essential safety regulations to be respected, including the following:

-  Do not allow children or unassisted disabled people to use the unit.
-  Do not touch the unit while barefoot and/or partially wet.
-  Do not spray or throw water directly on the unit.
-  It is strictly forbidden to touch the coil fins, the moving parts, to place any body parts between them, or to insert pointy objects into the grilles.
-  It is forbidden to perform any technical interventions or cleaning operations before having disconnected the device from its electrical power supply, by setting the system's main switch to its "OFF" position.
-  It is forbidden to modify the safety or regulation devices without the authorisation of the manufacturer.
-  Do not pull, detach or twist the electrical wires coming out of the unit, even when the unit is disconnected from the power grid.
-  The packing material must not be disposed of in the surrounding environment and must be kept out of children reach, as it can be dangerous. It must be disposed of according to the regulations in force.

### 1.3 Unit description

**RIELLO AMW P** is an indoor unit for wall installation, suitable for use in residential and small business premises in combination with the outdoor unit. The multiple-speed fan DC motor improves performance and sound comfort.

Control, regulation and programming of the unit are carried out by means of the infra-red remote control, whose functions and use are detailed in the user manual.

The R32 refrigerant allows high yields, thus placing **RIELLO AMW P** among the most efficient devices on the market.

### 1.4 Safety and adjustment devices

The device safety and setting are achieved thanks to:


- heat exchanger temperature sensor transmitting the detected value to the control panel, which is triggered in case of abnormal temperature with regard to the operating mode
- room air temperature sensor transmitting the detected value to the control panel in order to control the operation of the outdoor unit and regulate the room temperature

**A** Safety device replacement must be carried out by **RIELLO** Technical Support Service, using only original components. Please refer to the spare parts catalogue.

**E** IT IS FORBIDDEN to operate the device with faulty safety systems.

### 1.5 Identification

The unit can be identified through the technical data plate:

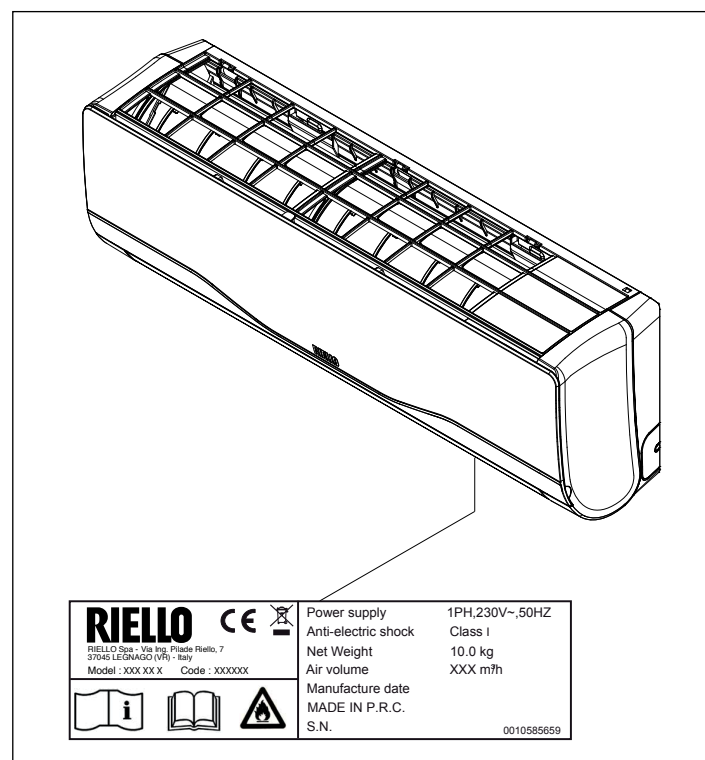


#### Technical data plate

Contains the device's technical and performance data.

**A** The tampering, removal, or absence of the identification plates will not allow the product to be properly identified by its serial number.

### 1.6 Layout

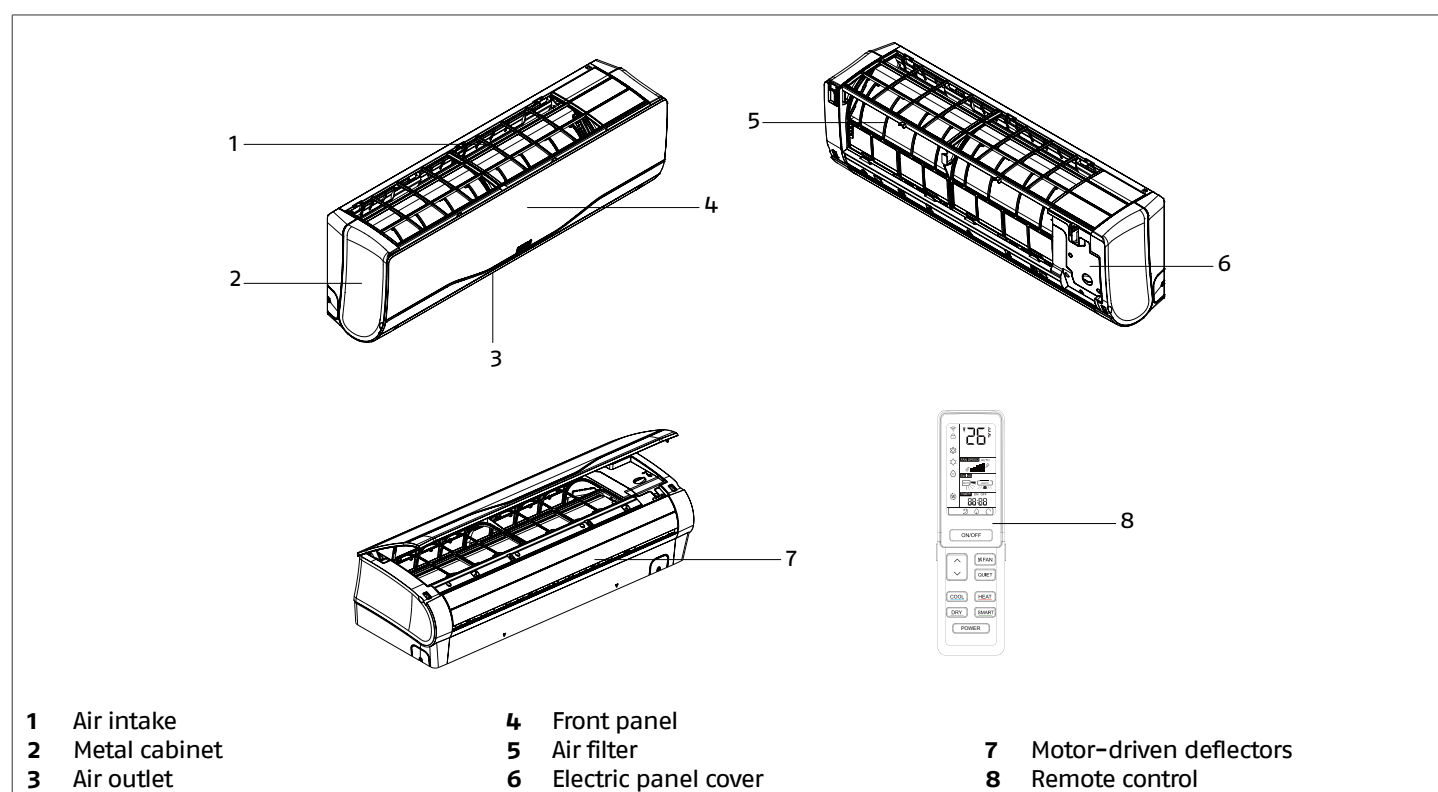


## 1.7 Technical specifications

Model	20	25	35	50	70	
Electrical characteristics						
Power supply	230/1/50					V/Ph/Hz
Protection factor	IP20					IP
Fan						
Quantity	1	1	1	1	1	no.
Nominal power input	0,03	0,03	0,03	0,04	0,05	kW
Nominal current consumption	0,15	0,15	0,15	0,25	0,35	A
Maximum air flow	600	600	650	900	1100	m³/h
Medium air flow	500	500	530	750	900	m³/h
Minimum air flow	400	400	400	600	700	m³/h
Superminimum air flow	300	300	300	500	600	m³/h
Maximum speed	1100	1100	1200	1050	1100	rpm
Medium speed	950	950	1000	900	950	rpm
Minimum speed	800	800	800	750	800	rpm
Super minimum speed	650	650	650	620	700	rpm
Cooling sound levels						
Superminimum sound pressure <sup>(i)</sup>	20	20	22	28	30	dB(A)
Minimum sound pressure <sup>(i)</sup>	25	25	29	33	37	dB(A)
Medium sound pressure <sup>(i)</sup>	30	30	33	37	43	dB(A)
Maximum sound pressure <sup>(i)</sup>	35	35	38	41	47	dB(A)
Maximum sound power	54	54	56	57	60	dB(A)
Heating sound levels						
Superminimum sound pressure <sup>(i)</sup>	21	21	23	29	31	dB(A)
Minimum sound pressure <sup>(i)</sup>	26	26	30	34	38	dB(A)
Medium sound pressure <sup>(i)</sup>	31	31	34	38	44	dB(A)
Maximum sound pressure <sup>(i)</sup>	36	36	39	42	48	dB(A)
Maximum sound power	55	55	57	58	61	dB(A)

(1) Free field value at 1 meter unit face, in compliance with GB / T7725-2004

**A** Performance data are indicated in the matching outdoor unit manual.

## 1.8 Cooling circuit

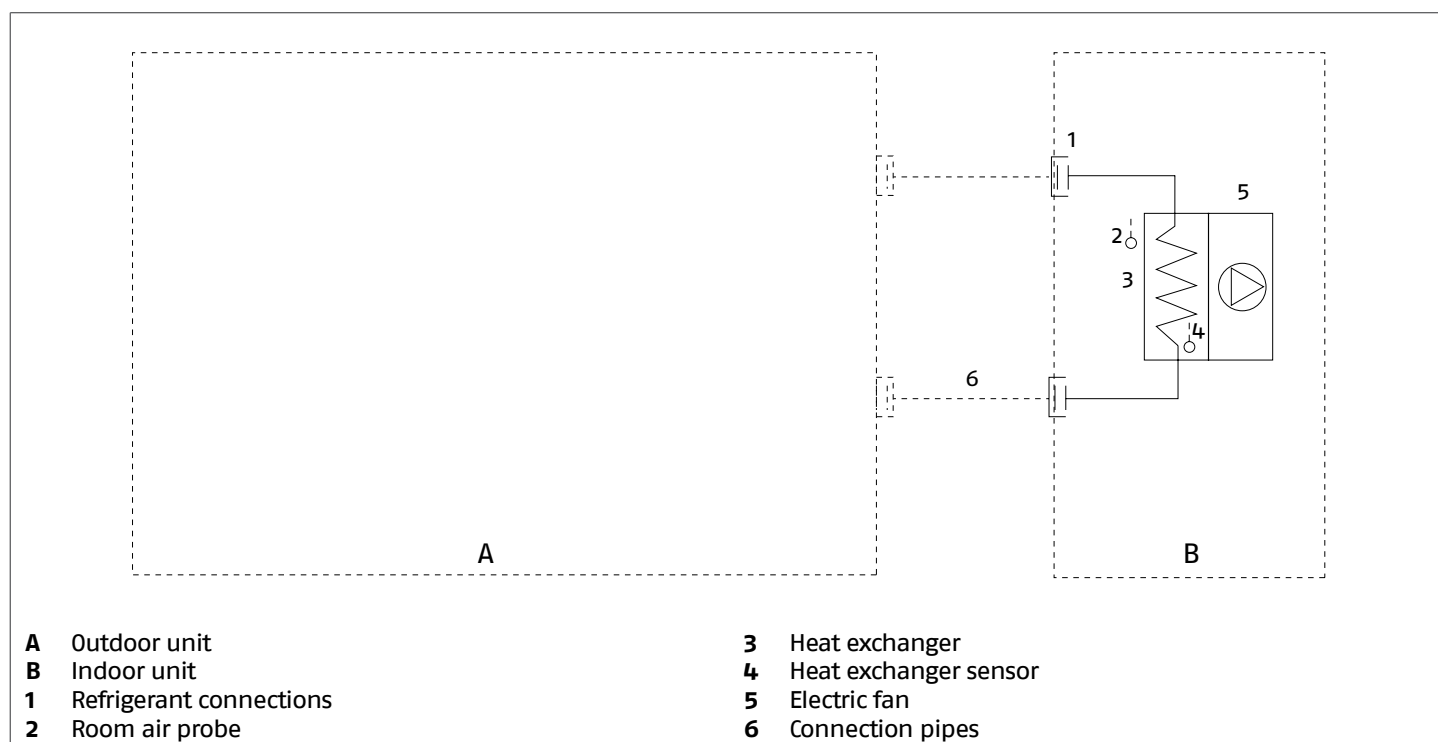

## 2 INSTALLATION

- A** Ensure that the installation and operation sites are properly ventilated in order to disperse any gas leaks that could cause flames during activities with intense heat generation and high temperature.
- A** Avoid proximity to sources of ignition in continuous operation (open flames, gas household appliances, electric stoves, lit cigarettes, etc).
- A** Use equipment suitable for the system refrigerant.
- A** Use an electronic leak finder properly calibrated for the system refrigerant.
- ⊖** It is forbidden to use leak finders with halogen lamps.

### 2.1 Receiving the product

**RIELLO AMW P** is supplied in a single package, protected by a cardboard packaging, polystyrene elements and a polyethylene film. The following items can be found inside the packaging:

Document envelope:

- Instruction's book for the installer and for the Technical Service in Italian
- Instruction's book for the installer and for the Technical Service in English
- user instruction booklet in Italian
- user instruction booklet in English
- Warranty/Spare parts labels.
- contact sheets


It is also supplied as kit:

- remote control
- no. 2 AAA batteries
- support for remote control
- no. 2 screws for remote control support
- no. 1 antibacterial filter (green)
- no. 1 photocatalytic filter (black)
- no. 1 anti-formaldehyde filter (cardboard packaging)
- no. 10 screws and anchor bolts
- flare nut for liquid pipe
- flare nut for gas pipe
- protective insert for gas passageway hole
- condensate discharge pipe


**A** The Instruction book comes with the equipment and it should be taken, read and kept carefully.

**A** The document envelope must be kept in a safe place. Any duplicate must be requested from Riello S.p.A. which reserves to charge the cost.


### 2.2 Labels positioning

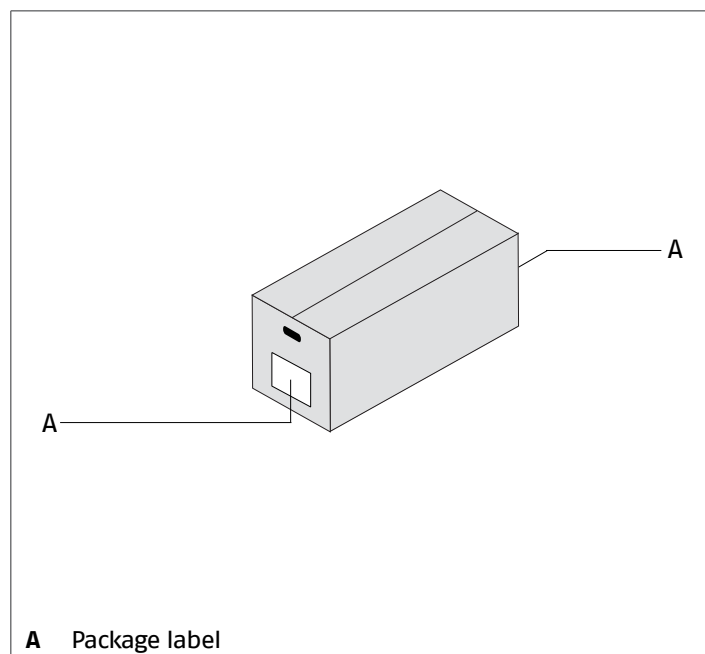

### 2.3 Dimensions and weight

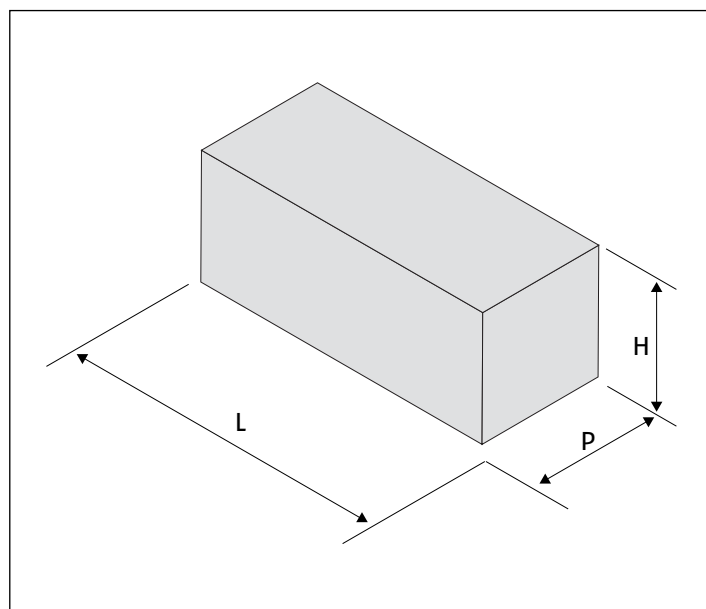

Model	20	25	35	50	70	
<b>Packaging dimensions</b>						
H	355	355	355	403	418	mm
L	954	954	954	1085	1206	mm
P	279	279	279	329	342	mm
Weight	12,2	12,2	12,2	16,0	19,6	kg

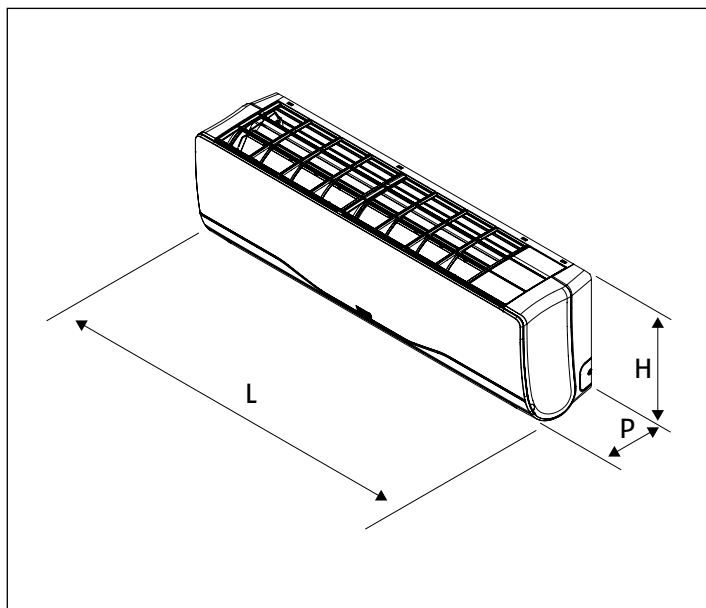

Model	20	25	35	50	70	
<b>Product dimensions</b>						
H	280	280	280	322	336	mm
L	855	855	855	997	1115	mm
P	200	200	200	230	243	mm
Weight	10,0	10,0	10,0	13,0	16,0	kg



## 2.4 Storage

**⚠** The product must be stored according to the regulations in force.

## 2.5 Handling and removal of the packing

**⚠** Before unpacking, personal protective clothing should be worn and used transport means and tools suitable for the size and weight of the unit.

The product can be handled manually.

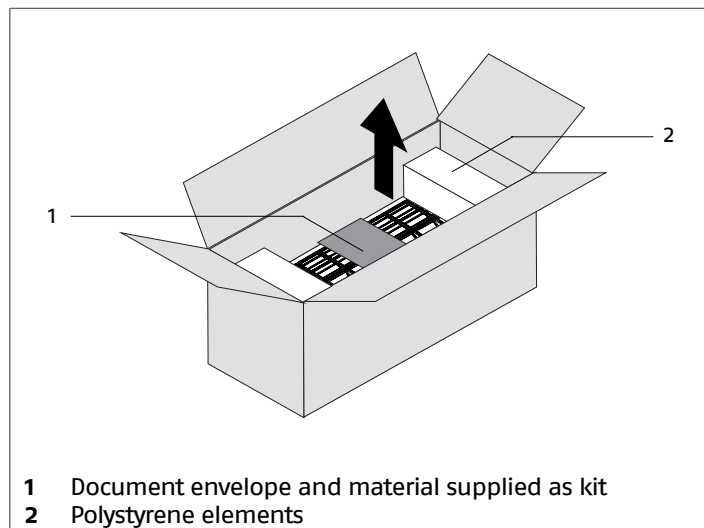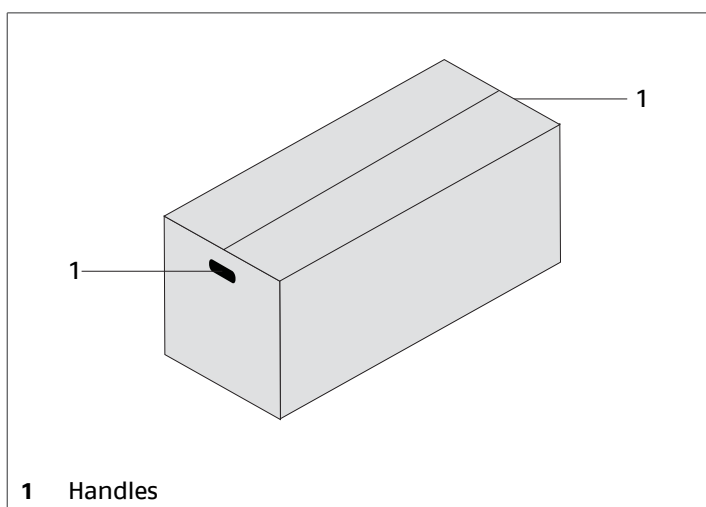

- 1 Document envelope and material supplied as kit
- 2 Polystyrene elements

Follow the below instructions for packing removal and product handling:

- transport the equipment in the installation place
- open the cardboard packaging
- remove the document envelope
- take out the device by lifting it up
- remove the polystyrene elements
- remove the polyethylene bag

**⚠** In manual operation it is compulsory to respect always the maximum weight per person provided for by the national laws and standards.

**⚠** Handle with care

**⚠** The packing material must not be disposed of in the surrounding environment and must be kept out of children reach, as it can be dangerous. It must be disposed of according to the regulations in force.

## 2.6 Place of installation

The location of **RIELLO AMW P** devices must be determined by the system's designer or by another competent person, and must take into account the technical requirements, as well as any current local regulations.

**RIELLO AMW P** is designed for indoor wall installation:

- install the indoor unit in the room to be air-conditioned
- its position must allow for the circulation of treated air in the whole room
- consider an area where there are no obstacles to the regular air delivery and intake
- The R32 refrigerant gas is slightly inflammable and odourless. Carefully read the safety data sheet available from the dealer.


**⚠** The product uses R32 refrigerant gas and must be installed in rooms with a minimum floor area, as indicated in the following table, depending on the total refrigerant charge of the system (given by the sum of the factory charge of the outdoor unit and, if applicable, the additional charge).

**⚠** The amount of refrigerant charged inside the unit refer to the **INSTALLATION AND TECHNICAL SERVICE INSTRUCTIONS** of outdoor unit used.



# Minimum floor area for indoor unit (m²)

Gas charge kg	Indoor unit installation			
	Floor	Window	Wall	Ceiling
1,10	No requirements			
1,224				
1,225	12,88	4,64	1,43	0,96
1,30	14,50	5,22	1,61	1,08
1,90	30,98	11,15	3,44	2,30
2,00	34,32	12,36	3,81	2,55
2,30	45,39	16,34	5,04	3,38
2,60	58,00	20,88	6,44	4,31
3,00	77,22	27,80	8,58	5,74
3,50	105,11	37,84	11,68	7,82

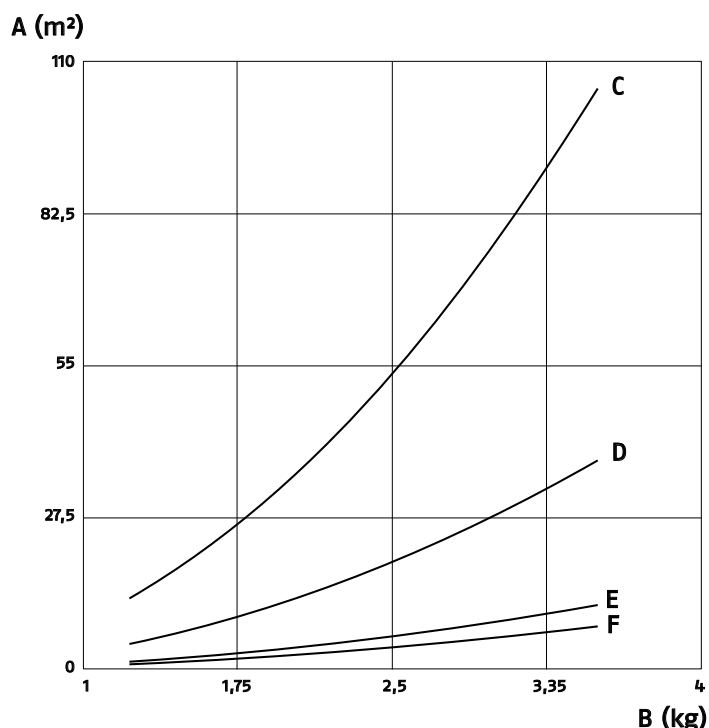

**A** Minimum floor area  
**B** Refrigerant charge  
**C** Floor

**D** Window  
**E** Wall  
**F** Ceiling

## Check that:

- the support wall is able to support the device weight
- the wall section does not feature building supporting elements, pipes or power lines
- the supplied wall plugs are suitable for the chosen support wall

## Avoid:


- installing the device in hallways or passageways
- any obstacles or barriers that will cause the expelled air to recirculate
- locations with aggressive or explosive atmospheres or with inflammable fluids
- direct exposure to sunlight and proximity to heat sources
- humid locations or positions where the unit could come into contact with water
- environment containing oil vapours
- locations with high frequency contamination



Avoid placing the unit less than 1 metre away from radio and video systems.

## 2.7 Recommended distances

The distances for the device installation and maintenance are shown in the figure. The indicated spaces are necessary in order to prevent the airflow from being blocked, as well as to allow normal cleaning and maintenance operations to be carried out.

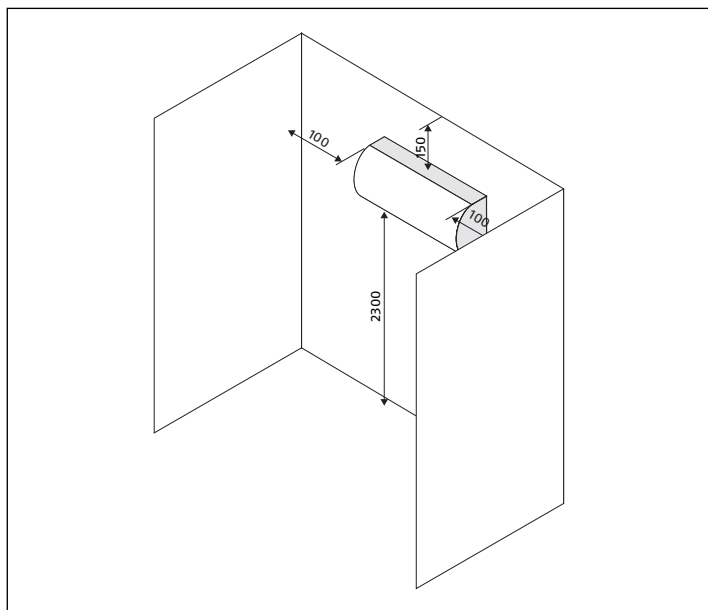

## 2.8 Installation on old systems or systems in need of upgrading

When **RIELLO AMW P** is installed on old systems or systems in need of upgrading, it is recommended to ensure that:

- the electrical system is compliant with the applicable regulations and has been installed by qualified professionals


**⚠** In the event of a replacement, the system must be inspected by the designer or by another competent person, and must be compliant with the technical requirements, as well as the current legislations and regulations.

**⚠** The manufacturer shall bear no responsibility for any damages caused by incorrect system installation.

## 2.9 Positioning


**RIELLO AMW P** devices are supplied with a metallic support to fix them to the wall:

### MODEL 50

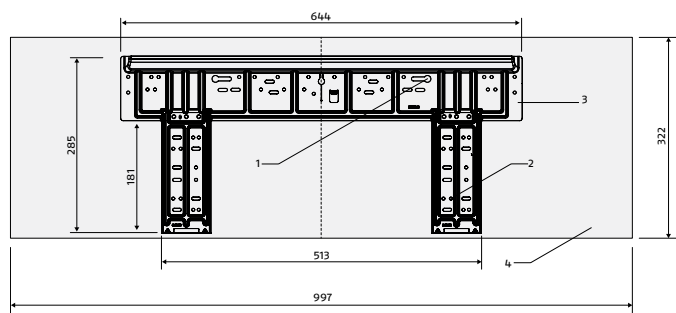

- 1 Fastening slots
- 2 Fastening holes
- 3 Metal support
- 4 Equipment overall dimensions


### MODEL 70

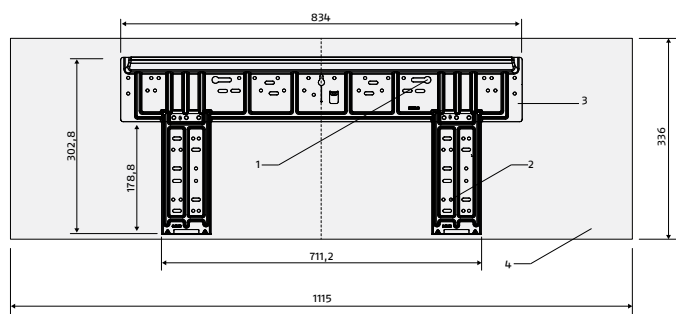

- 1 Fastening slots
- 2 Fastening holes
- 3 Metal support
- 4 Equipment overall dimensions

**⚠** Place the metallic support on a level surface that is capable of supporting its weight

**Fixing the metallic support to the wall:**

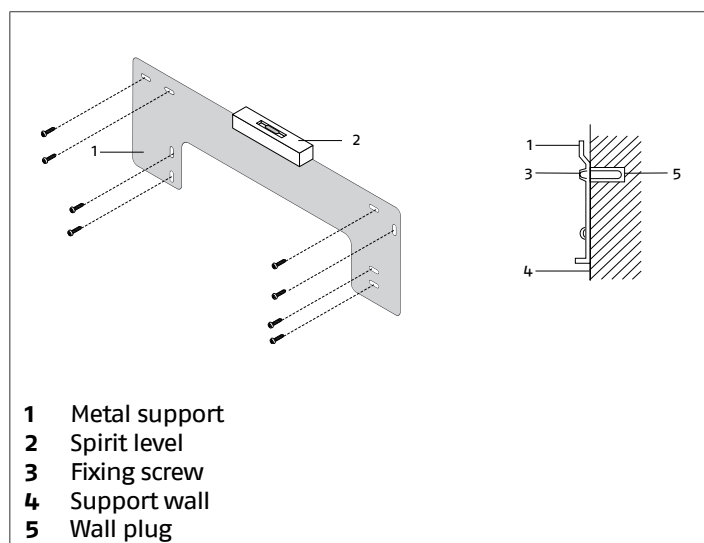


- remove the metallic support from the unit rear side
- mark the position of the fixing holes using the metallic support as a template

- drill holes in the marked positions
- fix the metallic support with the screws and the wall plugs

**⚠** Check that the installation is horizontal using a water level.

#### Drilling into the wall:

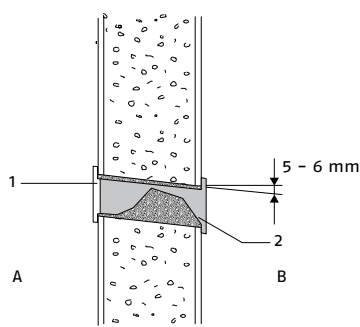


- A** Inner side  
**B** Outer side  
**1** Hole protective insert, supplied  
**2** Plastic tube

- drill the through hole into the wall
- keep a downward inclination toward the external side
- insert a plastic tube in the hole in order to protect the connections
- introduce the supplied hole protection insert on the internal side of the wall
- seal with stucco

**⚠** In case of connections on the rear side of the unit, refer to chapter "Refrigerating connection" p. 12 for the position of the hole.

#### Leak test:

The unit is supplied as pre-charged with nitrogen.

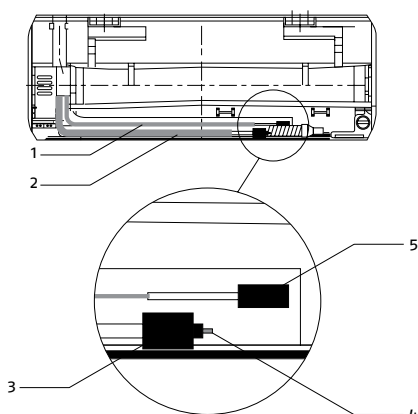


- 1** Liquid pipe  
**2** Gas pipe  
**3** Gas connection plug  
**4** Pressure presence indicator  
**5** Fluid connection plug

- ensure that pressure presence indicator is protruding
- partially loosen one fitting plug
- check for nitrogen leaks to verify that there is pressure inside the device

**⚠** If pressure indicator is not protruding, do not continue installation and check for leakage inside the unit.

**⚠** Contact **RIELLO** Technical Support Service.


#### Device preparation:

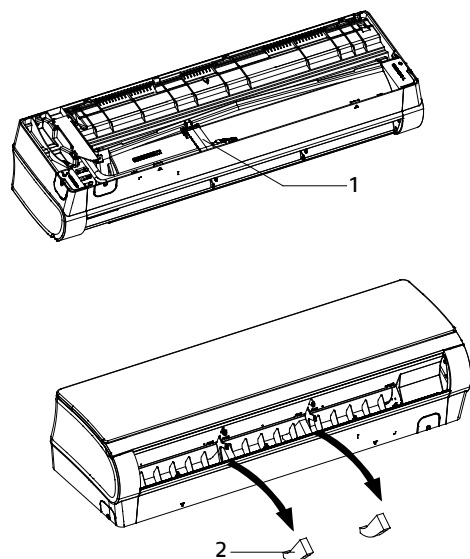

- 1** Pipe locking bracket  
**2** Motor-driven deflector locking insert


- remove the motor-driven deflector locking inserts
- lift the pipe locking bracket

#### Assembly:

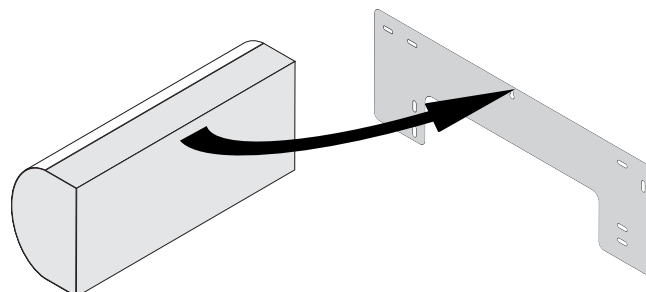

- fasten the unit to the upper part of the metallic support
- check that the unit is correctly hooked by moving it to the left and to the right
- place the unit in the middle of the metallic support

To ease the connections:

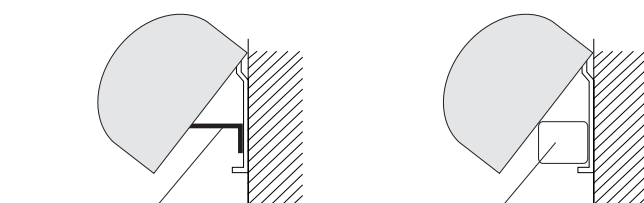


- 1** Pipe locking bracket  
**2** Packaging polystyrene protection

- use the pipe locking bracket to space the unit lower side from the metallic support

If there is a connection box:

- use one of the polystyrene protections from the packaging

After performing the connections:

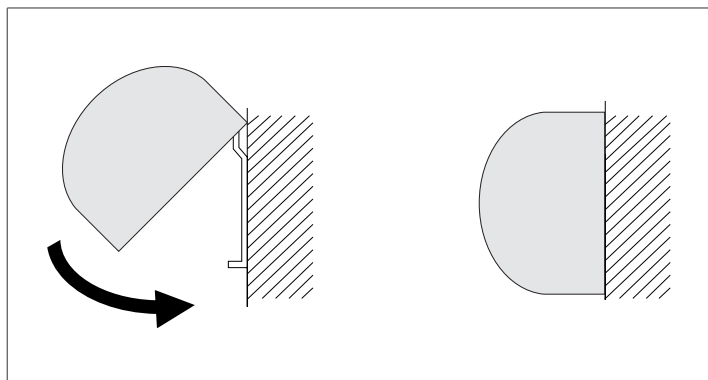


- hook the unit lower part
- by pushing it perpendicularly toward the metallic support

## 2.10 Condensate discharge position


The hole for the condensate drain is provided as standard on the left side looking back on the unit.

It is possible to move it to the right-hand side. To do so, proceed as follows:

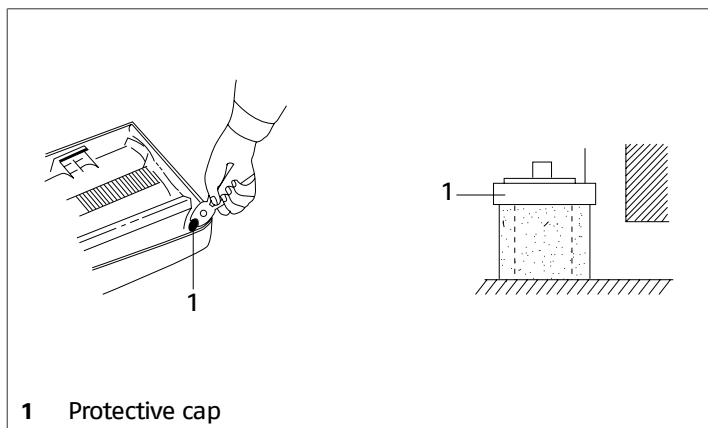

1 Protective cap

- remove the protection plug from the prearranged connection on the right-hand side

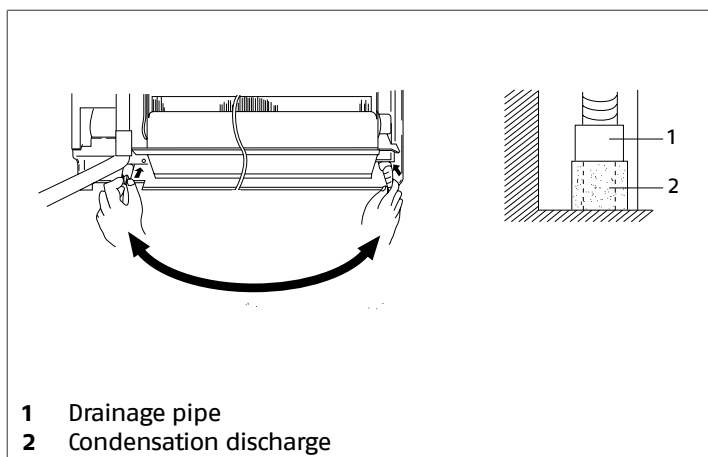


1 Drainage pipe  
2 Condensation discharge

- remove the drainage pipe on the left-hand side and place it on the right-hand side
- fit the protection plug on the spare hole on the left-hand

side

## 2.11 Refrigerating connection


The dimensions and positions of **RIELLO AMW P** cooling connections are shown hereunder.

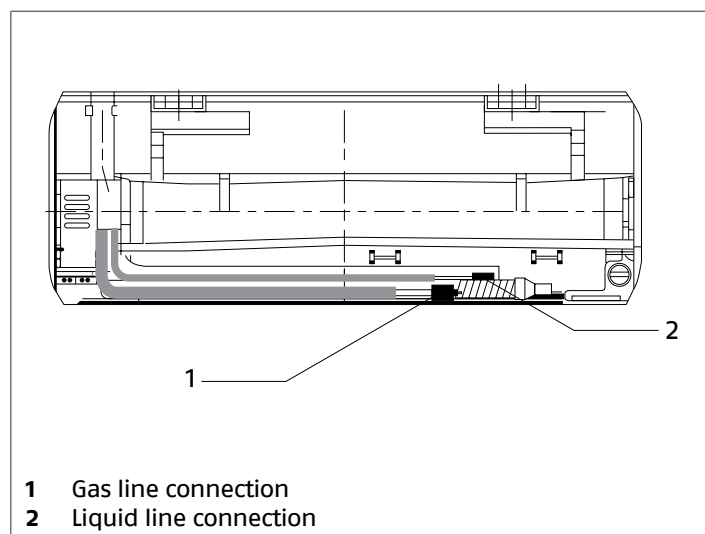

1 Gas line connection  
2 Liquid line connection

Model	20	25	35	50	70	
Connections						
Liquid line connection	1/4"					Inches
Gas line connection	3/8"			1/2"		Inches
Liquid line connection	6,35					mm
Gas line connection	9,52			12,7		mm

Connection outlet directions are indicated below.

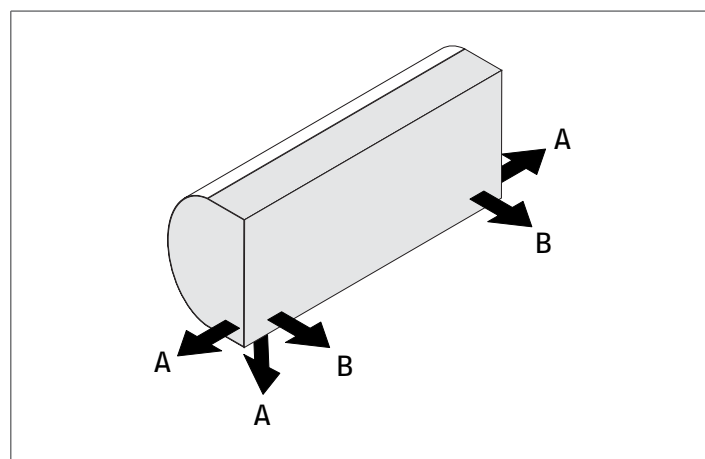


In case of connection in directions A:


- remove the relevant pre-trimmed part on the cover cabinet

In case of connection in directions B:


MODEL 25 - 35

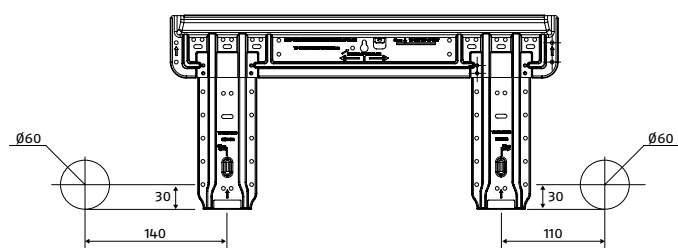


MODEL 50

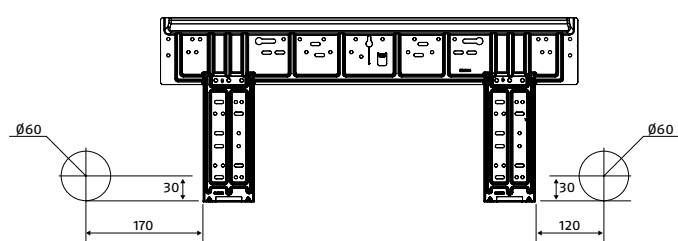

MODEL 70

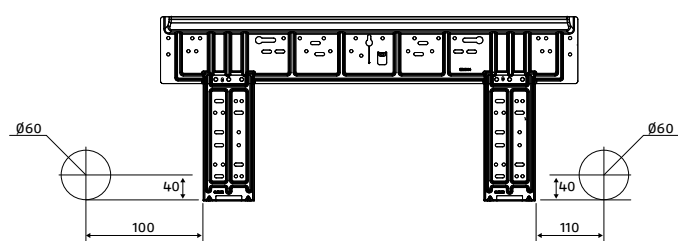

— mark the through hole as shown in the illustration

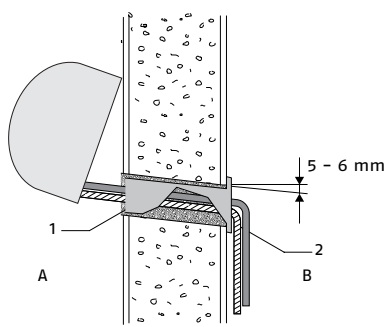

- A** Inner side
- B** Outer side
- 1** Plastic tube
- 2** Connections

— drill the through hole into the wall

- keep a downward inclination toward the external side
- insert a plastic tube in the hole in order to protect the connections
- introduce the supplied hole protection insert on the internal side of the wall
- seal with stucco

**⚠** For indications concerning distances and differences in height of connection pipes, refer to the matching outdoor unit manual.

**⚠** Use clean hoses. Make sure the inside is free of dust, residues, water.

**⚠** Avoid the entry of uncondensable gases (air) in the circuit, otherwise, with the unit in operation, high pressures with the risk of damages might ensue.

**⚠** Use copper pipes for cooling systems.


**⊖** It is forbidden to use second-hand cooling lines since their flare connection seal is not guaranteed.

**⊖** It is forbidden to use pre-charged cooling lines.


**⊖** It is forbidden to carry out welding operations with refrigerant inside the cooling circuit. If necessary, the refrigerant must be recovered and the circuit must be cleaned with nitrogen without oxygen.

## Connections


- position the connecting pipes

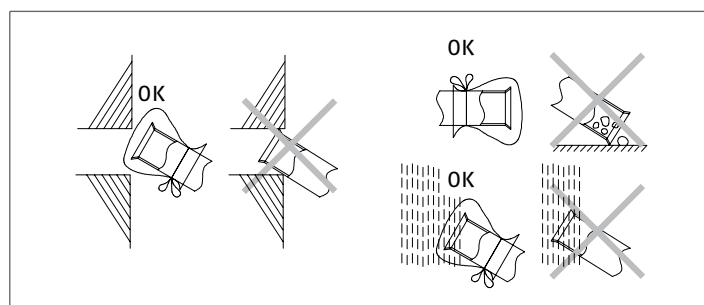


**⚠** Before threading the lines through the hole in the wall, close the lines ends.

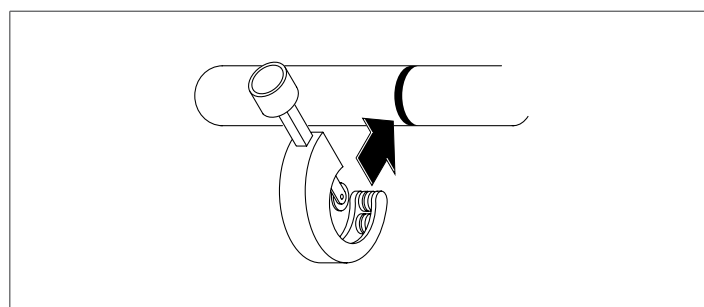

- cut the pipe end square using a pipe cutter
- remove burrs keeping the cut edge facing down
- remove the flare nut on the unit connection
- insert it into the connection pipe
- flare the tube

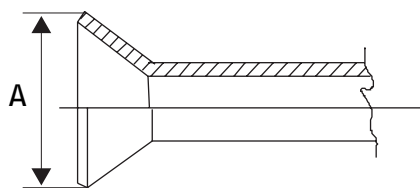


Pipe Ø		A
mm	inches	mm
6,35	1/4	9,1
9,52	3/8	13,2
12,70	1/2	16,6
15,88	5/8	19,7

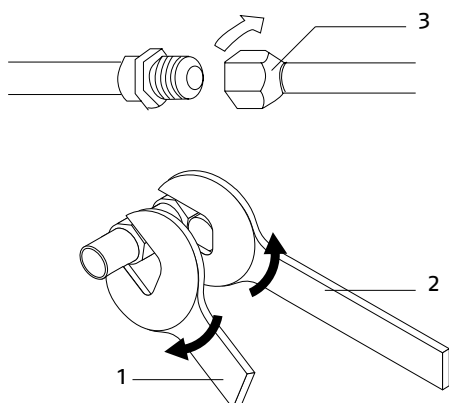

- 1 Key
- 2 Torque wrench
- 3 Flare nut

Pipe Ø		Tightening torque
mm	inches	Nm
6,35	1/4	18
9,52	3/8	42
12,70	1/2	55
15,88	5/8	60

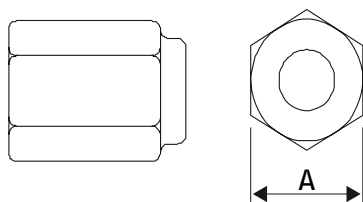

Pipe Ø		A
mm	inches	mm
6,35	1/4	17
9,52	3/8	22
12,70	1/2	26
15,88	5/8	29

- bring line ends with flare connection close to their coupling on the unit
- manually rotate the flare nuts by 3 - 4 turns
- tighten the connections using a spanner and a counter spanner

**⚠** Use a torque wrench to tighten so as to prevent damage to flare nuts and gas leaks.

**⚠** Use equipment suitable for the system refrigerant.


**⚠** Avoid using the refrigerant oil on the external part of the flaring.

**⚠** Avoid proximity to sources of ignition in continuous operation (open flames, gas household appliances, electric stoves, etc.).

**⚠** As for circuit leak and pneumatic vacuum tests, refer to the matching outdoor unit instruction booklet for the installer.

## Pipe insulation

Connection pipes must be thermally insulated to prevent dispersions of heat or formation of condensate.

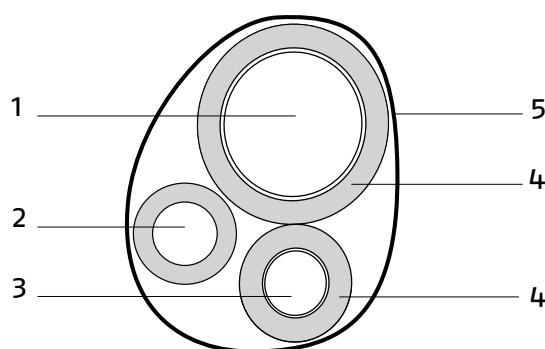

- 1 Gas pipe
- 2 Condensation discharge
- 3 Liquid pipe
- 4 Heat insulation
- 5 Adhesive tape

- insulate the liquid and gas pipes separately
- use insulating material that is thicker than 15 mm
- ensure that the insulating material adheres to the pipe without gaps
- fix using adhesive tape

**⚠** Do not tighten the adhesive tape too much, so as to avoid damaging the insulation.

**⚠** Avoid partial insulation of the pipes.

**⚠** In case of use with outdoor temperature above 30 °C and relative humidity above 80%, increase wall thickness up to 20 mm.

For gas pipes:

- ensure that the material used resists to temperatures up to 120°C


For liquid pipes:

- ensure that the material used resists to temperatures up


to 70°C

## 2.12 Condensate discharge connection


**RIELLO AMW P** is provided with a tray that collects condensate generated during the cooling operation, which must be conveyed into a suitable place for discharge. Sizes and position of the discharge pipe are indicated below.

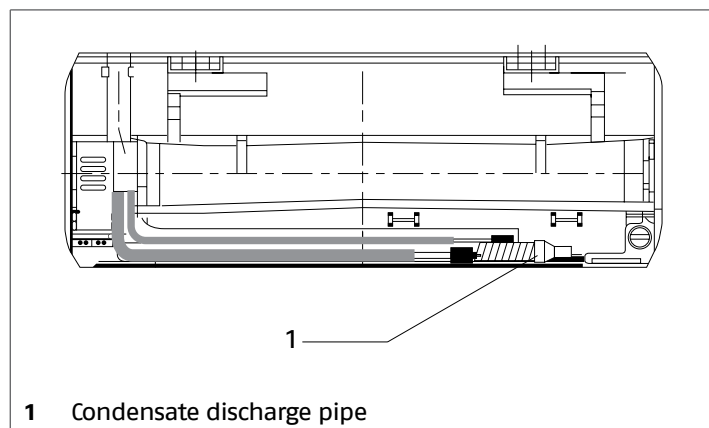

Model	20	25	35	50	70	
<b>Connections</b>						
Condensate discharge attachment Ø	16					mm

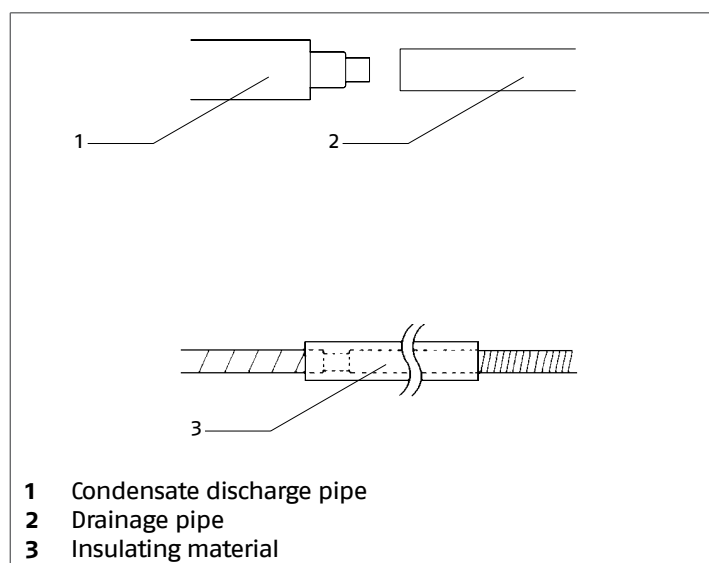


- connect a rubber drainage pipe
- direct it toward a suitable place for discharge
- insulate the joints

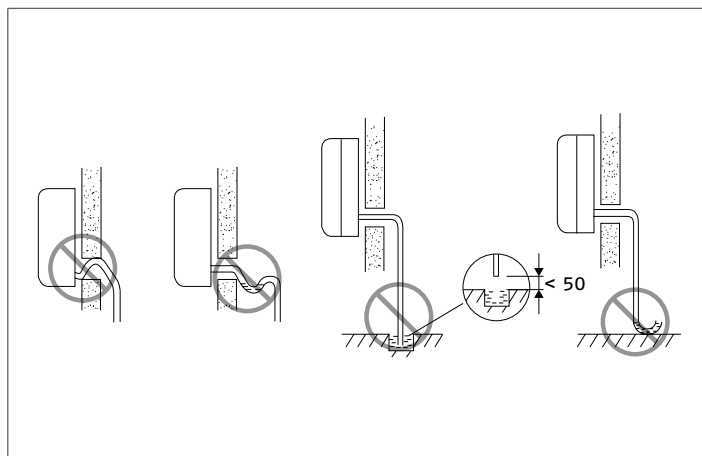


- ⚠ The discharge system must feature a suitable syphon in order to prevent air from entering the vacuum system. The syphon also prevents odours and insects from entering the system.
- ⚠ The syphon must feature a plug in its lower part or must otherwise allow for a quick disassembly for cleaning purposes.
- ⚠ Ensure that all joints are properly sealed so as to prevent water leaks.
- ⚠ The drainage pipe must be insulated for sections running inside houses in order to prevent condensate formation on its surface.

### Drainage check:

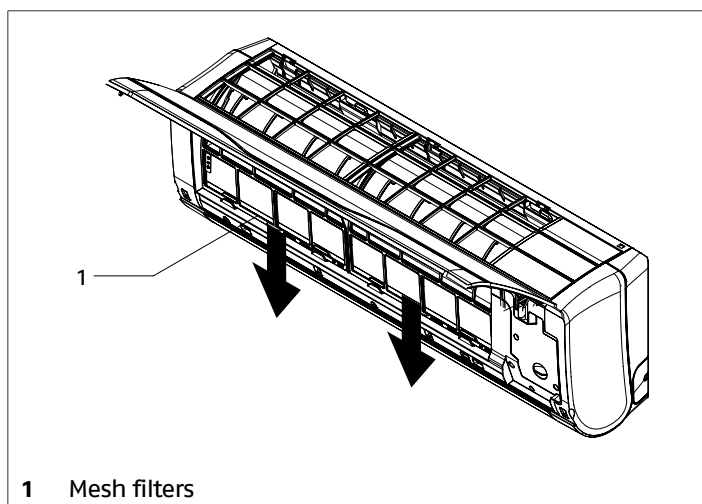


- open the front panel
- take out the mesh filter by grabbing the relevant fins

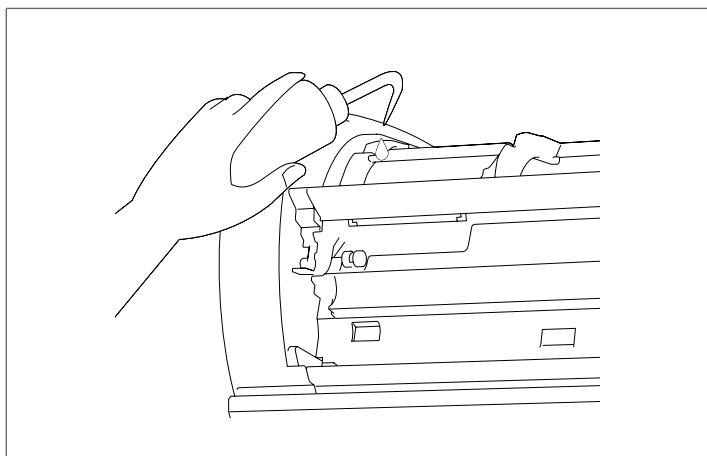


- pour water into the condensate tray
- check that it flows out correctly through the drainage pipe
- reposition the filters
- close the panel

## 2.13 Wiring diagram

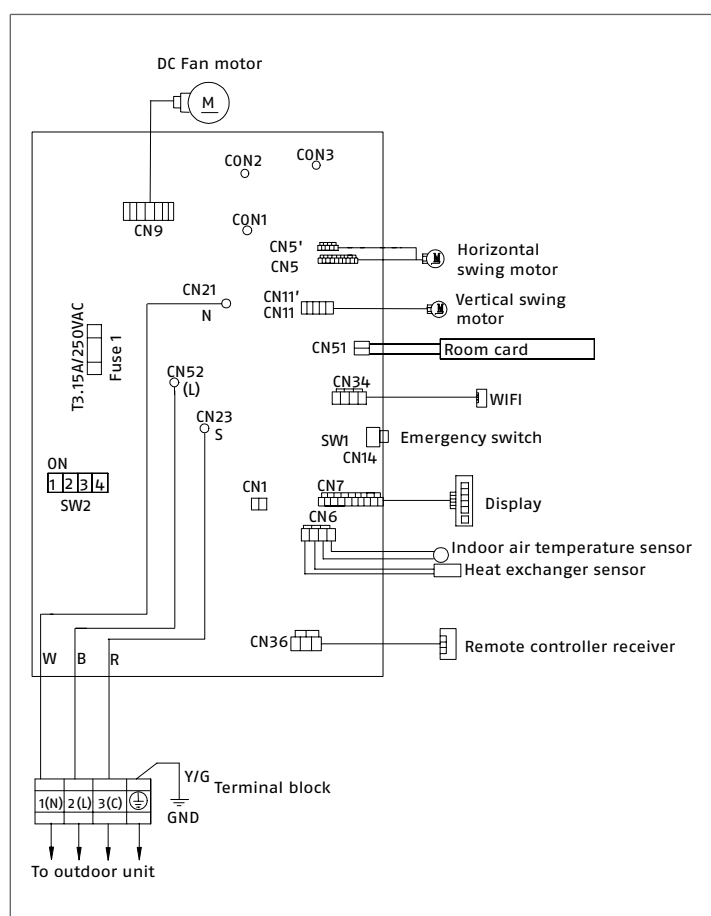


## 2.14 Electrical connection

**AMW P** it leaves the factory completely wired, and only requires a connection to the outdoor unit.

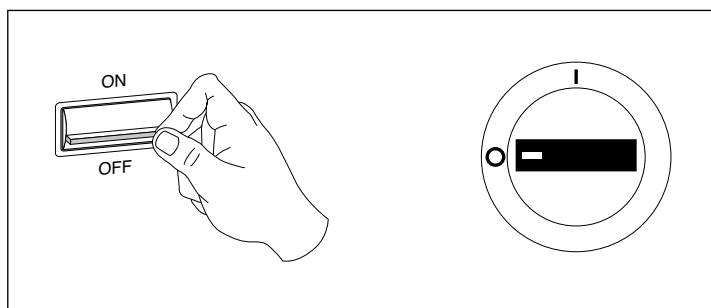

- position the system's main switch in the "OFF" position.
- To access the terminal board:

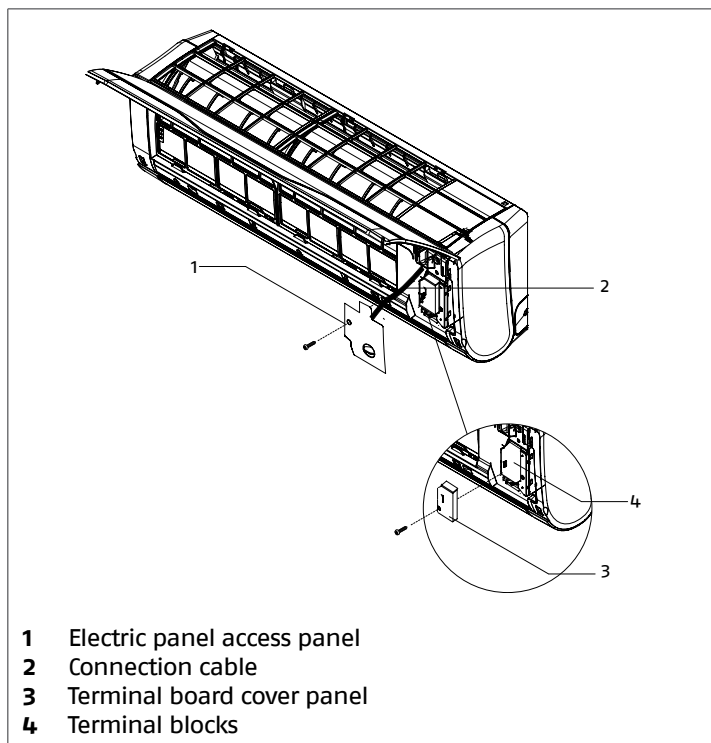


- 1 Electric panel access panel
- 2 Connection cable
- 3 Terminal board cover panel
- 4 Terminal blocks

- lift the front panel
- unscrew the fastening screw
- remove the electric panel access panel


**⚠** The electric panel access panel is wired to the electronic board, so it must not be completely removed. Pay particular attention not to disconnect or tear off the wire.



- unscrew the fastening screws
- remove the terminal board cover panel

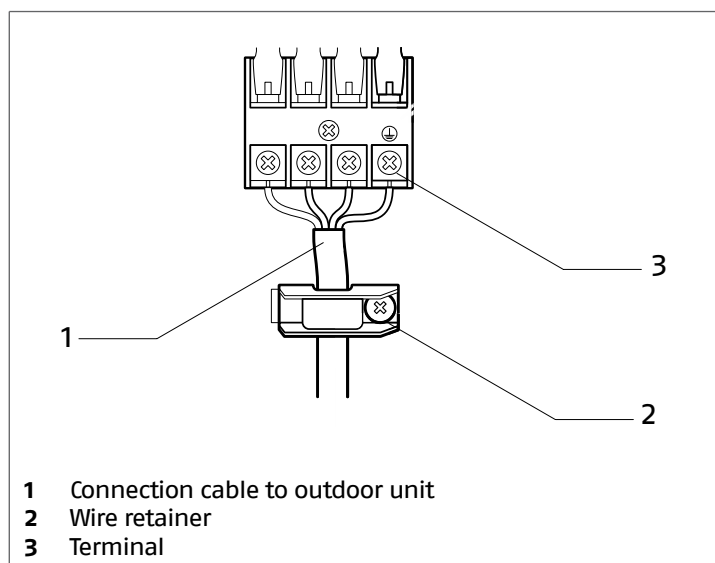

- remove the wire retainer
- make the electric connections according to the diagrams on the installation booklet of the matching outdoor unit

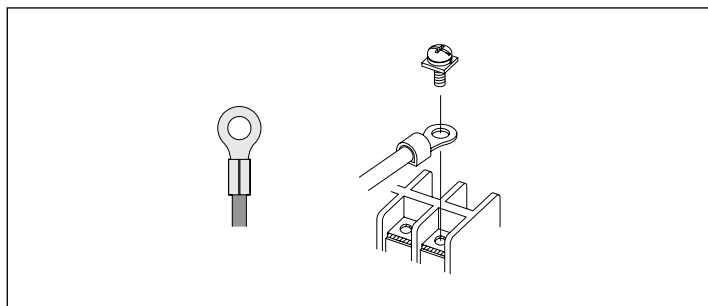

- A** It is compulsory to use ring crimp terminals to connect to the terminal board.

For the sizing of the electrical power cables and safety devices, use the following table:

Model	20	25	35	50	70	
Electrical characteristics						
Power supply	230/1/50					V/Ph/Hz
Power cable	H07RN-F					Type
Power cable	3 x 1,5			3 x 2,5		n. x mm²
Signal cable	1 x 1					n. x mm²

- A** The cable sections specified in the table are minimum requirements. The correct size must be calculated taking into account the actual length, the type of routing and other conditions set by the existing regulations.

- fasten the wires with the wire retainer
- complete the electric connections and refit all components by performing the described operations in reverse order

#### Mandatory items:

- connect the device to a properly functioning earthing system
- for any electrical intervention, always refer to the wiring

diagrams contained within this booklet

- take anti-static precautions in case of weather conditions where humidity is less than 40%

- A** Electric connections shall be made in compliance with national regulations.
- A** Avoid placing the connection cables less than 1 metre away from radio and video systems.
- A** Avoid using mobile phones.
- ⊖** It is forbidden to earth the device together with pipes, lightning conductors or the earthing system of a telephone line. Using an improper earthing system can cause electric shocks.


## 2.15 Remote control

Control, setting and programming operations are carried out with the IR remote control.

The electronics modulates the device operation according to the temperatures detected by the probes inside the indoor and outdoor units.

## Battery insertion

The remote control is powered by two 1.5V AAA batteries that must be inserted into its rear side and protected by a cover. To insert the batteries:

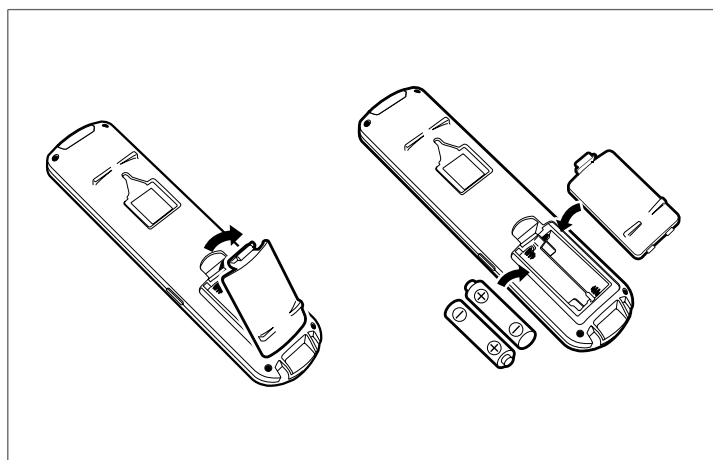


- remove the cover by pressing it down and lifting it up
- insert the batteries respecting the polarities
- put the cover back in place

- A** Two 1.5V AAA batteries are supplied with the unit for its first set-up.

## Function keys

The remote control features a small door in the key area:

## DOOR CLOSED

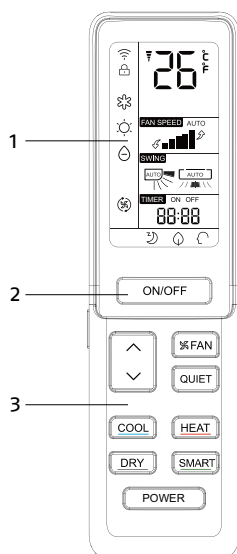

- 1 Display
- 2 On- Off key
- 3 Quick function keys


When the door is closed, you can activate the quick functions, such as choosing the operating mode and setting the desired temperature.

**⚠** Ensure that the door is fully closed. If this is not the case, the external keys will not work.

### Function keys with door closed

	It switches the device on and off
	It increases or decreases the selected parameter value
	Select required ventilation speed: minimum, medium, maximum or automatic
	It activates the Quiet mode
	It activates the Cooling mode
	It activates the Heating mode
	It activates the Dehumidification mode
	It activates the Smart mode.
	It enables the Maximum Power function

## DOOR OPEN

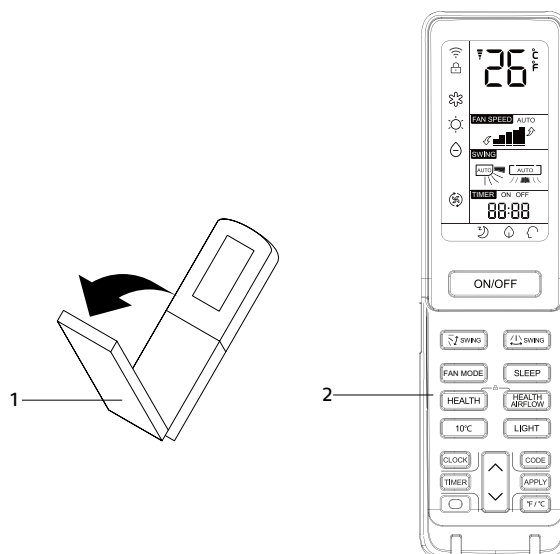

- 1 Door
- 2 Advanced function keys

When the door is open, you can access the advanced functions, e.g. time scheduling and motor-driven deflector settings.


### Function keys with door open

	It activates and deactivates the automatic movement of the horizontal deflector or stops it in a specific position
	It activates and deactivates the automatic movement of the vertical deflector or stops it in a specific position (not available on AMW ST)
	It selects the Ventilation operating mode
	It activates the Sleep function
	Function not available
	It enables the Health Air Flow function
	If pressed at the same time, they lock and unlock the remote control keys
	It activates the Room Anti-Freeze function (not available on AMW ST)
	Switch on or off the unit display
	It gives access to current time change settings
	It gives access to Timer settings
	It increases or decreases the selected parameter value
	It allows to change the remote control transmission channel A - b with the unit
	It confirms settings
	It switches the temperature scale from Celsius to Fahrenheit and vice versa

## Remote control display

The remote control display shows the settings as changed by the

user and the detected weather conditions.  
The display is divided into uniform areas according to function type.

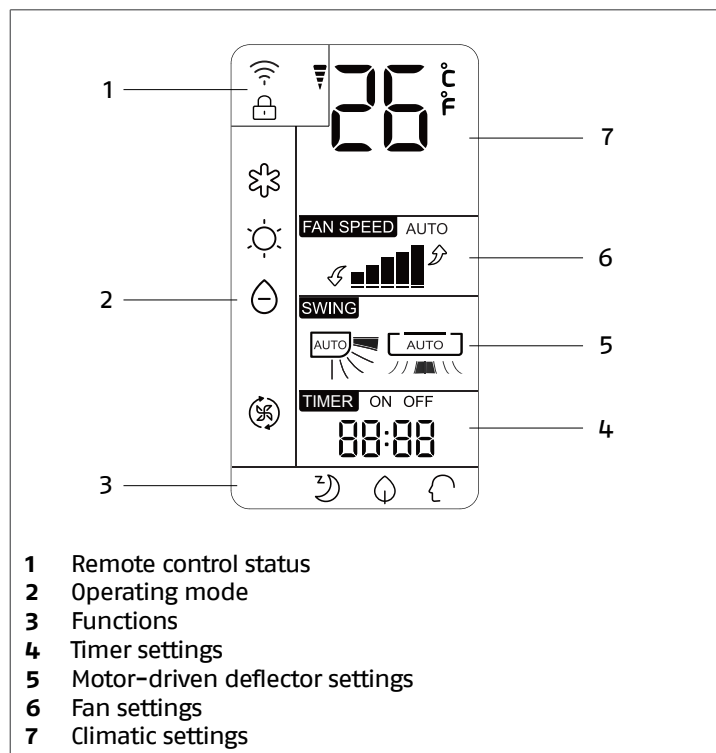

#### Remote control status

- Signal transmission upon pressing the keys
- WiFi connection enabled
- Remote control keys locked

#### Operating mode

- Cooling mode enabled
- Heating mode enabled
- Dehumidification mode enabled
- Ventilation mode enabled

#### Functions

- Sleep function enabled
- Not available
- Smart mode enabled

#### Timer settings

- Timer setting value or current time display
- ON Switch on timer enabled
- OFF Switch off timer enabled

#### Motor-driven deflector settings

- Horizontal deflector position



AUTO

Vertical deflector position (not available on AMW ST)

Deflector automatic operation

#### Fan settings



Fan speed set

AUTO

Automatic speed enabled

#### Climatic settings

26 °C



1. Detected ambient temperature

2. Required temperature when using the button



## 2.16 Unit display

The unit display shows the active functioning mode, the temperature and the alarms, if any.

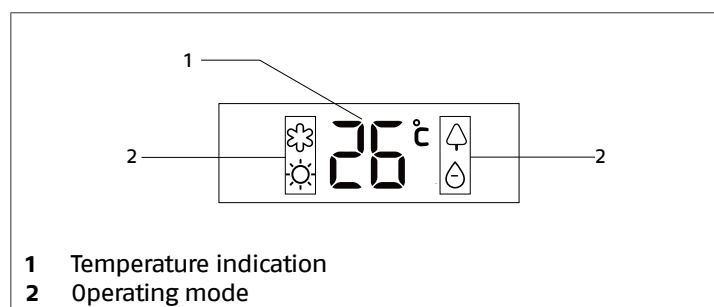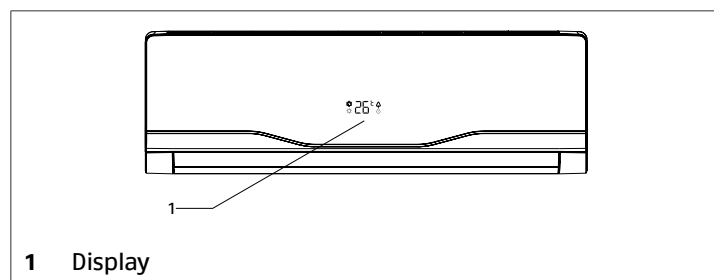

Cooling mode enabled



Heating mode enabled



Not available



Dehumidification mode enabled

26 °C

1. Detected ambient temperature

2. Required temperature when using the button



3. Alarm code

### 3 COMMISSIONING AND MAINTENANCE

#### 3.1 Preparation for first commissioning

Prior to commissioning, it is necessary to check that:

- all the safety conditions have been met
- all distances have been respected
- the electrical connections have been properly completed
- power supply values are correct.
- the earthing has been carried out correctly
- all the connections have been properly tightened

#### Microswitch setting

On the main electronic board there are microswitches to manage some functions.

##### Factory settings

Model	SW2			
	1	2	3	4
20	OFF	ON	OFF	OFF
25	OFF	ON	OFF	OFF
35	OFF	ON	ON	ON
50	OFF	ON	ON	OFF
70	OFF	ON	ON	ON

##### SW2\_1

It selects the transmission channel between the unit and the remote control.

Selectable options are:

OFF = channel "A" (factory setting)

ON = channel "b"

**⚠** The channel must be the same for the unit and the remote control.

**⚠** Do not change such setting to prevent communication interruptions with the remote control.

##### SW2\_2

It enables and disables the roomcard function:

ON = enabled (factory setting).

- if contact CN51 is open, the unit switches off and cannot be activated via external control
- if contact CN51 is closed, the unit can be activated via external control

OFF = disabled.

- if contact CN51 is open, the unit switches off, but it can be activated via external control
- if contact CN51 is closed, the unit activates automatically

**⚠** Contact CN51 is bridged by factory default.

##### SW2\_3 e SW2\_4

**⚠** Do not change factory setting


#### Purifying filter installation

Air purifying filters to absorb microscopic dust particles, pollen, moulds or polluting agents are supplied with the device:


- no. 1 antibacterial filter (green)
- no. 1 photocatalytic filter (black)
- no. 1 anti-formaldehyde filter (cardboard packaging)

**⚠** The device is designed to be installed with two purifying filters. Chose among the ones supplied according to your needs.

For the installation:

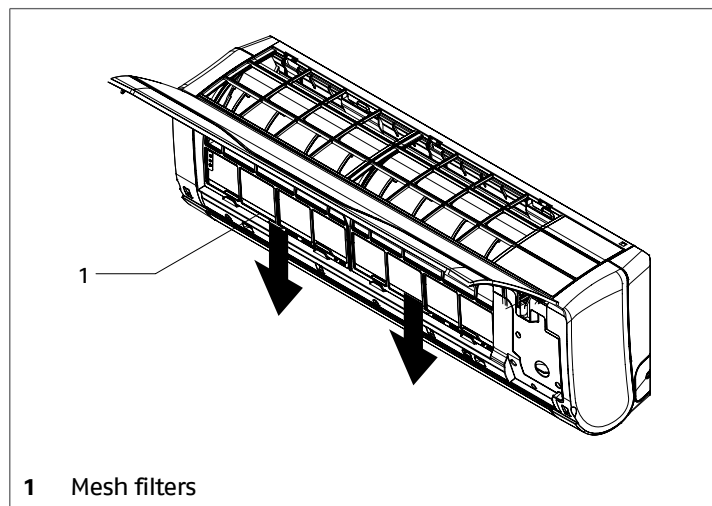

- open the front panel
- take out the mesh filter by grabbing the relevant fins

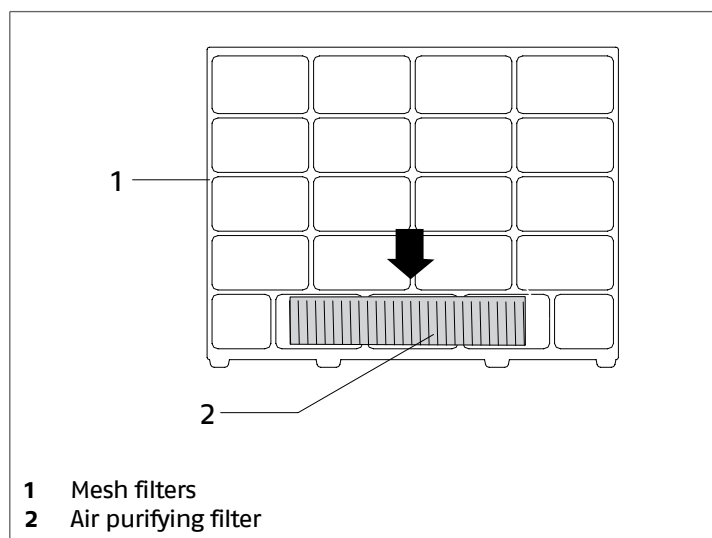


- insert the purifying filters into the prearranged slots
- to reposition them, proceed in reverse order

**⚠** Keep the purifying filters sealed until their actual use.

**⚠** Installing the purifying filters reduces the air flow and results in lower performance. It is advised to use the device at the highest speeds.

#### Time setting

The current time must be set before using the remote control:

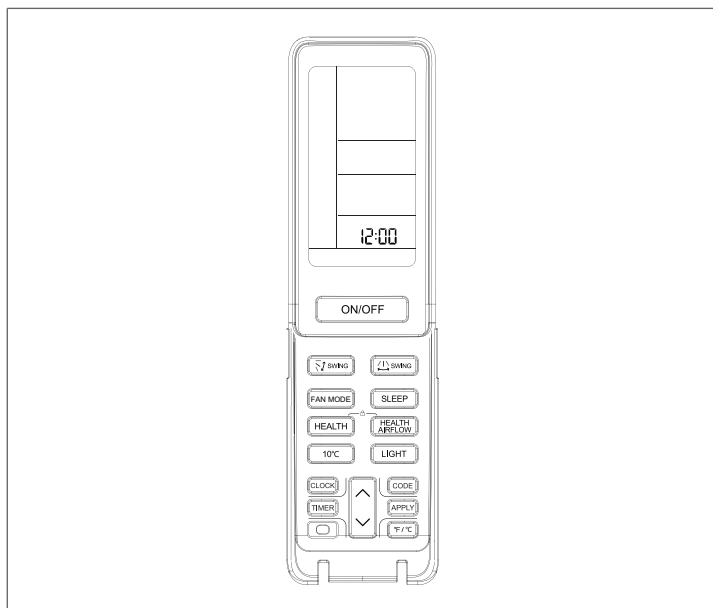

— open the door

— press

The time indication starts to blink.

— work

— select the current time


Each time the key is pressed, the values changes by 1. By keeping the key pressed down, the value changes faster.

— confirm with

The time indication stops blinking.

### 3.2 Putting into service

After having completed all the operations required to prepare for first commissioning, do the following to activate the device:

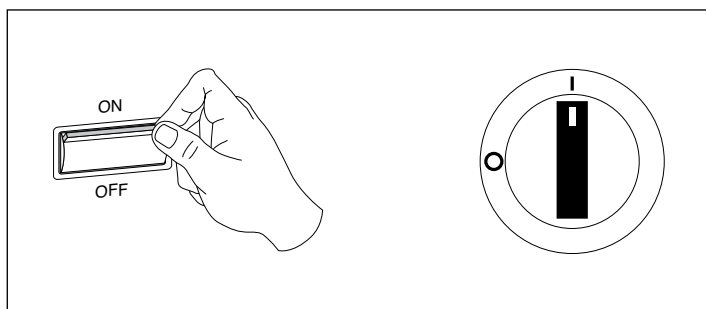


- position the system's main switch in the "ON" position.
- activate the unit with the remote control
- check its operation in the different modes

The compressor activates 3 minutes after unit activation.

Refer to the user booklet as for the use of the remote control.

#### Start-up in cooling mode with low temperatures

When the room temperature is lower than 16°C, the unit does not start in cooling mode. In case you need to check the unit operation in these conditions, you can use the emergency switch.

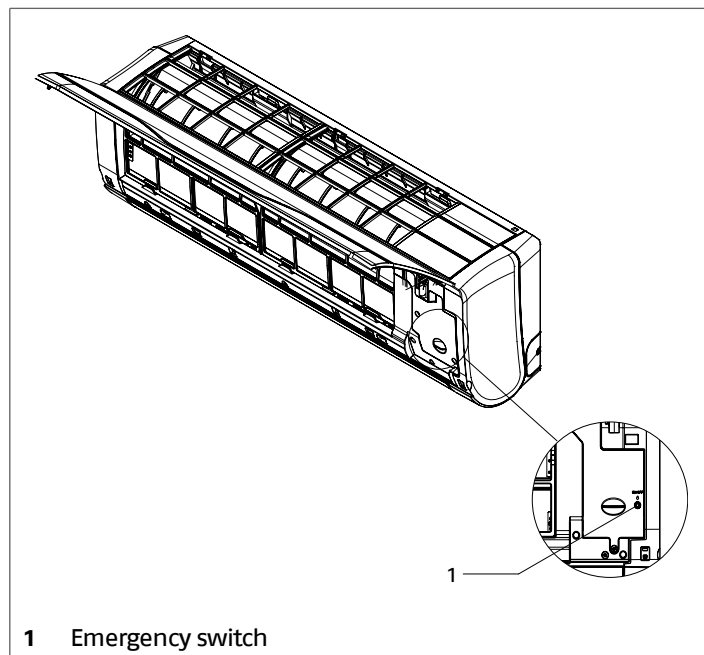

1 Emergency switch

To switch on:

- keep the emergency switch pressed down with a pointy object until a double acoustic signal is emitted
- the air-conditioner starts in cooling mode with high ventilation speed and active air deflector

To switch off:

- press the emergency switch again

This operation must be carried out in specific conditions and not for usual operation.

### Checks during and after the first commissioning

After starting the device, check that:

- the current consumed by the compressor is less than the maximum permitted
- the device is operating under the recommended operating conditions
- the unit is able to stop and start up again

Should any of the above-listed controls have problems: turn the device off and call the Technical Service immediately.

Do not touch the device pipes to prevent potential burns.

Take anti-static precautions in case of weather conditions where humidity is less than 40%.

Avoid using mobile phones.

### 3.3 Temporary shutdown


In order to shut down the unit for periods of brief absences:

- only use the remote control to disable the unit

### 3.4 Stop for an extended period of time

If the device has not been used for an extended period of time, carry out the following operations:

- start the device in ventilation mode
- select the maximum speed
- let the device run for 6 hours
- deactivate the unit with the remote control

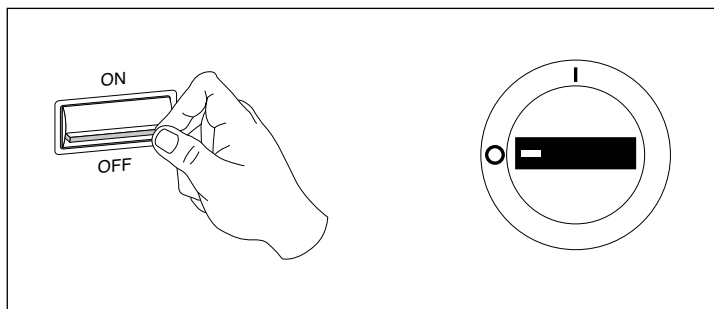

- position the system's main switch in the "OFF" position.

### 3.5 Ordinary maintenance

Routine maintenance is fundamental for keeping the equipment efficient, safe and reliable. It can be performed periodically by the Technical Support Service, whose staff is technically qualified and can use genuine spare parts, if necessary.

**⚠** Original conditions must be restored after performing the required maintenance operations.

**⚠** All described operations **MUST** be carried out under the following conditions:

- cold device
- device NOT supplied with electric power
- suitable personal protection equipment

**⊘** Do not open the access covers and carry out technical or cleaning activities before disconnecting the unit from the power grid by positioning the system's main switch in the "OFF" position

### Monthly operations

The following checks are part of the monthly maintenance plan:


- cleaning the housing and front panel
- mesh filter cleaning

#### Cleaning the housing and front panel

- wet a sponge or soft cloth with water and soap to wash
- once cleaning is over dry surfaces with care

**⚠** Do not use water at a temperature that is higher than 40°C, powder or abrasive detergents, solvents and brushes.

#### Mesh filter cleaning

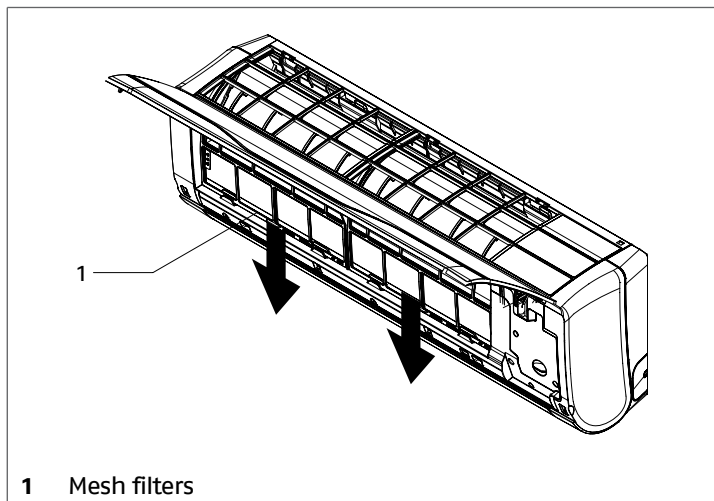

- take out the mesh filter by grabbing the relevant fins
- remove exhausted purifying filters if present
- remove dust with a vacuum cleaner

**⚠** Stubborn dirt can be removed by washing the filter in a luke warm (max. 40 °C) solution of water and neutral detergent. After washing, rinse the filters well and leave to dry in the shade.

**⚠** Exposing the filters to the sun or washing them with water at a temperature that is higher than 40 °C can cause the filters to shrink.

**⊘** It is forbidden to use the device without mesh filter.


### Yearly operations

The annual maintenance plan includes the following checks:

- power supply voltage
- electric connection tightening
- status of cooling and hydraulic joint
- condensate tray cleaning
- electric absorption


#### Purifying filter replacement

To replace the filters:

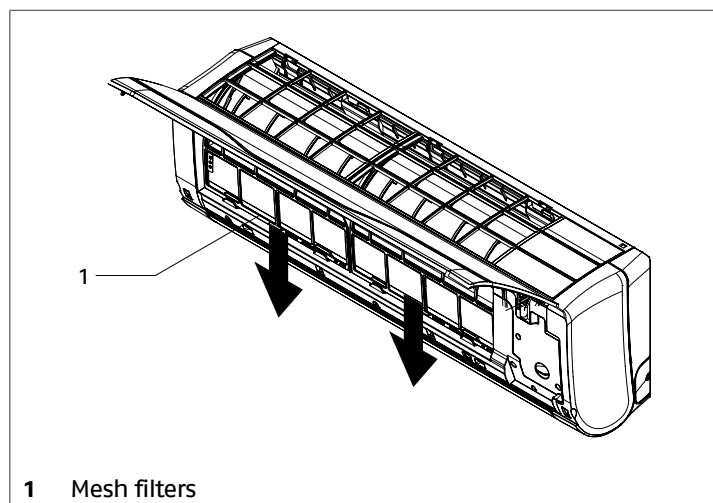

1 Mesh filters

- open the front panel
- take out the mesh filter by grabbing the relevant fins

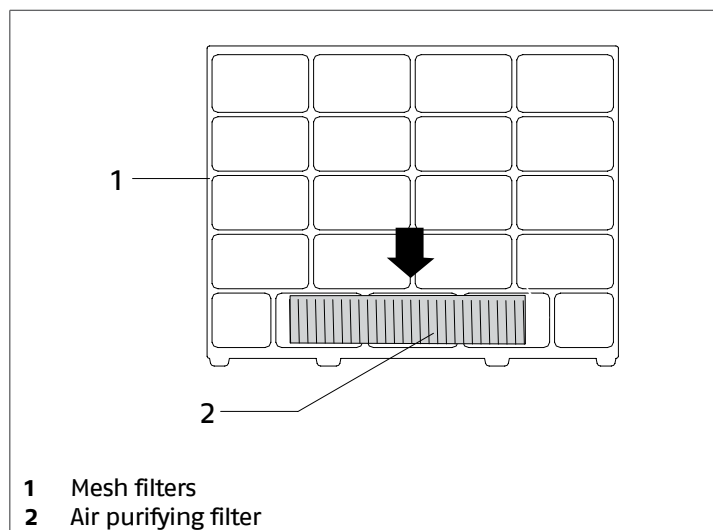

1 Mesh filters  
2 Air purifying filter

- open the front panel

- remove exhausted purifying filters
- insert new purifying filters into the prearranged slots
- to reposition them, proceed in reverse order

**⚠** Keep the purifying filters sealed until their actual use.

**⚠** Installing the purifying filters reduces the air flow and results in lower performance. It is advised to use the device at the highest speeds.

### 3.6 Extraordinary maintenance

#### Removal



In case of replacement or extraordinary reparations, you may need to remove the unit.

Proceed as follows to remove the capacitors:

- carry out the evaporator emptying operation

**⚠** The operation is detailed in the Installer booklet of the matching outdoor unit.

- deactivate the unit with the remote control
- position the system's main switch in the "OFF" position.
- disconnect the cooling pipes
- disconnect the condensate discharge
- disconnect the electric connections

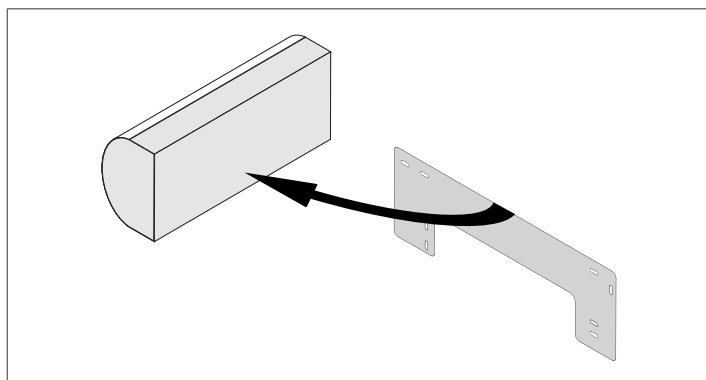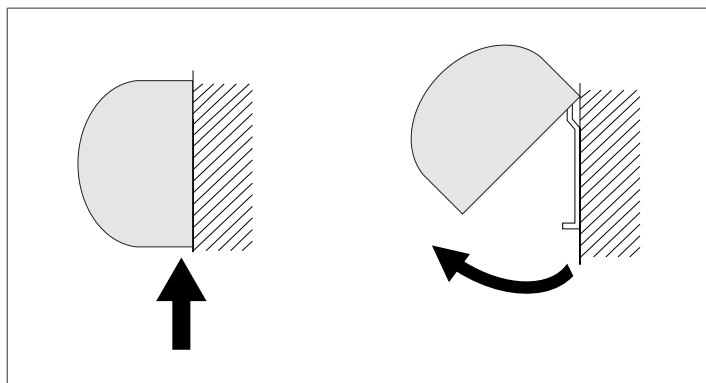

- push up and release the unit from its metallic support
- lift up the unit to remove it

### 3.7 Alarms


In the presence of operating abnormalities, the unit is secured and blocked.

**⚠** Safety block can occur randomly.

**⚠** Wait for at least 10 minutes before restarting the unit.

**⚠** If the fault occurs again, an accurate check of the device components is required. Contact **RIELLO** Technical Support Service.

Faults are identified by a code on the unit display.

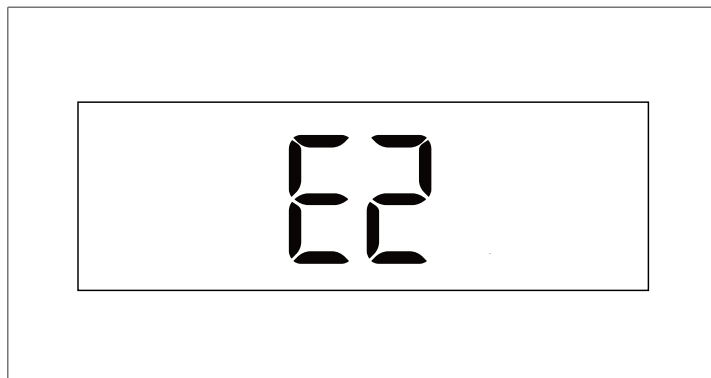

#### Indoor unit faults

Code	Description	Remarks
E1	Room probe fault	The unit resets after problem resolution
E2	Exchanger probe fault	
E4	Microprocessor malfunction	
E7	Communication error between indoor unit and outdoor unit	
E14	Fan motor malfunction	


#### Outdoor unit faults

**⚠** Refer to the matching outdoor unit instruction booklet for the installer.

#### 4 DISPOSAL

---

Packaging materials shall be disposed of separately so as to recover and recycle them. At the end of its service life, the device shall be disposed of according to the existing legislation.

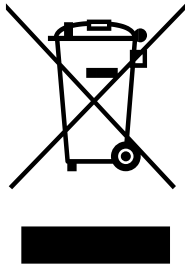









# RIELLO

RIELLO S.p.A. - 37045 Legnago (VR)  
tel. +39 0442 630111 - fax +39 0442 630371  
[www.riello.it](http://www.riello.it)

As the manufacturer is constantly improving its products, the aesthetic or dimensional features, the technical data, the equipment and accessories indicated could be subject to variations.