

## **GB** Forced draught natural gas/propane burner

Single stage operation



CODE	MODEL
3757125	G200



**Original instructions**

## TABLE OF CONTENTS

Installation instructions and owner's handbook . . . . .	2
General information . . . . .	3
Step by step procedure . . . . .	3
Serial number identification . . . . .	4
Burner components identification . . . . .	4
Burner dimensions . . . . .	5
Electrode & flame probe adjustments . . . . .	5
Typical gas train layout . . . . .	6
Installing the burner . . . . .	7
Installation of sediment trap & burner supply . . . . .	8
Factory wiring diagram . . . . .	9
Field wiring diagram . . . . .	9
Setting up the burner . . . . .	10
Step by step procedure . . . . .	10
Operating faults . . . . .	11
Air gate adjustment . . . . .	11
Diaphragm installation and combustion head setting . . . . .	12
Manifold pressures . . . . .	12
Pressure working chart . . . . .	13
Combustion chamber size . . . . .	13
Combustion checks . . . . .	14
Burner start-up cycle . . . . .	14
Problem solving guide . . . . .	14
Owner information & routine maintenance . . . . .	15
Installation data . . . . .	15
Propane burner application . . . . .	16
Exploded spare parts list . . . . .	18
Spare parts list . . . . .	19
Burner start up report . . . . .	21

**INSTALLATION INSTRUCTIONS AND OWNER'S HANDBOOK****CAUTION:**

All gas burners **MUST** be installed by trained and licensed technicians.

**WARNING:**

Installation of this burner must conform with local codes or, in the absence of local codes, with the Standard for the Installation of Domestic Gas Conversion Burners, ANSI Z21.8-1984, and Addendum, Z21.8a-1989, and the National Fuel Gas code, ANSI Z223.1-1984, and CAN/CGA B149.1 &.2. If an external electrical source is utilized, the conversion burner, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the national Electrical Code, ANSI/NFPA No. 70-1990 and CSA Electrical Code.

Owner is required to retain this manual for future reference.

<b>TECHNICAL SPECIFICATIONS</b> <b>FIRING RATE 70,000 TO 200,000 Btu/hr</b>		
	<b>NATURAL GAS</b>	<b>PROPANE</b>
GAS SUPPLY PRESSURES	MIN. 5" wc MAX. 7" wc	MIN. 12" wc MAX. 14" wc
MANIFOLD PRESSURES	MIN. 3" wc MAX. 5" wc	MIN. 3" wc MAX. 5" wc
POWER MOTOR CONTROL MODULE	120 Volts 60 Hz 1 phase 232T 2.2 Amps 3250 rpm 525 SE/A ELECTRONIC	

**WARNING:**

If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

Do not store or use gasoline or any other flammable vapours or liquid in the vicinity of this or any other appliance.

**WHAT TO DO IF YOU SMELL GAS:**

- 1) Do not try to light any appliance.
- 2) Do not touch electrical switches; do not use any phone in your building.
- 3) Immediately call your gas supplier from a neighbour's phone.  
Follow the gas supplier's instructions.
- 4) If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

## GENERAL INFORMATION

Your Riello gas burner comes to you completely assembled and factory wired, ready for installation. Models equipped with the short combustion head have a fixed flange, which bolts directly to the front of the appliance. When equipped with the long combustion head, the burner comes with a universal flange, which when bolted to the appliance, allows the burner to be adjusted for exact positioning in the combustion zone.

## STEP-BY-STEP PROCEDURE

- 1) Remove the burner from the carton, taking care not to lose any of the supplied accessories.  
Check for signs of physical damage.
- 2) Bolt the combustion head and burner to the appliance. Be sure to install the supplied mounting gasket. Ensure that the burner is level (we suggest using a spirit level) and that the combustion head is centred in the appliance port. Refer to page 7 for positioning of combustion head relative to the chamber.
- 3) Check that all gas train connections are tight and make your connections to the incoming gas supply.
  - a) A sediment trap must be provided. See page 8.
  - b) If not already installed, a manual shutoff valve must be supplied. This valve must be upstream of the burner gas train supply connection.
  - c) A  $1/8$ " NPT plugged tapping must be installed immediately upstream of the burner gas train supply connection and must be accessible for a test gauge.
  - d) If required by local codes, provide gas vent lines at the gas regulators and valve (Riello gas trains are equipped with vent limiting diaphragms).
  - e) Perform required gas pressure test on incoming gas supply lines.

**NOTE:** Details of sediment trap, manual gas valve, and pressure test point, and line pressure test point can be found on page 8.

- 4) To make electrical connections, refer to field wiring diagram on page 9. A manual disconnect switch must be installed in the incoming lines. Wiring to the low voltage-switching relay, if used, (Honeywell R8038A) must be rigid conduit or flexible approved cable.



### CAUTION:

**Label all wires prior to disconnection when servicing controls.  
Wiring errors can cause improper and dangerous operation.  
Verify proper operation after servicing. (Step 5 e below.)**



### CAUTION:

**The phase (HOT) wire must be connected to the black lead of the 24v relay if used; neutral to the white lead. Do not reverse the polarity.  
The burner will not operate with the Phase/Neutral reversed, and the control box may be damaged.**

- 5) Check the burner functions as follows:
  - a) Make a final check on both the gas and electrical connections.
  - b) Loosen the screw in the manifold gas test point and install an appropriate manometer.
  - c) Set the thermostat at its highest setting.
  - d) Switch on power.
  - e) With the manual gas valve turned off, press the burner reset button (9, page 4), and allow the burner to run through a complete cycle to ensure that the sequence of operations is correct. A full starting cycle should take approximately 40 seconds from a no power condition until burner lockout; refer to the start-up cycle chart found on page 14.
  - f) Once burner is operational (up and running) a final gas leak check must be completed on the gas train.
- 6) If the burner is installed on a central warm air furnace, affix the mandatory warning labels to the furnace fan cover door (inside and outside).

## SERIAL NUMBER IDENTIFICATION

Your Riello burner may have been manufactured in more than one location and therefore there are two possible serial number identification.


The Riello 9 character serial number, example,

**06 01 12345**, is identified as follows:

**06** = Last two digits of the year of manufacture;

**01** = Week of manufacture;

**12345** = Increment of 1 for each burner produced – specific to product code – reset to zero each January 1<sup>st</sup>.

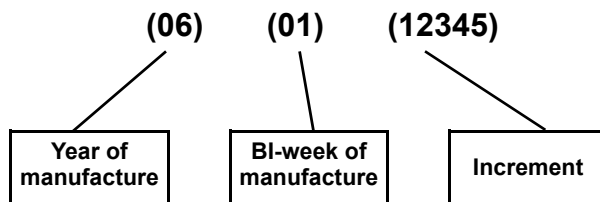

The Riello 15 character serial number, example,


**8511344 18 01 0003**, is identified as follows:

**8511344** Burner product code;

**18** Last two digits of the year of manufacture;


**01** BI-week of manufacture;

**0003** Increment of 1 for each burner produced – specific to product code – reset to zero each January 1<sup>st</sup>.

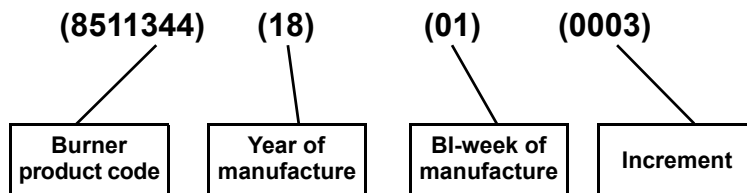


## BURNER COMPONENTS IDENTIFICATION

- 1 – Control box
- 2 – Air pressure switch
- 3 – Screw for fixing the cover
- 4 – Cable grommet
- 5 – Wiring terminal block
- 6 – Screws for fixing the air-damper
- 7 – Air damper
- 8 – Capacitor
- 9 – Reset button with lock-out lamp
- 10 – Gas valve transformer 120V / 24V

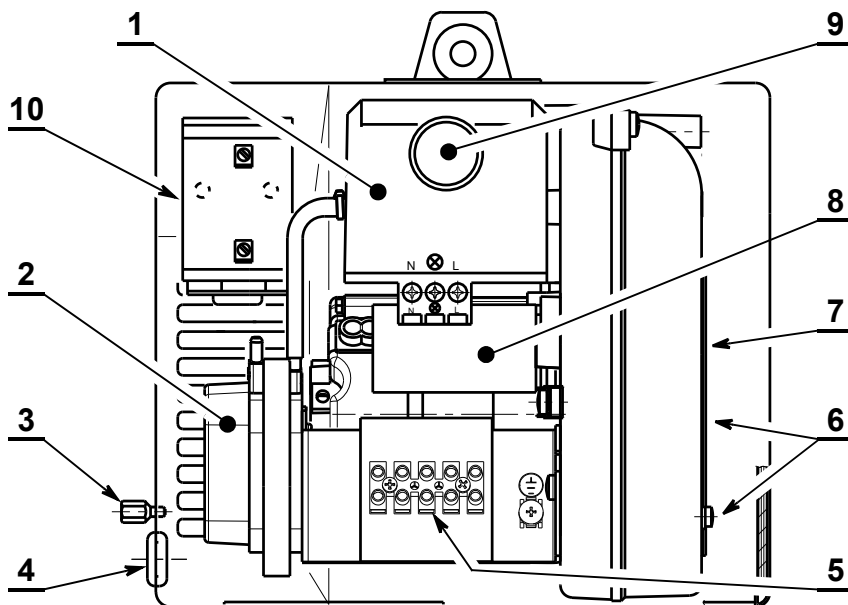

D7554


## BURNER DIMENSIONS

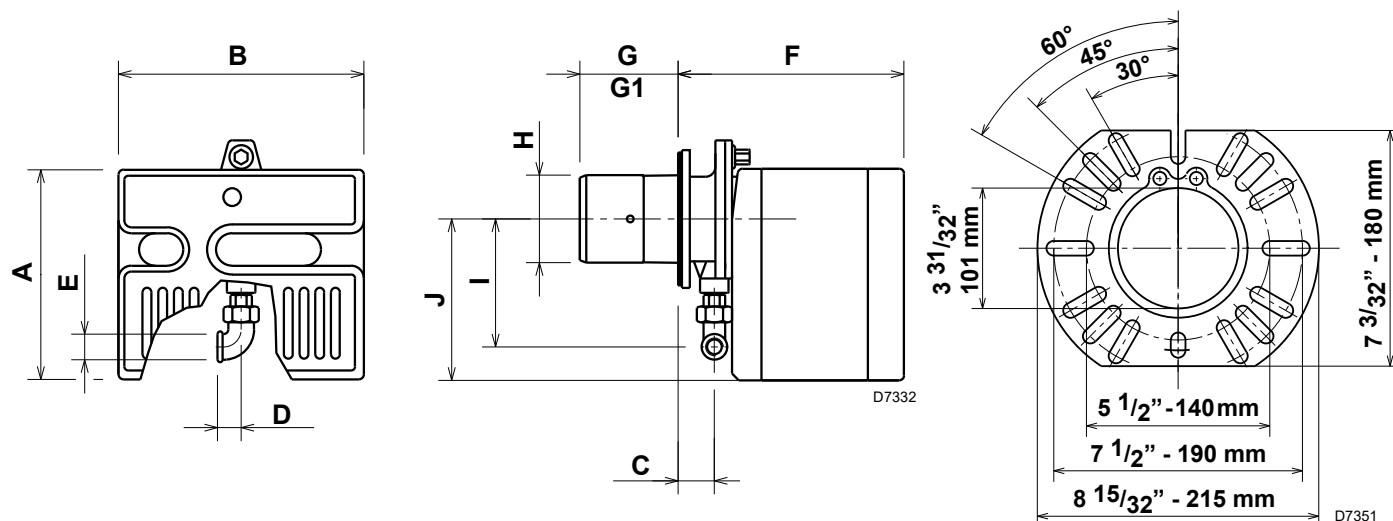

Model G200	A	B	C	D	E	F	G	G1	H	I	J
inches	9 <sup>3</sup> / <sub>16</sub>	10 <sup>11</sup> / <sub>16</sub>	1 <sup>57</sup> / <sub>64</sub>	1 <sup>7</sup> / <sub>64</sub>	1/2	11 <sup>5</sup> / <sub>8</sub>	3 <sup>15</sup> / <sub>16</sub>	10 <sup>33</sup> / <sub>64</sub>	3 <sup>9</sup> / <sub>16</sub>	5 <sup>7</sup> / <sub>16</sub>	7 <sup>2</sup> / <sub>32</sub>
mm	233	272	48	28	13	295	100	267	91	138	180

**NOTE:** Actual available insertion length must be measured from tip of end cone to face of mounting gasket.

## ELECTRODE AND FLAME PROBE ADJUSTMENTS

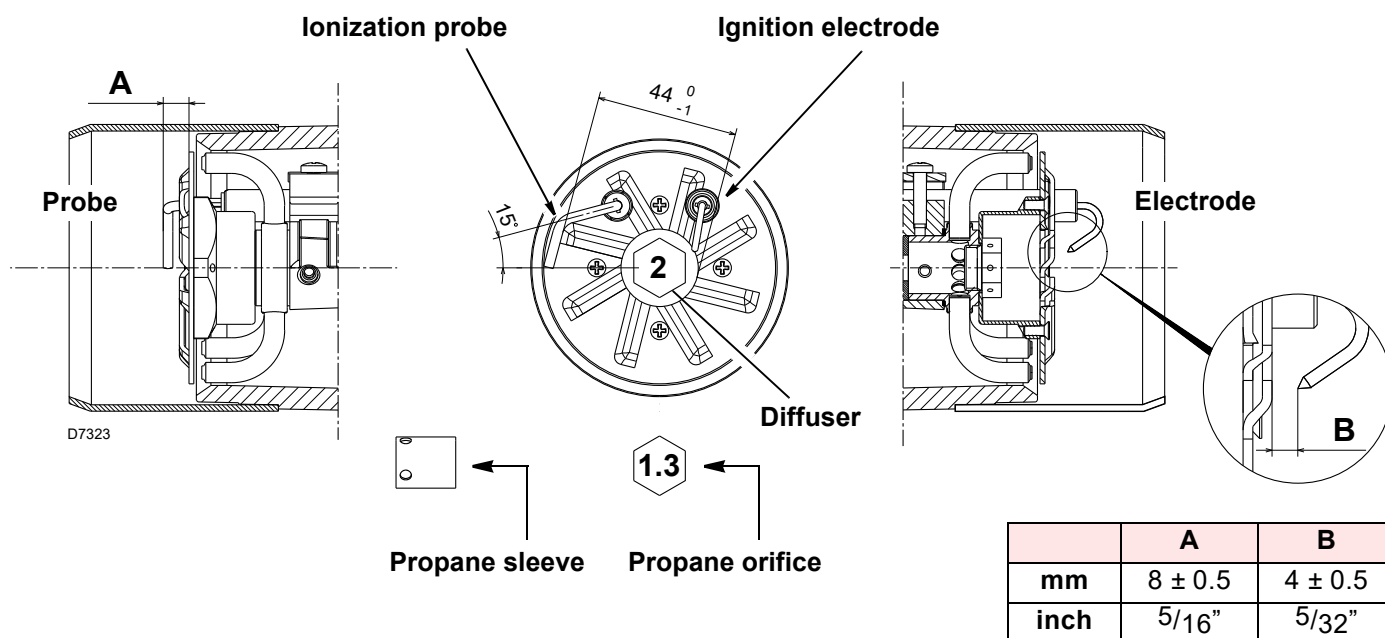

	A	B
mm	8 ± 0.5	4 ± 0.5
inch	5/16"	5/32"



### WARNING:

Do not turn the ignition electrode. Leave it as shown in the drawing.



If the ignition electrode is put near the ionization probe, the amplifier of the control box may be damaged.

## TYPICAL GAS TRAIN LAYOUT

**⚠ THE GAS TRAIN LEAVES THE FACTORY SET AT 3.5" wc.**

### ATTENTION


This gas train scope of supply meets the minimum controls requirements according to CSA Canada and USA regulations. Any additional requirements needed to meet local codes are the responsibility of others.

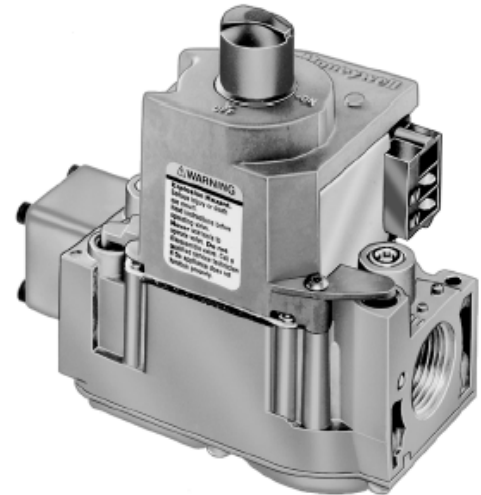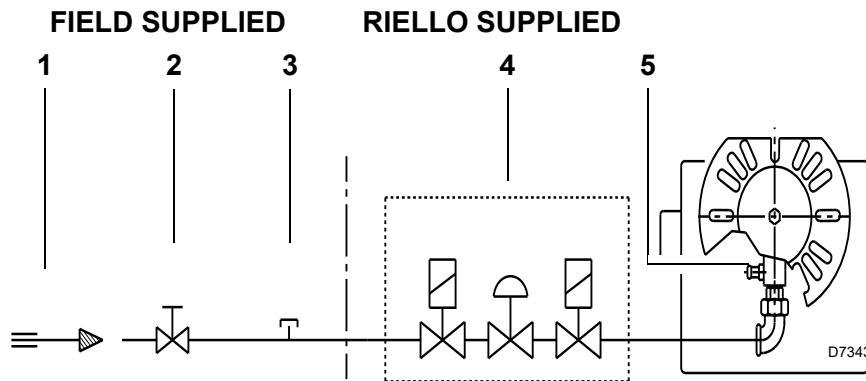

### VALVE LEGEND

- 1 - Gas supply & flow direction of gas
- 2 - Gas supply main shutoff manual valve (field supplied)
- 3 - Gas supply pressure test point (field supplied)
- 4 - Valve
- 5 - Gas burner manifold test point

### TOP VIEW OF GAS CONTROL

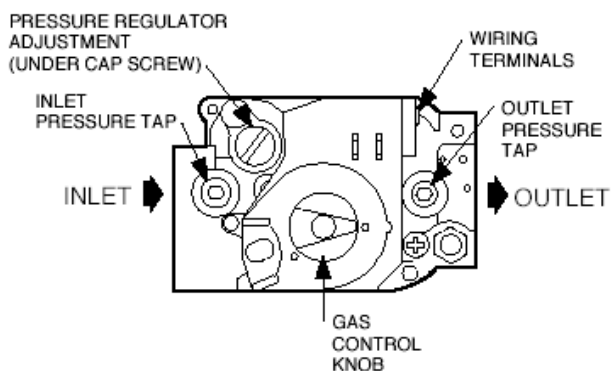

### GAS SUPPLY PRESSURE RANGES:

**NATURAL GAS PRESSURE:**  
min. 5" wc - max. 7" wc

**LP PROPANE GAS PRESSURE**  
min. 12" wc - max. 14" wc




## INSTALLING THE BURNER

- A) Burner Chassis
- B) Combustion Head Assembly
- 1) Locking Nut
- 2) Mounting Plate surface
- 3) Insulation Gasket

Separate the combustion head of the burner from the chassis (A) by removing the locknut (1). Install the combustion head into the boiler.

*Typical insertion depth*, the front edge of the combustion head is flush with the inside surface of the appliance mounting surface (2).

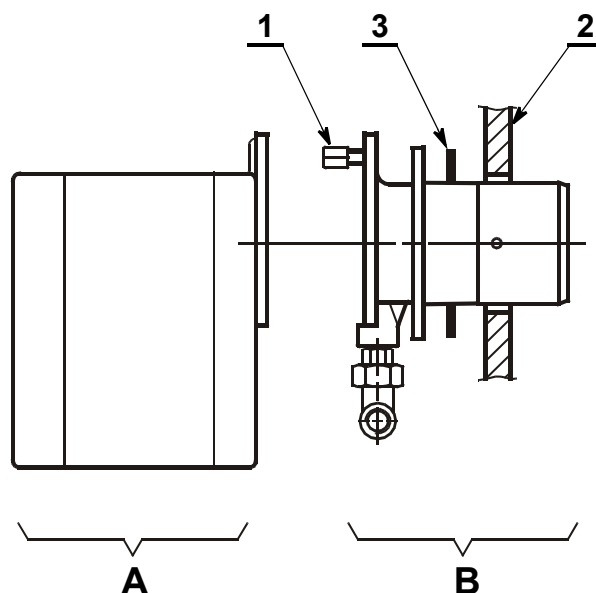

### Use this checklist prior to installation:

- 1) Check the input/output requirements of the appliance. We suggest that the appliance output should be approximately 85% of input (85% efficiency).
  - 2) Check the dimensions of the combustion chamber for correct sizing against the input requirements of the application.
  - 3) Check that there is sufficient air for proper combustion and adequate ventilation.  
Local codes should be followed. In the absence of local codes, refer to the NFPA Manual No. 31, CAN/CGA B149.1 & 2, ANSI Z223.1-1984 and Addendum 221.8A 1989.
  - 4) Check that you have adequate space for servicing the equipment.  
The Riello burner requires a minimum of 13 inches clear space behind the red cover.  
This is required to allow easy removal of the cover for servicing and periodic maintenance.
  - 5) Check that the chimney is of sufficient area to handle the exhaust gases.  
Make sure the chimney is clear and there are no obstructions.
  - 6) Barometric draft regulators must be of the double acting type, and must be installed in accordance with the draft regulator manufacturer's instructions.  
Single acting barometric dampers are not permitted.
- For further clarification, refer to ANSI Z21.8-1984 and Z21.17A-1993.



### IMPORTANT:

A vent shutoff system shall be applied to a barometric damper installed in the venting system at the time of conversion of the appliance.

This will electrically disconnect the burner should there be a blockage in the vent (chimney).

The installer must identify the main electrical power switch and manual gas shut off valve, for emergency conditions. The burner cover must be in place and secured before the burner is placed in operation.

## INSTALLATION OF SEDIMENT TRAP AND BURNER SUPPLY


Gas piping to the burner must be  $\frac{1}{2}$ -inch minimum. Install only a full-ported shutoff valve. The valve must be located outside the appliance jacket, and the pressure gauge port must be accessible.

### PRESSURE TEST-OVER $\frac{1}{2}$ PSIG.

The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of the system at a test pressure in excess of  $\frac{1}{2}$  PSIG.

### PRESSURE TEST- $\frac{1}{2}$ PSIG OR LESS

The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any testing of the gas supply piping system at test pressures equal to or less than  $\frac{1}{2}$  PSIG.

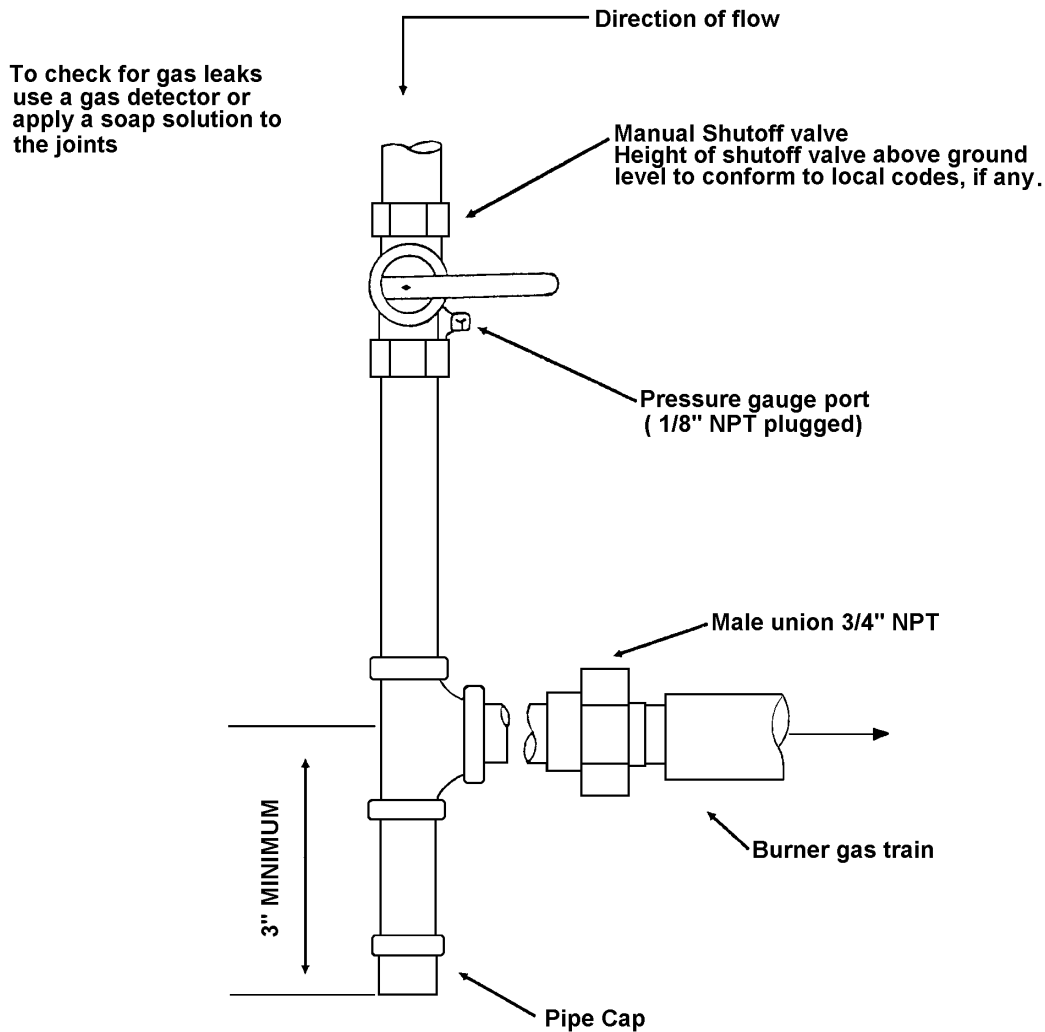


## FACTORY WIRING DIAGRAM

### NOTE:

The SAFETY SWITCH on the 525SE CONTROL BOX is equipped with a contact allowing remote sensing of burner lockout.

The electrical connection is located on the CONTROL BOX terminal 4 as indicated. Should burner lockout occur, the 525SE CONTROL BOX will supply a power source of 120 Vac to the connection terminal.

The maximum allowable current draw on this terminal is 1A.

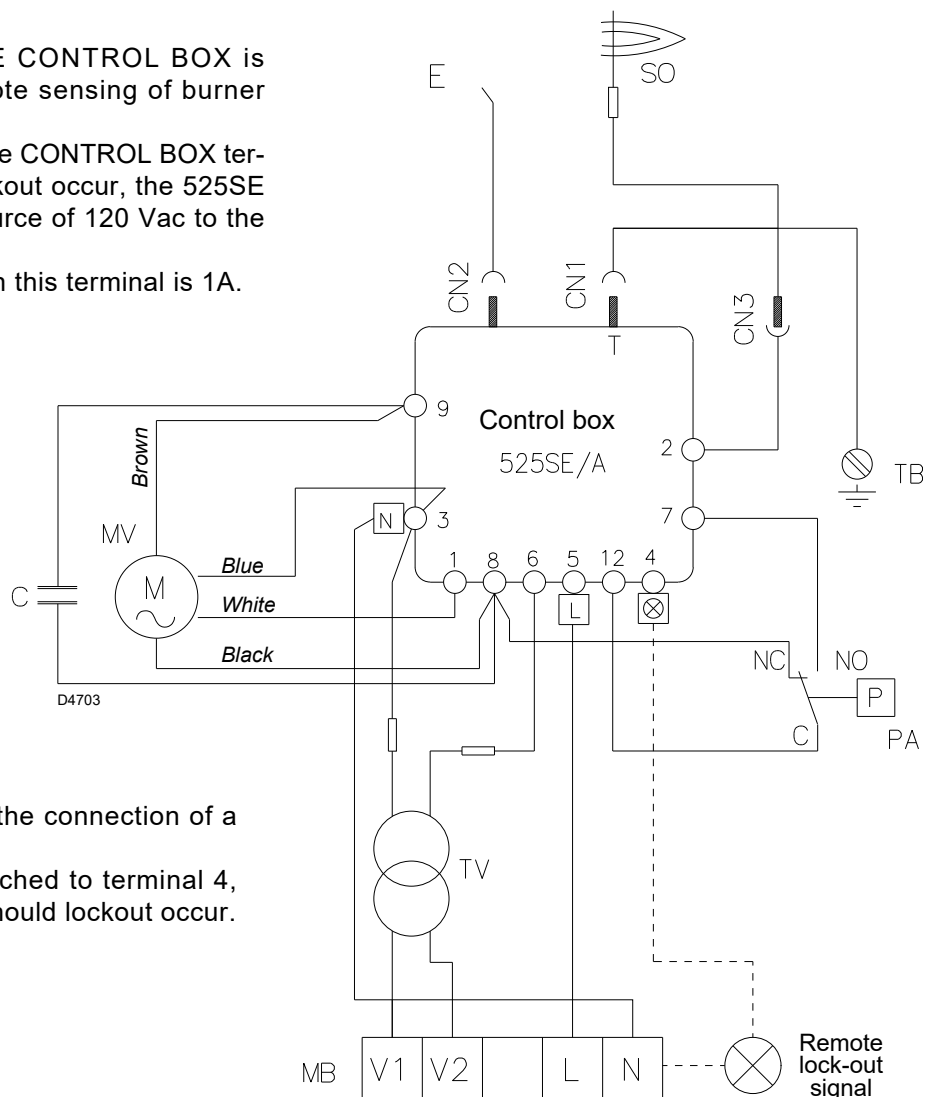


### IMPORTANT:

Terminal 4 is to be used only for the connection of a remote sensing device.

If a neutral or ground lead is attached to terminal 4, the control box will be damaged should lockout occur.

## FIELD WIRING DIAGRAM

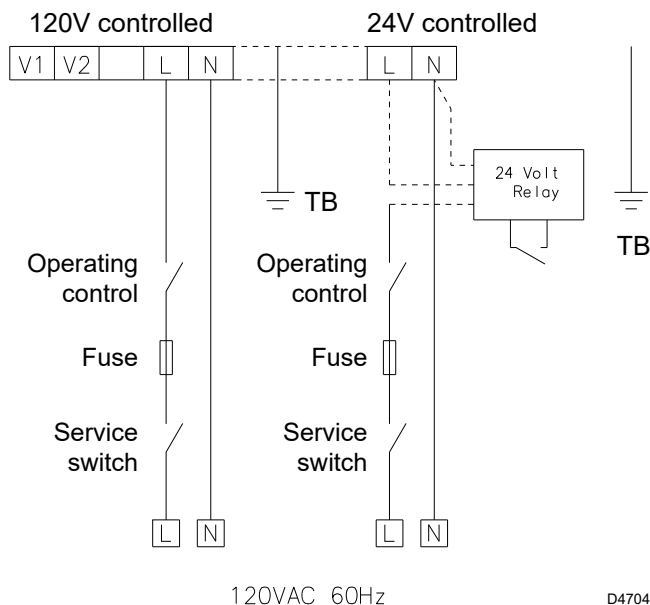

### LEGEND

- C** - Capacitor
- CN...** - Connectors
- E** - Ignition electrode
- MB** - Terminal board
- MV** - Motor
- PA** - Air pressure switch
- SO** - Ionization probe
- TB** - Burner earth
- TV** - Transformer 24V

## SETTING UP THE BURNER

After burner output has been determined, use **TABLE 1** below **AS AN INITIAL GUIDE** for burner settings.

All settings in this table were obtained under the following conditions.

- 0 (zero) draft in the combustion zone;
- Inlet gas pressure range as in table 1;
- Standard lab test boiler;
- Steady state (HOT) operating conditions.

	Gas inlet pressure range	Diaphragm	Manifold gas pressure	Burner output	Head setting	Air gate setting
	"wc	Marking	"wc	Btu/hr	Nocth	Notch
NATURAL GAS	5.0 - 7.0	B1	3.5	75,000	0	1.5
		B2		95,052	0	1.85
		B3		114,589	1	1.9
		B4		139,010	2	2.0
		B5		159,673	3	2.3
		B6		200,000	4	3.75

Burner input decreases with increasing the combustion chamber pressure.

Once installed, a higher or lower burner input can be achieved by raising or lowering the manifold pressure from - 0.5" wc. to +1.5" wc. Pressure changes can only be made when the burner is running. The typical working manifold pressure is 3.5" wc. (both for natural gas and propane).

## SAFETY TEST - WITH GAS BALL VALVE CLOSED

It is fundamental to ensure the correct execution of the electrical connections between the gas solenoid valves and the burner to perform safely the commissioning.

For this purpose, after checking that the connections have been carried out in accordance with the burner's electrical diagrams, an ignition cycle with closed gas ball valve -dry test- must be performed.

- 1 The manual ball gas valve must be closed
- 2 The electrical contacts of the burner limit switch need to be closed
- 3 Ensures closed the contact of the low gas pressure switch
- 4 Make a trial for burner ignition.

The start-up cycle must be as follows:

- Starting the fan for pre-ventilation
- Performing the gas valve seal control, if provided
- Completion of pre-ventilation
- Arrival of the ignition point
- Power supply of the ignition transformer
- Electrical Supply of solenoid gas valves

Since the manual gas ball valve is closed, the burner will not light up and its control box will go to a safety lockout condition.

The actual electrical supply of the solenoid gas valves can be verified by inserting a tester. Some valves are equipped with light signals (or close/open position indicator) that turn on at the same time as their power supply.



**IF THE ELECTRICAL SUPPLY OF THE GAS VALVES OCCURS AT UNEXPECTED TIMES, DO NOT OPEN MANUAL GAS BALL VALVE, SWITCH OFF POWER LINE; CHECK THE WIRES; CORRECT THE ERRORS AND REPEAT THE COMPLETE TEST.**

## STEP BY STEP PROCEDURE

- 1) Set air gate. See **AIR GATE ADJUSTMENT** on page 11.
- 2) Set gas diaphragm and combustion head.  
See **DIAPHRAGM INSTALLATION AND COMBUSTION HEAD SETTING** on page 12.
- 3) Set the manifold pressure using the following method.
  - a) In order to determine existing manifold pressure, start the burner.  
At the end of the prepurge cycle (approx. 30s), the gas valve is energized.  
During the 5 sec. trial for ignition, note the observed manifold pressure. If the burner lights and continues to run, go to step (d).
  - b) Compare the observed manifold pressure from step (a) to the required value from **TABLE 1**.

- c) Repeat step (a), making adjustments to the gas valve, until flame is established.
- d) Once flame has been established, set your manifold pressure to the desired value from **TABLE 1**.
- 4) Check combustion gases using proper combustion analysis equipment to ensure safe levels of CO<sub>2</sub> and CO during appliance heat up.  
The gas valve should be used to make any necessary adjustments to ensure safe combustion.  
At this point do not adjust the air or head settings unless absolutely necessary.
- 5) Allow burner to run until normal operating temperatures and conditions have been achieved.
- 6) a) Clock the gas meter to determine actual burner output.  
b) Set the manifold pressure, by adjusting the gas valve, to achieve desired output.  
c) Check combustion gases once again to ensure safe operation.  
Make sure the burner cover is in place and air gate locking screws are secure for all combustion analysis.  
Adjust air gate if necessary (refer to page 11). A qualified technician must do this test.  
The maximum recommended CO<sub>2</sub> level for natural gas is 10%; the maximum recommended level for propane gas is 12%. The recommended flue gas temperature is from 350°F to 550°F.
- 7) After completing the adjustments, remove the manometer and tighten the screw inside the manifold test point. Replace the regulator cap on the gas valve.
- 8) Complete the adjustment data tag, described on page 15.  
Explain the burners essential functions (starting and stopping) to the owner.  
Do not forget to give the dealer or service company's name and address.  
Please see page 15 for information on burner maintenance procedures.



**NOTE:** Do not assume the heating system is operating at optimum performance.

**THERE IS NO SUBSTITUTE FOR PROPER COMBUSTION TESTING!**

## OPERATING FAULTS

The integrated control system is self-checking.

The cycle from start up to flame establishment, takes approximately 70 seconds.

The burner will go into lockout under the following circumstances:

- a) Burner fails to ignite;
- b) The ionization probe is grounded;
- c) Opening of the air pressure switch or the normally open contacts of the air pressure switch not making.

Should overheating of the appliance occur, shut off the manual gas valve to the burner.

Do **NOT** shut off the switch to the circulating pump or blower fan.

## SHUT DOWN PROCEDURE

Switch off electrical power to the unit. Close the manual supply gas valve.

## START UP PROCEDURE

See page 7.



**NOTE:**

If an external electrical source is utilized, the conversion burner, when installed, must be electrically grounded in accordance with local codes.

In the absence of local codes, refer to the National Electrical Code, ANSI/NFPA 70-1990.

In Canada follow the Canadian Electrical Code Part 1 CSA C22.1.

## AIR GATE ADJUSTMENT

To regulate the combustion air, adjust the manual air gate (3), by loosening the locking screws (4).

Once the optimal adjustment is reached, tighten the locking screws (4).

### EXAMPLE SETTING - (for natural gas)

To set the air intake for a desired burner output of 114,500 Btu/hr, use **TABLE 1** to determine the correct air gate setting.

In this case, the setting would be 1.9 for natural gas.


Turn the manual air gate (3) until the arrow points to 1.9 on the scale.

Tighten locking screws (4).

All settings in **TABLE 1** are obtained with zero (0) pressure in the combustion zone and at normal operating temperatures. i.e., steady state hot conditions.

### Note:

Burner must be fired **ONLY** with fuel that is listed on the burner serial label.

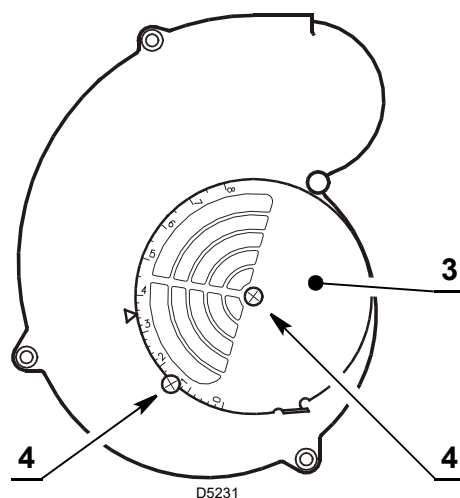


## DIAPHRAGM INSTALLATION AND COMBUSTION HEAD SETTING

A proper diaphragm (C) has to be installed in the combustion head gas line, according to **TABLE 1**. A complete set of gas diaphragms is delivered with the burner packaging as equipment. The burner leaves the factory with the **B6** diaphragm already installed. In case another diaphragm has to be installed, following the instructions below.

To remove the drawer assembly from the manifold (B), follow the procedure below:

- 1) Disconnect 24v leads at the gas valve.
- 2) Separate the burner chassis from the combustion head by removing the locknut.
- 3) Loosen the two Allen screws (A) without taking them out.
- 4) Withdraw the head, turning it 180 degrees.
- 5) Pull out head, leaning it towards the bottom.
- 6) Remove the ignition electrode (D) and the ionization probe (E).
- 7) Unscrew the screw (F) and remove the gas diffuser (G).
- 8) Install the proper diaphragm (C) and seal according to **TABLE 1**.
- 9) Refit following the above procedure in the reverse order (verify the ignition electrode and the ionization probe positions according to page 5).

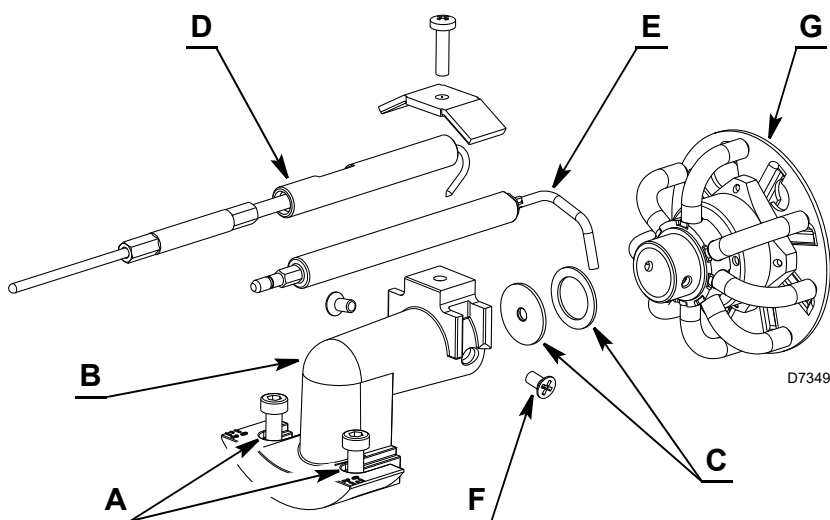

Slide the elbow (B) so that the number on the indicator scale aligns with the back edge of the air tube. See **TABLE 1** for set points. Tighten the two Allen screws (A).

### Example (for natural gas):

For a desired burner output of 114,500 Btu/hr, the diaphragm would be B3 and the combustion head setting would be 1. All settings in **TABLE 1** are obtained with zero (0) pressure in the combustion zone and at normal operating temperatures. i.e.; steady state hot conditions.

**Note:** Burner must be fired **ONLY** with fuel that is listed on the burner serial label.

## MANIFOLD PRESSURES

Manifold gas pressure for various firing rates should be set by adjusting the gas regulator of the gas valve, (see figure at page 6). To check manifold gas pressure, attach a manometer to the manifold test point, shown on typical gas train layout. Approximate manifold pressure settings are indicated in **TABLE 1**.

### Example (for natural gas):

For a burner to be fired at 114,500 Btu/hr, the manifold pressure would be approximately 3.5" wc.

In case of lower or higher manifold pressure, install an diaphragm with a respectively smaller or bigger hole.

All settings in **TABLE 1** are obtained with zero (0) pressure in the combustion zone and at normal operating temperatures. i.e.; steady state hot conditions.

**Note:** Burner must be fired **ONLY** with fuel that is listed on the burner serial label.


## HIGH ALTITUDE SETTINGS

It should be noted that for higher altitudes more air for combustion is required.

All settings in this manual have been obtained at approximately sea level. Special attention should be paid to air for combustion for elevations above sea level. If an increase in combustion air is insufficient, the burner must then be de-rated by approximately 4% for every 1000 feet above sea level.

## PRESSURE WORKING CHART

The chart below shows effects of pressure in the combustion zone on the minimum/maximum burner outputs. In this example, with a maximum operating pressure of 0.16 inches water column in the combustion zone, you will be able to obtain a maximum of 165,500 Btu/h burner output.

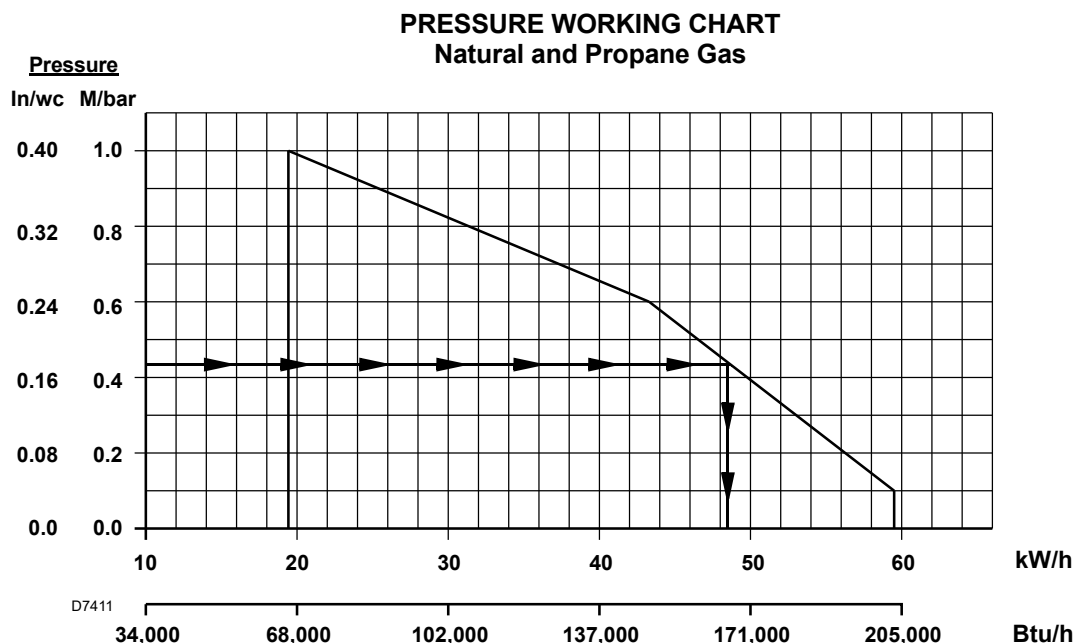

Any change from zero (0) pressure in the combustion zone will affect the Btu output of the burner. To supply the required input to the appliance, manifold pressure will have to be adjusted to compensate for this condition.

### NOTES:

- 1) Sizes shown above are for cylindrical or wet base boilers, or air cooled heat exchangers.
- 2) To size the chamber in applications other than wet base boilers, refer to the authority having jurisdiction. Refer to CAN/CGA B149.1 & 2, ANSI Z21.8-1984, and ANSI Z223-1-1984.
- 3) Fire brick or cerafelt chamber materials should have a continuous run temperature rating of 2400 degrees Fahrenheit and a melting point of 3000 degrees Fahrenheit.



## COMBUSTION CHECKS

### CO<sub>2</sub>


It is advisable not to exceed a measured reading of 10% CO<sub>2</sub> for Natural Gas or 12% CO<sub>2</sub> for Propane Gas.

### CO


For safety reasons, the value of .02% (200ppm) free air sample must not be exceeded.

### IONIZATION CURRENT

The minimum amount of current necessary for the control box to operate properly is 3 micro Amps DC. To measure the ionization current, disconnect the red wire connector and insert a DC micrometer in series with control box terminal 2 and the ionization probe, which senses the flame. Refer to the diagram below.

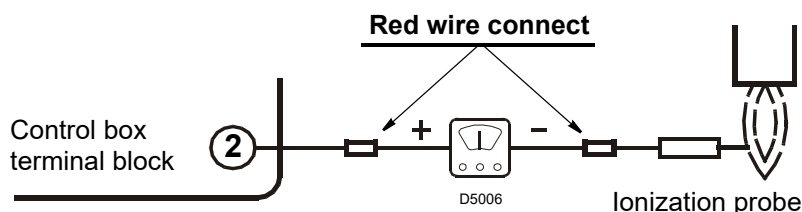

## BURNER START-UP CYCLE

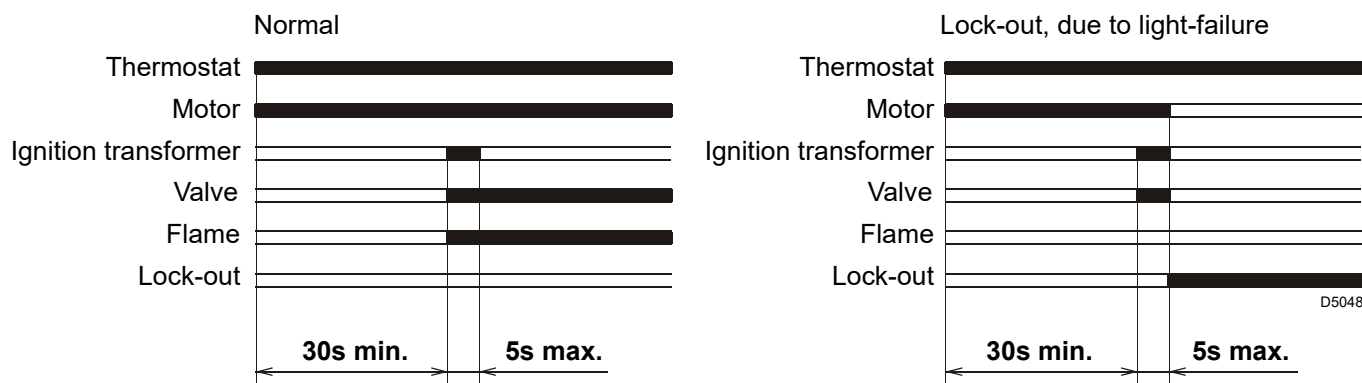

## PROBLEM SOLVING GUIDE

### Burner starting difficulties and their causes:

- 1) The burner goes through the prepurge period normally. The flame ignites, but the burner goes to lockout within five seconds.
  - a) The phase/neutral lines are reversed.
  - b) The wiring to ground is absent or ineffective.
  - c) The ionization probe is grounded, or not in contact with the flame, or the circuit to the control box is broken.
  - d) The spark interferes with the flame signal due to incorrect setting of the electrode.
- 2) The burner goes to lockout after the prepurge period because the flame does not ignite.
  - a) Air has not been fully bled from the gas lines.
  - b) The gas valve is passing too little gas.
  - c) The spark is irregular or not present.
- 3) The burner does not start when the thermostat calls for heat.
  - a) The gas pressure switch (if supplied) does not close contact due to low gas pressure.
  - b) The 24 volt switching relay is defective.
  - c) The line switch is off.
  - d) There is a blown fuse in the panel.
  - e) Terminals on the control module are bent or loose
  - f) The motor is defective.
  - g) The capacitor is defective.
  - h) The end switch on the air damper is defective.
  - i) The control box is defective.
  - j) The air pressure switch is not in the normally closed position.

- 4) The burner continues to repeat the starting cycle without going into lockout.  
This is a very specific situation caused when gas pressure in the gas main lines is *very close* to the value at which the gas pressure switch has been set. This can be corrected by resetting the gas pressure switch to a lower level. The gas pressure switch, if required, may be supplied, or may have to be field installed.
- 5) The burner does not go through prepurge, and the control module goes to lockout. The air pressure switch does not change over from normally closed to normally open contacts.

This condition exists because there is insufficient air pressure in the combustion head.

## OWNER INFORMATION AND ROUTINE MAINTENANCE

### SAFETY LOCKOUT

This burner is equipped with multiple interlocking safety devices. In the event of a failure in the flame, or any blockage of the combustion air supply, the burner will "lock out" in a safety condition. In such an event, an illuminated red button will show on the centre front of the red cover. To restart the burner, press the button once only. Should the burner return to the lock out condition, call a qualified service technician or your gas company for assistance.

**NOTE:** Keep the area around the burner free and clear of all combustible materials, gasoline and other flammable vapours and liquids. Do not allow any obstructions, which may prevent the free, flow of air to the burner.

### MAINTENANCE

Like all precision equipment, your burner will require periodic maintenance. At an interval of 2 months, you should:

- 1) Visually check the flame if your heating appliance has an observation port.
- 2) Check and clean the air intake louver to remove any builds up of fluff, dust, pet hair etc.
- 3) The motor is permanently lubricated and does not need oiling.

For any maintenance or repairs over and above those listed, contact your service technician or gas company. **THERE ARE NO OWNER SERVICEABLE PARTS INSIDE THE BURNER COVER.**

Once a year, you should have the burner serviced as indicated below. This service should be performed by your local authorized Riello dealer.

- 1) Check burner distributor head and mixing plates. Clean if necessary.
- 2) Check ignition electrode. Clean, adjust, or replace as necessary.
- 3) Check the flame sensor rod (ionization rod) for dirt or carbon build up. Clean, adjust, or replace as necessary.
- 4) Check manifold gas pressure.
- 5) Check all burner adjustments.
- 6) Generally clean all exposed parts and components.
- 7) Do a complete combustion test with the burner cover in place and the air gate locking screws secure.

Your Riello 40 gas burner is only part of your heating system.

Once every year you should have your heating appliance serviced by a qualified service technician.

You should also have the chimney checked, and cleaned if necessary.

## INSTALLATION DATA

### **Note:**

This label is supplied in the package with the burner and should be filled out and affixed to the appliance when the conversion burner is installed.

ADJUSTMENT DATA TAG ANSI Z21-17b-1994		
INPUT C.F.H.		
MANIFOLD PRES.		
AIR DAMPER		
AIR/GAS RATIO No.		
FLUE GAS TEMP.		
O2 LEVEL %		
CO2 LEVEL %		
CO LEVEL P.P.M		
DATE :		
COMPLETED BY		
INSTALLATION CONTRACTOR		

## PROPANE BURNER APPLICATION

The burner leaves the factory to run on natural gas. It is available a kit, on request, that allows the burner to run on propane.

### TECHNICAL FEATURES


The thermal output and operating range of burners converted to use propane are the same as for burners running on natural gas.

#### GAS Family 3:

Net calorific value: 24 - 34 kWh/m<sup>3</sup>

21,000 ÷ 29,300 kcal/m<sup>3</sup>

Min. pressure 25 - max. 50 mbar.

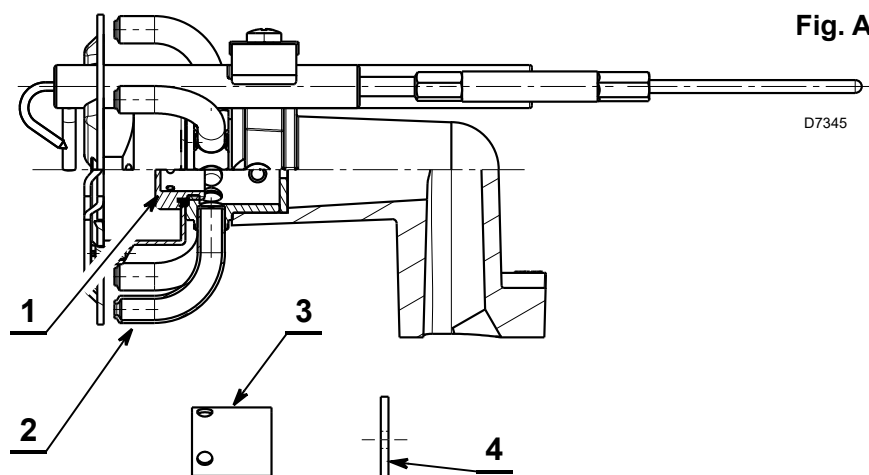

**Fig. A**

D7345

### LIST OF KIT'S COMPONENTS


Quantity	Component
1	Reducer
1	Diffuser 1,3
1	Adhesive label
1	Instruction
4	Diaphragm

### CONVERSION

On the combustion head of the burners, diaphragm (4) should be replaced, and natural gas nozzle (1) replaced with the one used for propane, and a reducer (3) should be added.

#### Proceed as follows, (fig. A):

- Disassemble the ignition electrode and the ionisation probe.
- Replace diaphragm (4) and replace natural gas nozzle (1) (marked 2) with the one supplied used for propane (marked 1.3).
- Remove the distributor - diffuser disc once the screws have been removed.
- Insert reducer (3), refit the distributor-diffuser disc and then tighten the fastening screws.
- Reassemble the electrode and the ionisation probe in the position foreseen in the instructions for the natural gas.
- Affix the adhesive label as illustrated in fig. B.

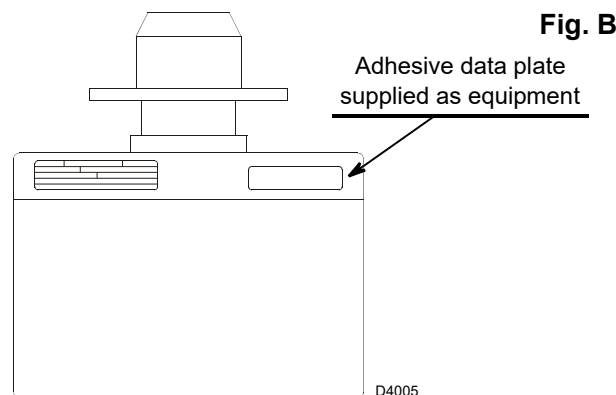

**Fig. B**

D4005

## SETTING UP THE BURNER

After burner output has been determined, use **TABLE** below **AS AN INITIAL GUIDE** for burner settings.

All settings in this table were obtained under the following conditions.

- 0 (zero) draft in the combustion zone;
- Standard lab test boiler;
- Inlet gas pressure range as in table;
- Steady state (HOT) operating conditions.

	Gas inlet pressure range	Diaphragm	Manifold gas pressure	Burner output	Head setting	Air gate setting
	"wc	Marking	"wc	Btu/hr	Nocth	Notch
PROPANE	12.0 - 14.0	B11	3.5	75,000	0	1.5
		B12		91,529	0	1.8
		B13		108,341	1	1.5
		B14		129,822	2	2
		B15		158,776	3	2.25
		B16		200,000	4	3.5

## SAFETY TEST - WITH GAS BALL VALVE CLOSED

It is fundamental to ensure the correct execution of the electrical connections between the gas solenoid valves and the burner to perform safely the commissioning.

For this purpose, after checking that the connections have been carried out in accordance with the burner's electrical diagrams, an ignition cycle with closed gas ball valve -dry test- must be performed.

- 1 The manual ball gas valve must be closed
- 2 The electrical contacts of the burner limit switch need to be closed
- 3 Ensures closed the contact of the low gas pressure switch
- 4 Make a trial for burner ignition.

The start-up cycle must be as follows:

- Starting the fan for pre-ventilation
- Performing the gas valve seal control, if provided
- Completion of pre-ventilation
- Arrival of the ignition point
- Power supply of the ignition transformer
- Electrical Supply of solenoid gas valves


Since the manual gas ball valve is closed, the burner will not light up and its control box will go to a safety lockout condition.

The actual electrical supply of the solenoid gas valves can be verified by inserting a tester. Some valves are equipped with light signals (or close/open position indicator) that turn on at the same time as their power supply.



**IF THE ELECTRICAL SUPPLY OF THE GAS VALVES OCCURS AT UNEXPECTED TIMES, DO NOT OPEN MANUAL GAS BALL VALVE, SWITCH OFF POWER LINE; CHECK THE WIRES; CORRECT THE ERRORS AND REPEAT THE COMPLETE TEST.**

## EXPLODED SPARE PARTS LIST

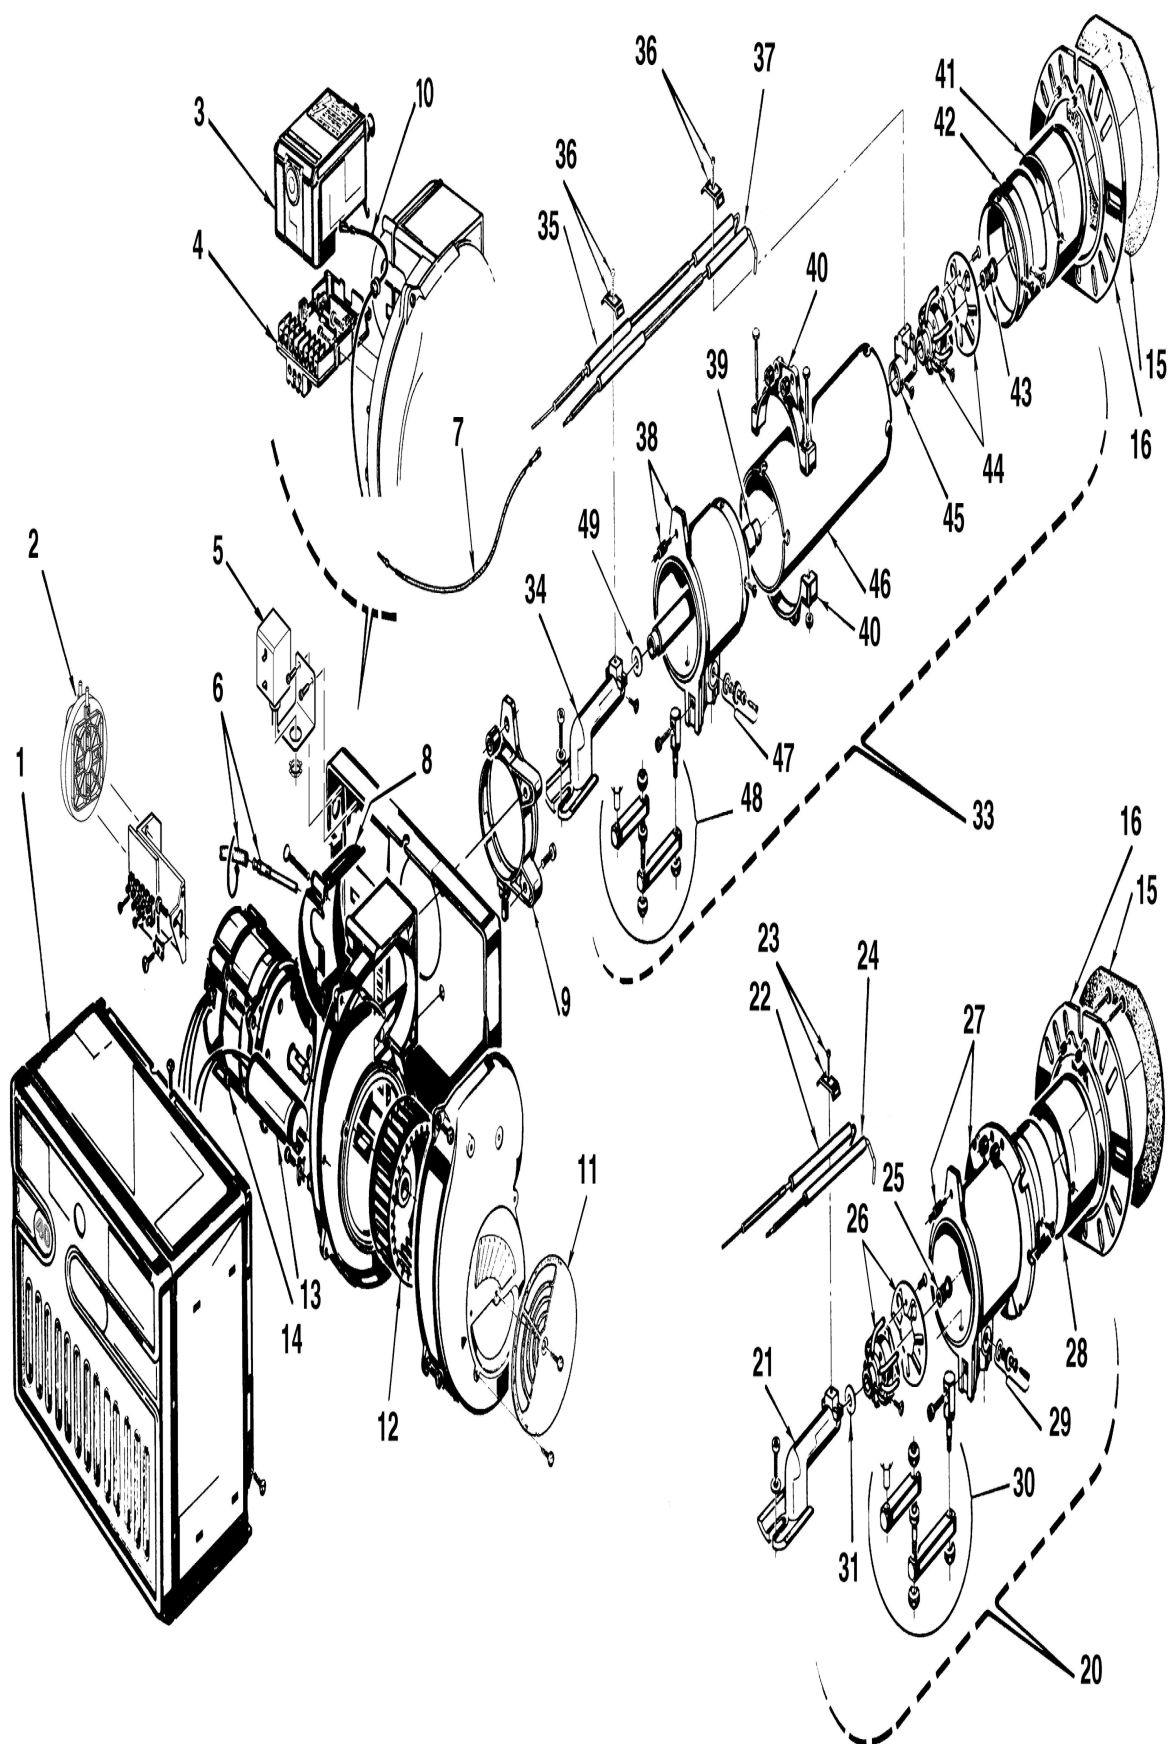

## SPARE PARTS LIST

No.	CODE	DESCRIPTION	
1	3007233	Burner back cover	
2	3020321	Air pressure switch	
3	3002307	Primary control sub-base	
4	3001162	Primary control box 525 SE/A	
5	3007305	C7020005	120/24 Volt transformer
6	3007288		Air switch tube and connector
7	3007310	Ionization lead	
8	3007292	Air tube cover plate	
9	3006687	Chassis mounting collar	
10	3007448	Ground lead and connector	
11	3007204	Manual air shutter (air gate)	
12	3005708	Fan	
13	20087022	Capacitor 10µF	
14	3005843	Burner motor	
15	3005856	Mounting gasket	
16	3005855	Universal mounting flange	
20	3950271	Short combustion head (278T1)	
21	3006695	Drawer assembly elbow	
22	3007273	Electrode assembly	
23	3007265	Electrode & ionization clamp	
24	3020205	Ionization assembly	
25	3006900	Natural gas diaphragm	
26	3006899	Distributor head and mixing plate	
27	3007297	Manifold	
28	3006394	End cone	
29	3005447	Gas test point	
30	3000870	Hinge assembly	
31	3020228	Drawer assembly diaphragm	
33	3950272	Long combustion head (278T2)	
34	3006695	Drawer assembly elbow	
35	3007274	Electrode assembly	
36	3007265	Electrode & ionization clamp	
37	3020206	Ionization assembly	
38	3007298	Manifold	
39	3007289	Natural gas tube	
40	3005854	Semi flange 2 required	
41	3006394	End cone	
42	3007281	End cone adapter	
43	3006900	Natural gas diaphragm	
44	3006899	Distributor head and mixing plate	
45	3007303	Electrode support	
46	3007284	Air tube -long	

No.	CODE	DESCRIPTION
47	<b>3005447</b>	Gas test point
48	<b>3000870</b>	Hinge assembly
49	<b>3020228</b>	Drawer assembly diaphragm

---

**ACCESSORIES AND GAS TRAIN**

---

C7010003	Mounting bracket transformer
C5850442	Honeywell VR8305M2102 solenoid

---

## BURNER START UP REPORT

Model number:	Serial number:
Project name:	Start-up date:
Installing contractor:	Phone number:

Model number:	Serial number:
Project name:	Start-up date:
Installing contractor:	Phone number:

<b>GAS OPERATION</b>			
Gas Supply Pressure:	CO <sub>2</sub> : Low Fire	High Fire	
Main Power Supply:	O <sub>2</sub> : Low Fire	High Fire	
Control Power Supply:	CO: Low Fire	High Fire	
Burner Firing Rate:	NO <sub>x</sub> : Low Fire	High Fire	
Manifold Pressure:	Net Stack Temp - Low Fire:	High Fire	
Pilot Flame Signal:	Comb. Efficiency - Low Fire:	High Fire	
Low Fire Flame Signal:	Overfire Draft:		
High Fire Flame Signal:			

<b>CONTROL SETTINGS</b>			
Operating Setpoint:	Low Oil Pressure:		
High Limit Setpoint:	High Oil Pressure:		
Low Gas Pressure:	Flame Safeguard Model Number:		
High Gas Pressure:	Modulating Signal Type:		

<b>NOTES</b>









---

# RIELLO

RIELLO S.p.A.  
I-37045 Legnago (VR)  
Tel.: +39.0442.630111  
[http:// www.riello.com](http://www.riello.com)

---

# RIELLO

35 Pond Park Road  
Hingham, Massachusetts,  
U.S.A. 02043

RIELLO BURNERS NORTH AMERICA

**<http://www.riello.ca>**

1-800-4-RIELLO

2165 Meadowpine Blvd  
Mississauga, Ontario  
Canada L5N 6H6