

# RTS 90÷1750 3S

EN INSTALLATION, TECHNICAL ASSISTANCE SERVICE AND SYSTEM MANAGEMENT MANUAL

# RIELLO

## RANGE

MODEL	CODE
RTS 90 3S	20042418
RTS 115 3S	20031973
RTS 166 3S	20031974
RTS 217 3S	20031976
RTS 255 3S	20031977
RTS 349 3S	20031978
RTS 448 3S	20031979
RTS 511 3S	20031980
RTS 639 3S	20042417
RTS 750 3S	20217448
RTS 850 3S	20044152
RTS 1160 3S	20047381
RTS 1450 3S	20047391
RTS 1750 3S	20204031
RTS 90 3S COMP	20113007
RTS 115 3S COMP	20113008
RTS 166 3S COMP	20113009
RTS 217 3S COMP	20113010
RTS 255 3S COMP	20113011
RTS 349 3S COMP	20113012
RTS 448 3S COMP	20113014
RTS 511 3S COMP	20113016
RTS 639 3S COMP	20113017
RTS 850 3S COMP	20113018
RTS 1160 3S COMP	20113019
RTS 1450 3S COMP	20113020

## ACCESSORIES

For a complete list of accessories and details of their compatibility, refer to the Catalogue.

Dear Customer,

Thank you for choosing a **RIELLO** boiler. You have purchased a modern, high efficiency, quality product that is designed to give dependable and safe service and to provide comfort in the home for many years to come. Arrange for your boiler to be serviced regularly by an authorised Technical Assistance Service **RIELLO**. Their personnel are specially trained to keep your boiler efficient and cheap to run. They also stock any original spare parts that might be required.

This instruction manual contains important instructions and precautions that must be observed to ensure the efficient functioning of your **RTS 3S** boiler.

Please accept our renewed thanks for your purchase  
Riello S.p.A.

## CONFORMITY

**RIELLO RTS 3S** boilers conform to:

- Ecodesign Directive 2009/125/CE for energy-related products
- Low Voltage Directive 2014/35/EU
- Models up to 400 kW conform to the Energy-Related Products Directive 2009/125/EC and to the EU Delegated Regulation 813/2013.

When used in conjunction with a CE marked jet burner, they also satisfy the requirements:

- Regulation (EU) 2016/426
- applicable sections of the Electromagnetic Compatibility Directive 2014/30/EU




At the end of its life, the product should be not be disposed of as solid urban waste, but rather it should be handed over to a differentiated waste collection centre.

# CONTENTS

<b>1 GENERAL INFORMATION</b> .....	<b>4</b>	<b>4 TECHNICAL ASSISTANCE SERVICE</b> .....	<b>42</b>
1.1 General Safety Information .....	4	4.1 Preparing for initial startup .....	42
1.2 Precautions .....	4	4.2 Initial startup .....	42
1.3 Description of the appliance .....	5	4.3 Checks during and after initial start-up .....	43
1.4 Control panels .....	5	4.4 Maintenance .....	45
1.5 Identification .....	5	4.5 Door opening .....	45
1.6 System layout .....	6	4.5.1 System A - RTS 90 ÷ 349 3S .....	45
1.7 Burner combination .....	7	4.5.2 System B - RTS 448 ÷ 1750 3S .....	45
1.7.1 Important notes for fitting the burner .....	10	4.6 Adjusting the door .....	46
1.7.2 Burner plate .....	11	4.6.1 System A - RTS 90 ÷ 349 3S .....	46
1.8 Technical specifications .....	12	4.6.2 System B - RTS 448 ÷ 1450 3S .....	46
		4.6.3 System C - RTS 1750 3S .....	46
<b>2 SYSTEM MANAGER</b> .....	<b>15</b>	4.7 Cleaning the boiler .....	47
2.1 Putting into service .....	15	4.8 External cleaning .....	48
2.2 Temporary shutdown .....	16	4.9 Troubleshooting .....	49
2.3 Preparing for extended periods of disuse .....	16		
2.4 Cleaning .....	17		
2.5 Maintenance .....	17		
2.6 Useful information .....	18		
<b>3 INSTALLER</b> .....	<b>19</b>		
3.1 Unpacking the product .....	19		
3.2 Overall dimensions and weights .....	20		
3.3 Handling .....	21		
3.3.1 With a hoist: RTS 90 ÷ 1750 3S .....	21		
3.3.2 With a forklift: RTS 1750 3S .....	21		
3.4 Place of installation .....	22		
3.4.1 Installation in older systems and systems requiring modernisation .....	22		
3.5 Location of sensors .....	23		
3.6 Water in central heating systems .....	24		
3.6.1 Use of antifreeze .....	25		
3.6.2 Glycol .....	25		
3.7 Water-side pressure drop .....	27		
3.8 Water connections .....	28		
3.8.1 Schematic diagram .....	29		
3.9 Anti-condensate pump .....	30		
3.10 Discharge of combustion products .....	31		
3.11 Door hinges .....	32		
3.12 Changing the direction of door opening .....	32		
3.12.1 System A - RTS 90 ÷ 349 3S .....	32		
3.12.2 System B - RTS 448 ÷ 1450 3S .....	35		
3.12.3 System C - RTS 1750 3S .....	36		
3.13 Earth connection .....	37		
3.14 Fitting the casing panels .....	38		
3.14.1 Models RTS 90 ÷ 639 3S .....	38		
3.14.2 Models RTS 750 ÷ 1450 3S .....	39		
3.14.3 Model RTS 1750 3S .....	40		
3.14.4 Applying nameplate label .....	41		









The following symbols are used in this manual:

 **CAUTION!** = Identifies actions that require caution and adequate preparation.

 **STOP!** = Identifies actions that you MUST NOT do.













## 1 GENERAL INFORMATION

### 1.1 General Safety Information

-  The boiler is delivered in separate crates. Check that it is complete, undamaged and as ordered as soon as you receive it. Report any discrepancies or damage to the **RIELLO** dealer who sold it.
-  This product must be installed by a legally qualified heating engineer. On completion of the installation, the installer must issue the owner with a declaration of conformity confirming that the installation has been completed to the highest standards in compliance with the instructions provided by **RIELLO** in this instruction manual, and that it conforms to all applicable laws and standards.
-  This product must only be used for the purpose for which it is designed and made, as specified by **RIELLO**. **RIELLO** declines all responsibility, contractual or other, for damage to property or injury to persons or animals caused by improper installation, adjustment, maintenance or use.
-  If you notice any water leaking from the boiler, disconnect it immediately from the mains electricity supply, shut off the water supply, and notify your local **RIELLO's** Technical Assistance Service or a qualified heating engineer immediately.
-  Periodically check that operating pressure in the water circuit is over 1 bar but below the maximum limit specified for the boiler. If this is not the case, contact Technical Assistance Service **RIELLO** or a professionally qualified heating engineer.
-  If the boiler is not going to be used for an extended period of time, perform the following operations:
  - Switch the boiler OFF at the control panel
  - Turn the main system switch "off"
  - Close the fuel cock and heating circuit water cock
  - Drain the central heating circuit if there is any risk of freezing.
-  The boiler must be serviced at least once a year.
-  This instruction manual is an integral part of the boiler. It must be kept safe and must ALWAYS accompany the boiler, even if it is sold to another owner or transferred to another user or to another installation. If you damage or lose this manual, order a replacement immediately from your local **RIELLO's** Technical Assistance Service.

### 1.2 Precautions

The operation of any appliance that uses fuel, electrical power and water demands that a number of fundamental safety precautions be respected:

-  It is forbidden to use electrical devices or equipment, such as switches, appliances, etc. if there is a smell of gas or unburnt products. If so:
  - Ventilate the room, opening doors and windows
  - Close the fuel shut-off cock
  - Report the fault immediately to the **RIELLO's** Technical Assistance Service or a professionally qualified heating engineer.
-  Do not touch the boiler while barefoot or wet.
-  Never clean or service the boiler without first disconnecting it from the mains electricity supply by turning the main power switch and the control panel switch OFF.
-  Do not tamper with or adjust the safety or control devices without prior authorisation and instructions from the manufacturer.
-  Do not plug or block the condensate drain outlet.
-  Never pull, disconnect, or twist the electrical cables coming from the appliance even if it is disconnected from the mains electricity supply.
-  Do not obstruct or restrict the vents in the room where the boiler is installed. Adequate ventilation is essential for correct combustion.
-  Do not expose the boiler to the elements. It is designed to work indoors.
-  Do not switch the boiler off if outdoor temperature drops below ZERO (risk of freezing).
-  Do not store containers of flammable substances in the room where the boiler is installed.
-  Do not allow children or persons with reduced physical, sensorial or mental abilities or with insufficient experience and knowledge to operate this system without proper supervision from the person responsible for its safe use.
-  Do not dispose of packaging material into the environment, or leave it within the reach of children, since it can become a potential hazard. Dispose of packaging material in compliance with applicable legislation.

### 1.3 Description of the appliance

**⚠ MODELS UP TO 400KW, IN COMBINATION WITH AN OIL BURNER, COMPLY WITH THE ECODESIGN DIRECTIVE FOR ENERGY-RELATED PRODUCTS 2009/125/CE AND THE DELEGATED REGULATION (EU) NO.813/2013**


**RIELLO RTS 3S** steel boilers are high efficiency triple flue pass boilers for central heating systems. When combined with a storage cylinder, they can also be used to produce domestic hot water. Because they operate at low pressure, they provide a gradual heating action without thermal shock.

- The most important technical features of these boilers are:
- The combustion chamber and heat exchange system are specially designed and shaped to achieve the best possible volume ratio;
  - Only top quality materials are used to ensure a long working life.

Stainless steel turbulators inside the flue gas pipes establish an ideal pressure inside the combustion chamber and an ideal flue gas temperature. Evenly distributed thermal load optimises the efficiency of the boiler-burner system. The boiler body is thoroughly insulated with a layer of high density glass wool. The boiler's front door and the flue gas box can be opened completely to facilitate the inspection, maintenance and cleaning of internal parts and to speed up servicing in general. The front door can open in either direction, even without removing the burner.

### 1.4 Control panels

The **RIELLO** control panels that can be used with **RIELLO RTS 3S** steel boilers are listed below. These control panels cater for all the needs of the heating system and of all the devices installed in it.

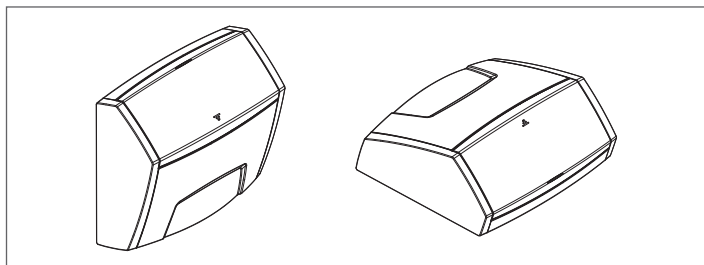

**RIELLOtech CLIMA COMFORT** for central heating (1 direct zone and 1 mixed zone) and domestic hot water production with a single stage burner. Also for controlling solar heating system and cascaded boiler systems.

**RIELLOtech CLIMA MIX** for controlling 1 additional mixed zone.

**RIELLOtech PRIME** for central heating only (1 direct zone) with a single or two stage burner.

**RIELLOtech PRIME ACS** for central heating (1 direct zone) and domestic hot water production with a single or two stage burner.


**⊖** When the **RIELLOtech CLIMA COMFORT** control panel is installed, there must be a sheath for fitting the relative sensor on the boiler's return line (cold water). For the accessories codes, refer to the Catalogue.

### 1.5 Identification

The products are identified by:

#### Serial number plate

This is located on the boiler body and specifies the serial number, model, and furnace power.

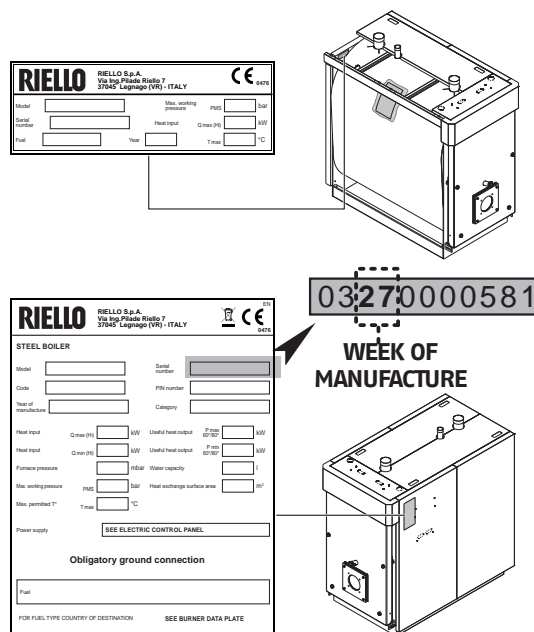


#### Data plate

This lists the technical specifications and performance of the product. It comes inside the documentation envelope. On completion of the installation, the installer **MUST** apply it in a clearly visible position at the top of one of the side panels. If you damage or lose this label, order a replacement immediately from **RIELLO's** Technical Assistance Service.

**⚠** There may be one or more data plates inside the document envelope. Identify the correct data plate to be applied according to the fuel supply.

**⚠** If these plates or any other means of clearly identifying the product are defaced, removed or lost, proper installation and servicing may be rendered difficult.

## 1.6 System layout

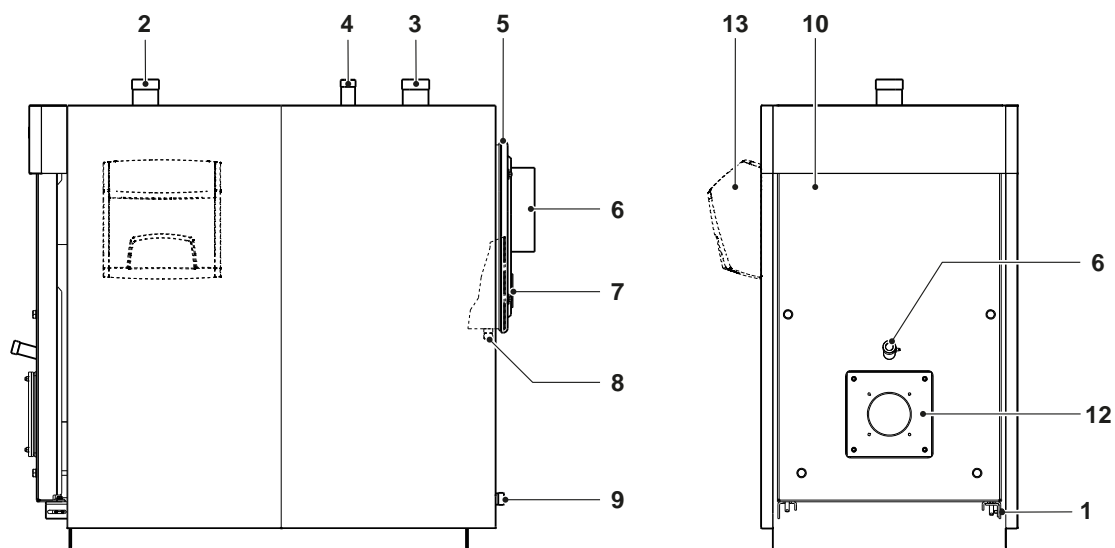

- 1 Door hinge
- 2 Central heating return
- 3 Central heating flow
- 4 Safety device fitting
- 5 Flue gas box
- 6 Flue gas exhaust
- 7 Door for cleaning flue gas chamber
- 8 Condensate outlet
- 9 Boiler drain
- 10 Front door
- 11 Flame inspection window
- 12 Burner plate
- 13 Electrical panel


## 1.7 Burner combination

BURNER Model	CALDAIA RTS 3S								Burner plate
	448	511	639	750	850	1160	1450	1750	
<b>GAS - TWO STAGE</b>									
RS 50	•	•							
RS 70			•	•					
RS 100				•(1)	•				
RS 130						•			
RS 130							•(*)		20178757
RS 150							•		
RS 190 TL								•	Series
RS 190/M TL								•	
RS 200/M BLU TL								•	
RS 200/E BLU								•	
<b>GAS - MODULATING MECHANICAL CAM</b>									
RS 55/M BLU (Low NOx)	•	•							4031196
RS 68/M BLU (Low NOx)	•	•	•	•					4031196
RS 120/M BLU (Low NOx)				•(1)	•	•			
RS 160/M BLU (Low NOx)							•		
RS 190/E BLU (Low NOx)								•	Series
RS 50/M MZ	•	•							
RS 70/M			•	•					
RS 100/M				•(1)	•	•			
RS 130/M						•			
RS 130/M							•(*)		20178757
RS 150/M									20178757
RS 190/M TL								•	Series
RS 200/M TL								•	Series
<b>GAS - MODULATING ELECTRONIC CAM</b>									
RS 55/E BLU t.c. (Low NOx)	•	•							4031196
RS 68/E BLU t.c. (Low NOx)	•	•	•						4031196
RS 68/E BLU t.c. (Low NOx)				•					4031197
RS 120/E BLU t.c. (Low NOx)				•(1)	•	•			
RS 160/E BLU t.c. (Low NOx)							•		
RS 200/E BLU								•(2)	


(\*) To be used only for max Heat Output 1300 kW.

(1) For altitudes over 1800 meters


(2) To replace on the burner head fitted as standard


 Please refer to the Manufacturer's catalogue for the burner code and the accessories required.


 The combinations were obtained with the working point at 3% of O<sub>2</sub>.

 Please refer to the instruction manual supplied with your burner for burner installation, electrical connections and necessary adjustments.

 Extended heads and burner plates are required for correct installation and optimal burner/boiler combinations.

 To assemble/disassemble the burners equipped with recirculation tube, it might be necessary to remove the latter before carrying out such operations (strictly comply with the use and maintenance manual of the burner).

 In the case of two-stage burners, the capacity of the 1st stage must be at least 70% of the total capacity. For liquid fuel burners equipped with 2 nozzles, the first stage nozzle must be selected appropriately.

 Please be reminded that in Italy, the Prime Ministerial Decree of 2 October 1995 requires the use of fuel oil with a sulphur content of less than 0.3% by weight for thermal systems with a heat output of less than 3 MW. Please refer to the legislation in force in the country of installation.

BURNER Model	CALDAIA RTS 3S														Burner plate
	90	115	166	217	255	349	448	511	639	750	850	1160	1450	1750	
<b>OIL - TWO STAGE</b>															
BG6.1D	•(R)														
BG7.1D		•(R)													
RL25 BLU			•(R)	•(R)											4031198
RL35 BLU					•(R)										20199147
RL 42 BLU (Low NOx)						•		•(R)							4031188
RL 50							•	•							
RL 70									•	•					
RL 100											•				
RL 130												•			
RL 130													•		20178757
RL 190 TC														•(2)	
RL 190/M TL														•	
<b>OIL - MODULATING</b>															
RL 50/M							•	•							
RL 70/M									•	•					
RL 100/M											•	•			
RL 130/M													•		20178757
RL 55/M BLU (Low NOx)							•	•	•						4031196
RL 85/M BLU (Low NOx)									•(1)	•	•				4031196 (1)

**(R)** Reference burner used during performance qualification tests to derive the technical data declared.

**(1)** For altitudes over 1800 meters

**(2)** To replace on the burner head fitted as standard

**⚠** Please refer to the Manufacturer's catalogue for the burner code and the accessories required.

**⚠** The combinations were obtained with the working point at 3% of O<sub>2</sub>.

**⚠** Please refer to the instruction manual supplied with your burner for burner installation, electrical connections and necessary adjustments.

**⚠** Extended heads and burner plates are required for correct installation and optimal burner/boiler combinations.








**⚠** To assemble/disassemble the burners equipped with recirculation tube, it might be necessary to remove the latter before carrying out such operations (strictly comply with the use and maintenance manual of the burner).

**⚠** In the case of two-stage burners, the capacity of the 1st stage must be at least 70% of the total capacity. For liquid fuel burners equipped with 2 nozzles, the first stage nozzle must be selected appropriately.

**⚠** Please be reminded that in Italy, the Prime Ministerial Decree of 2 October 1995 requires the use of fuel oil with a sulphur content of less than 0.3% by weight for thermal systems with a heat output of less than 3 MW. Please refer to the legislation in force in the country of installation.

BURNER Model	CALDAIA RTS 3S														Burner plate
	90	115	166	217	255	349	448	511	639	750	850	1160	1450	1750	
<b>GAS/OIL - TWO STAGE</b>															
RLS 28			•	•											4031198
RLS 28					•										Series
RLS 38						•									Series
RLS 50							•								Series
RLS 70								•	•	•					Series
RLS 100										•(1)	•				Series
RLS 120/M MX TC											•				Series
RLS 160/M MX TC												•			Series
<b>GAS/OIL - TWO-STAGE DIESEL OIL DATA</b>															
RLS 190/M MZ												•	•		20047680
RLS 190/M MZ														•	Series
RLS 250/M MZ														•	Series
<b>GAS/OIL - TWO-STAGE DIESEL OIL DATA</b>															
RLS 310/M MX (Low NOx)														•	20163867
RLS 310/E MX (Low NOx)														•	20163867

(1) For altitudes over 1800 meters


-  Please refer to the Manufacturer's catalogue for the burner code and the accessories required.
-  The combinations were obtained with the working point at 3% of O<sub>2</sub>.
-  Please refer to the instruction manual supplied with your burner for burner installation, electrical connections and necessary adjustments.
-  Extended heads and burner plates are required for correct installation and optimal burner/boiler combinations.
-  To assemble/disassemble the burners equipped with recirculation tube, it might be necessary to remove the latter before carrying out such operations (strictly comply with the use and maintenance manual of the burner).
-  In the case of two-stage burners, the capacity of the 1st stage must be at least 70% of the total capacity. For liquid fuel burners equipped with 2 nozzles, the first stage nozzle must be selected appropriately.
-  Please be reminded that in Italy, the Prime Ministerial Decree of 2 October 1995 requires the use of fuel oil with a sulphur content of less than 0.3% by weight for thermal systems with a heat output of less than 3 MW. Please refer to the legislation in force in the country of installation.

### 1.7.1 Important notes for fitting the burner

Before fixing the burner to the boiler, make sure that:

- The door opens the right way (see the relevant sections for details on how to reverse the door)
- The length (L) of the burner fixing bolts is less than (S), i.e. the total depth of the seal, plates and washer. **Longer bolts can cause the door to warp, compromising its ability to seal the boiler hermetically and permitting the release of combustion fumes.**

To ensure correct burner installation, also refer to the burner's own manual.

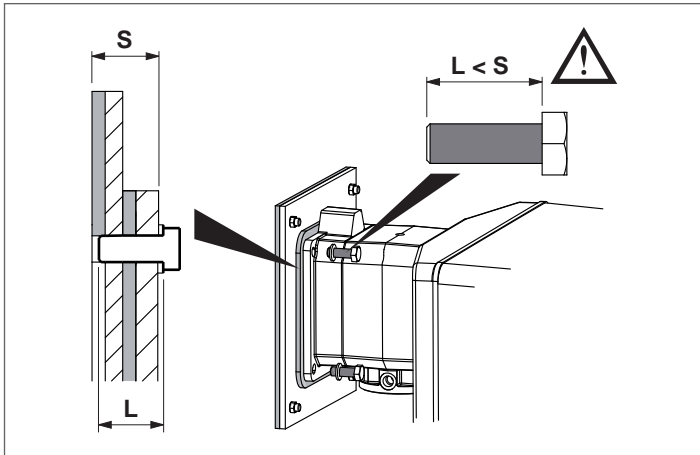


**!** Please refer to the instruction manual supplied with your burner for indications on the drilling of the burner plate insulation, burner installation, electrical connections and necessary adjustments. For two-stage burners, the capacity of the 1st stage must be at least 70% of the total capacity.

If you are installing a new boiler but re-using an old burner, always perform the following checks:

- Make sure that the performance of the old burner is adequate for the requirements of the boiler
- Make sure that the length and diameter of the burner nozzle are as specified in the following table.

**!** When you finish installing the burner in the boiler, fill the gap between the burner's blast tube and the refractory material in the door with the ceramic insulation (A) supplied with the boiler.

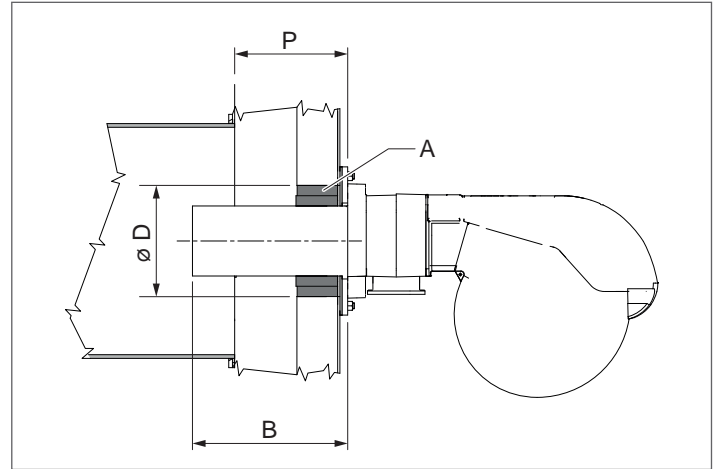

		BOILER RTS 3S						
		90	115	166	217	255		
B	Burner head	min	128	128	128	128	155	mm
D	Door hole diameter		140	140	162	162	180	∅ mm
P	Door thickness		93	93	93	93	103	mm


		BOILER RTS 3S						
		349	448	511	639	750		
B	Burner head	min	155	195	195	200	200	mm
D	Door hole diameter		180	220	220	220	230	∅ mm
P	Door thickness		103	118	118	119	119	mm

		BOILER RTS 3S					
		850	1160	1450	1750		
B	Burner head	min	200	205	205	300	mm
D	Door hole diameter		230	370	370	520	∅ mm
P	Door thickness		119	119	119	140	mm

**⊖** The use of burners with a head length shorter than the depth (P) of the inspection door is prohibited.

## 1.7.2 Burner plate

RIELLO RTS 3S boilers are equipped as standard with drilled burner plates for housing the recommended burners. The table below shows the characteristics of the holes.

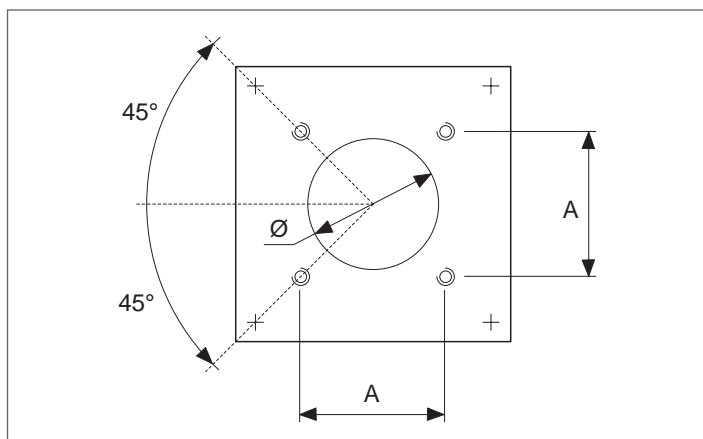

	BOILER RTS 3S				
	90	115	166	217	255
Ø (mm)	130	130	140	140	165
A (mm)	120	120	130	130	158
Threads	M8	M8	M8	M8	M8

	BOILER RTS 3S				
	349	448	511	639	750
Ø (mm)	165	165	165	185	205
A (mm)	158	158	158	195	195
Threads	M8	M8	M8	M12	M12

	BOILER RTS 3S				
	639	850	1160	1450	1750
Ø (mm)	185	205	205	230	250
A (mm)	195	195	195	260	260
Threads	M12	M12	M12	M16	M16

## 1.8 Technical specifications


DESCRIZIONE	CALDAIA RTS 3S							
	90	115	166	217	255	349		
Device type	Heating							
Fuel	B23							
Device category	Oil							
	See Burner							
Max. nominal thermal capacity (Q max)	NCV	90	115	166	217	255	349	kW
	GCV	95	122	176	230	270	370	
Min. nominal thermal capacity (Q min)	NCV	70	80	115	166	217	255	kW
	GCV	74	84,8	122	176	230	270	
Rated useful heat output (80/60°C) P4	max	85	108	157	207	244	335	kW
Nominal useful output (80/60°C) (Pn min)	min	67	76	110	159	206	243	kW
30% heat output with return at 37°C (P1)		24	29	42	57	71	90	kW
Seasonal energy efficiency $\eta_s$		89	89	89	90	90	90	%
Efficiency at nominal thermal capacity and high temperature operation $\eta_4$ (80/60°C)	NCV	94,5	94,2	94,8	95,6	95,7	95,9	%
	GCV	89,1	88,8	89,4	90,2	90,3	90,4	%
Useful efficiency at Pn min (80/60°C)	NCV	95,2	95	95,3	95,6	95	95,3	%
	GCV	89,8	89,6	89,9	90,2	89,6	89,9	%
Efficiency at 30% nominal thermal capacity and low temperature operation $\eta_1$ with 37°C return	NCV	99,7	99,8	99,9	99,9	99,8	99,8	%
	GCV	94	94,1	94,2	94,2	94,1	94,1	%
Heat loss in standby mode		240	300	360	430	500	600	W
Flue gas temperature		<130 (**)						°C
Emissions at max. heat input Nox (0% O <sub>2</sub> )		<120 (*)						mg/kWh
Flue gas mass flow rate (Max. Pn) (**)		0,040	0,051	0,074	0,096	0,113	0,155	Kg/s
Furnace pressure		1,0	1,4	1,8	2,7	2,9	3,6	mbar
Furnace volume		75	121	176	176	240	296	dm <sup>3</sup>
Tot. volume of flue gas side		112	176	253,5	261,5	357,5	443	dm <sup>3</sup>
Total surface area for heat exchange		3,77	5,32	7,34	8,16	10,06	12,88	m <sup>2</sup>
Volumetric thermal load (Pn Max)		1203	947	941	1229	1066	1180	kW/m <sup>3</sup>
Specific thermal load (Pn Max)		22,6	20,4	21,4	25,4	24,3	26,0	kW/m <sup>2</sup>
Max. operating pressure		6						bar
Maximum permitted temperature		110						°C
Maximum operating temperature		95						°C
Minimum admissible water return temperature		37						°C
Pressure drops	$\Delta T$ 10°C	24	29	31	50	47	81	mbar
	$\Delta T$ 20°C	7	6	6	12	14	21	mbar
Water capacity		176	255	319	309	408	495	l
Consumption at full load (Elmax)		430	450	460	660	660	760	W
Consumption at part load (Elmin)		151	158	161	231	231	266	W
Electrical consumption in standby mode (PSB)		20	20	20	20	20	20	W


**NCV** Net calorific value of fuel


**GCV** Gross calorific value of fuel

(\*) Value according to EN267 (nitrogen content in light oil =140mg/kg)


(\*\*) Flue gas temperature with boiler in operation 80/60°C and ambient temperature 20-25°C.

 The stack must guarantee the minimum draught specified by applicable technical standards, assuming zero pressure at the connection to the flue.

 Values obtained in conjunction with oil burners **RIELLO** calibrated with CO<sub>2</sub> = 12,5%

 In combination with an oil burner, **RTS 3S** <400kW boilers comply with:

- Ecodesign Directive for energy-related products 2009/125/EC
- Delegated regulation (EU) no. 813/2013

 **WARNING:** If coupled with low NO<sub>x</sub> emission diesel burners compliant with the 2018 ErP Directive, the generators are able to operate with nitrogen oxide emissions below the limits required by said Directive.

DESCRIZIONE		CALDAIA RTS 3S							
		90 (*)	115 (*)	166 (*)	217 (*)	255 (*)	349 (*)		
Device type		Heating							
		B23							
Fuel		Gas							
Device category		See Burner							
Max. nominal thermal capacity (Q max)	NCV	90	115	166	217	255	349	kW	
	GCV	100	128	184	241	283	388		
Min. nominal thermal capacity (Q min)	NCV	70	80	115	166	217	255	kW	
	GCV	78	89	128	184	241	283		
Rated useful heat output (80/60°C) P4		max	85	108	157	207	244	335	kW
Nominal useful output (80/60°C) (Pn min)		min	67	76	110	159	206	243	kW
30% heat output with return at 47°C (P1)			24	29	42	57	70	89	kW
Efficiency at nominal thermal capacity and high temperature operation $\eta_4$ (80/60°C)	NCV	94,5	94,2	94,8	95,6	95,7	95,9	%	
	GCV	85,1	84,8	95,3	86,1	86,2	86,3	%	
Useful efficiency at Pn min (80/60°C)	NCV	95,2	95	95,3	95,6	95	95,3	%	
	GCV	85,7	85,5	85,8	86,1	85,5	85,8	%	
Efficiency at 30% nominal thermal capacity $\eta_1$ with 47°C return	NCV	98,5	98,5	98,5	98,5	98,5	98,5	%	
	GCV	88,7	88,7	88,7	88,7	88,7	88,7	%	
Heat loss in standby mode			240	300	360	430	500	600	W
Flue gas temperature		<130 (**)						°C	
Emissions at max. heat input Nox (0% O <sub>2</sub> )		See burner type						mg/kWh	
Flue gas mass airflow (Pn Max)		0,034	0,043	0,062	0,082	0,096	0,131	Kg/s	
Furnace pressure		1,0	1,4	1,8	2,7	2,9	3,6	mbar	
Furnace volume		75,0	121,0	176,0	176,0	240,0	296,0	dm <sup>3</sup>	
Tot. volume of flue gas side		112	176	2.535	2.615	3.575	443	dm <sup>3</sup>	
Total surface area for heat exchange		3,8	5,3	7,3	8,2	10,1	12,9	m <sup>2</sup>	
Volumetric thermal load (Pn Max)		1203	947	941	1.229	1.066	1.180	kW/m <sup>3</sup>	
Specific thermal load (Pn Max)		22,6	20,4	21,4	25,4	24,3	26,0	kW/m <sup>2</sup>	
Max. operating pressure		6						bar	
Maximum permitted temperature		110						°C	
Maximum operating temperature		95						°C	
Minimum admissible water return temperature		50						°C	
Pressure drops	$\Delta T$ 10°C	24	29	31	50	47	81	mbar	
	$\Delta T$ 20°C	7	6	6	12	14	21	mbar	
Water capacity		176	255	319	309	408	495	l	

**NCV** Net calorific value of fuel

**GCV** Gross calorific value of fuel

(\*) Heating appliance intended only for replacement in accordance with the provisions of article 1, paragraph 2, point G of the EU regulation No. 813/2013.

(\*\*) Flue gas temperature with boiler in operation 80/60°C and ambient temperature 20–25°C.

 Values obtained with gas burners **RIELLO** calibrated with CO<sub>2</sub> = 9,7% and  $\lambda$  = 1,2.

DESCRIZIONE		BOILER RTS 3S									
		448	511	639	750	850	1160	1450	1750		
Device type		Heating									
Fuel		B23									
Device category		Gas/Oil									
		See Burner									
Max. nominal thermal capacity (Q max)	NCV	448	511	639	749	850	1160	1450	1750	kW	
	GCV Gas	498	568	710	832	944	1289	1611	1944		
	GCV Oil	475	542	678	794	901	1230	1538	1856		
Min. nominal thermal capacity (Q min)	NCV	349	448	511	639	639	850	1160	1450	kW	
	GCV Gas	388	498	568	710	710	944	1289	1611		
	GCV Oil	370	475	542	678	678	901	1230	1538		
Rated useful heat output (80/60°C) P4		max	430	490	613	718	815	1112	1391	1678	kW
Nominal useful output (80/60°C) (Pn min)		min	333	427	487	609	609	810	1105	1382	kW
30% heat output with return at 47°C (P1)			118	142	170	205	220	297	386	473	kW
Efficiency at nominal thermal capacity and high temperature operation $\eta_4$ (80/60°C)	NCV	95,9	95,9	95,9	95,9	95,9	95,9	95,9	95,9	%	
	GCV Gas	86,3	86,3	86,3	86,3	86,3	86,3	86,3	86,3		
	GCV Oil	90,4	90,4	90,4	90,4	90,4	90,4	90,4	90,4		
Useful efficiency at Pn min (80/60°C)	NCV	95,3	95,3	95,3	95,3	95,3	95,3	95,3	95,3	%	
	GCV Gas	85,8	85,8	85,8	85,8	85,8	85,8	85,8	85,8		
	GCV Oil	89,9	89,9	89,9	89,9	89,9	89,9	89,9	89,9		
Efficiency at 30% nominal thermal capacity $\eta_1$ with 47°C return	NCV	98,5	98,5	98,5	98,5	98,5	98,5	98,5	98,5	%	
	GCV Gas	88,7	88,7	88,7	88,7	88,7	88,7	88,7	88,7		
	GCV Oil	92,9	92,9	92,9	92,9	92,9	92,9	92,9	92,9		
Heat loss in standby mode			850	1000	1200	1500	1700	1950	2050	2100	W
Flue gas temperature		<130 (*)								°C	
Emissions at max. heat input Nox (0% O <sub>2</sub> )		See burner type								mg/kWh	
Flue gas mass flow rate (Max. Pn) G20 (*)		0,169	0,192	0,241	0,282	0,32	0,437	0,546	0,659	Kg/s	
Flue gas mass flow rate (Max. Pn) DIESEL (*)		0,199	0,227	0,284	0,333	0,378	0,516	0,644	0,778	Kg/s	
Furnace pressure		2,9	5,4	5,2	5,4	6,7	3,9	4,6	5,9	mbar	
Furnace volume		453	453	613	812	812	1065	1297	1593	dm <sup>3</sup>	
Tot. volume of flue gas side		682	682	899	1209	1209	1656	2088	2410	dm <sup>3</sup>	
Total surface area for heat exchange		18,58	18,58	23,45	30,6	30,60	40,40	51,82	62,95	m <sup>2</sup>	
Volumetric thermal load (Pn Max)		988	1127	1043	922	1046	1089	1118	1099	kW/m <sup>3</sup>	
Specific thermal load (Pn Max)		23,0	26,3	26,0	23,4	26,5	27,4	26,7	26,5	kW/m <sup>2</sup>	
Max. operating pressure		6								bar	
Maximum permitted temperature		110								°C	
Maximum operating temperature		95								°C	
Minimum admissible water return temperature		50								°C	
Pressure drops	$\Delta T$ 10°C	76	97	56	37	46	83	83	132	mbar	
	$\Delta T$ 20°C	22	23	17	13	15	22	25	30	mbar	
Water capacity		655	655	899	1193	1193	1537	2111	2405	l	

**NCV** Net calorific value of fuel

**GCV** Gross calorific value of fuel

**(\*)** Flue gas temperature with boiler in operation 80/60°C and ambient temperature 20–25°C.

**⚠** The stack must guarantee the minimum draught specified by applicable technical standards, assuming zero pressure at the connection to the flue.

**⚠** Values obtained with gas burners **RIELLO** calibrated with CO<sub>2</sub> = 9,7%,  $\lambda$  = 1,2 and with diesel burners **RIELLO** calibrated with CO<sub>2</sub> = 12,5%.

## 2 SYSTEM MANAGER


### 2.1 Putting into service

Have **RIELLO's** Technical Assistance Service start up your **RIELLO RTS 3S** boiler for the first time. Once this has been done, the boiler can be left to function automatically.

Under certain circumstances, such as after long periods of disuse, the service engineer responsible for the boiler may need to re-start it without involving the Technical Assistance Service.

To do so, perform the following checks and operations:


- check that the gas cock and heating water cock are open;
- check that the pressure of the hydraulic circuit when cold is always **greater than 1 bar** and less than the maximum limit permitted for the appliance;

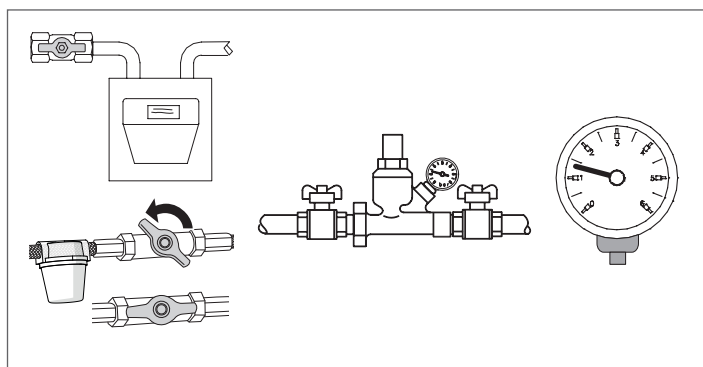


- turn the system's main power switch ON;
- if the system is equipped with a temperature controller or timer thermostat, make sure that it is switched on;




- Turn the control panel power switch ON and make sure that the green power indicator lights;

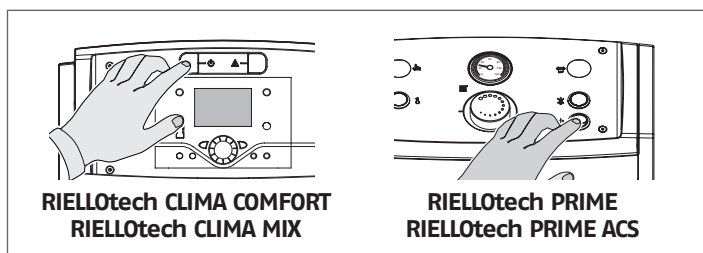

- make the necessary settings as instructed in the instruction manual for your control panel;

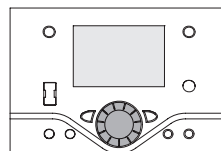

**RIELLOtech CLIMA COMFORT**  
**RIELLOtech CLIMA MIX**

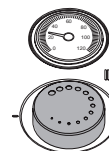


**RIELLOtech PRIME**  
**RIELLOtech PRIME ACS**

- adjust the timer thermostat/s or temperature controller to the desired temperature (~20°C).


The burner should now ignite and remain in operation until the set temperature is reached.

Subsequent starts and stops will be made automatically according to the desired temperature without the need for further intervention.

If any ignition faults or malfunctions occur, the burner performs a "LOCKOUT SHUTDOWN". This is shown by the red button light on the burner and by the warning light on the control panel.

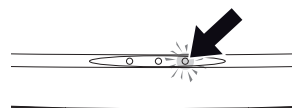

**RIELLOtech CLIMA COMFORT**  
**RIELLOtech CLIMA MIX**

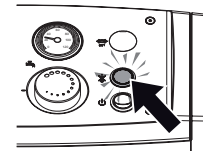

**RIELLOtech PRIME**  
**RIELLOtech PRIME ACS**

**!** If a "LOCKOUT SHUTDOWN" occurs, wait about 30 seconds before resetting the burner.

To reset the burner, press the red button light on the burner and wait until the flame ignites.


Repeat this operation 2-3 times at the most. If the problem persists after that, call **RIELLO's** Technical Assistance Service.

If the problem persists, check that the safety thermostat has not tripped.


**!** If the safety thermostat trips, the boiler shuts down and a warning is displayed on the control panel (if present).

Proceed as follows to reset the safety thermostat:

- Wait until boiler temperature falls below 80°C;
- Remove the safety thermostat cover;
- Press the manual reset button;
- Wait for the complete ignition cycle to be repeated and for the flame to ignite.

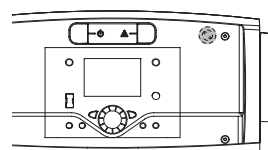

**RIELLOtech CLIMA COMFORT**  
**RIELLOtech CLIMA MIX**

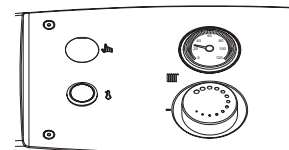


**RIELLOtech PRIME**  
**RIELLOtech PRIME ACS**


## 2.2 Temporary shutdown

If you need to shut down the system for a short period, proceed as follows:

- turn the control panel power switch OFF and make sure that the green power indicator goes out;

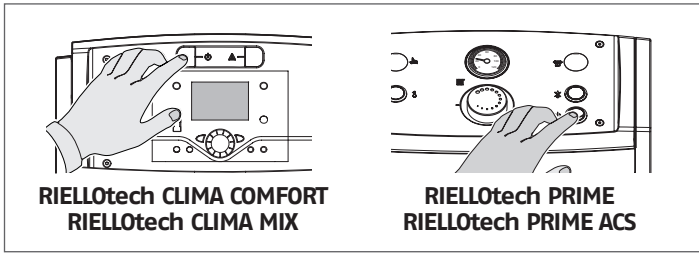


- turn the mains power switch OFF;

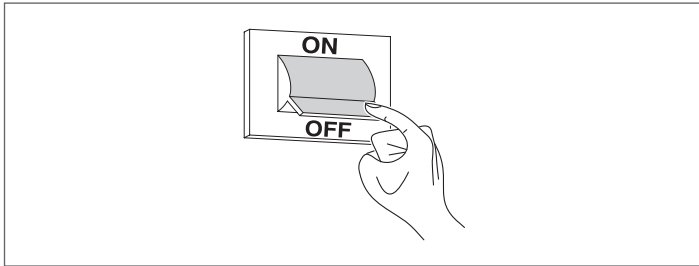


**⚠** Do NOT perform this procedure if outdoor temperature falls below ZERO (risk of freezing).

Then proceed as follows:

- make the necessary settings as instructed in the instruction manual for your control panel;

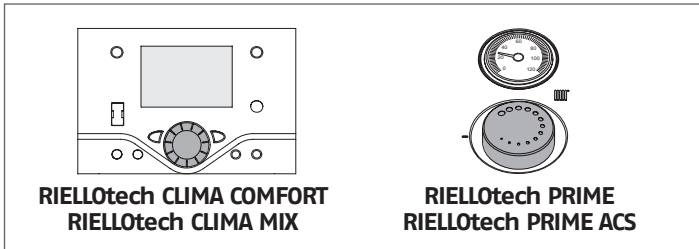


- make sure that the temperature controller or timer / room thermostat is set to "frost protection" mode.

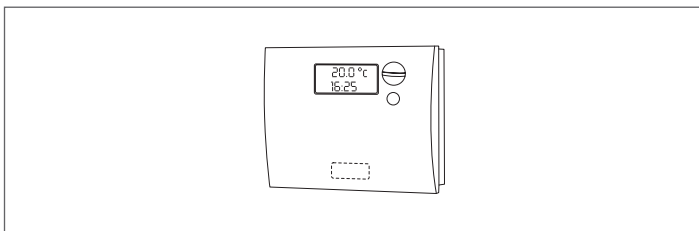


## 2.3 Preparing for extended periods of disuse

If the boiler is not going to be used for an extended period of time, perform the following operations:


- Turn the control panel power switch OFF and make sure that the green power indicator goes out

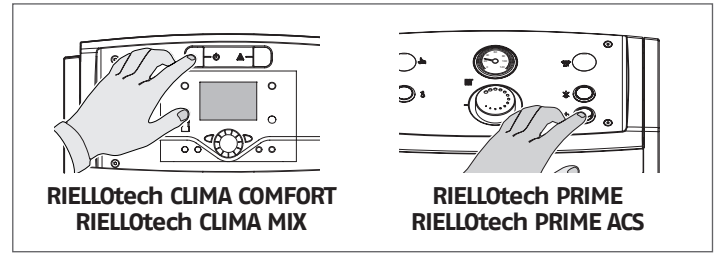

- Turn the main system switch "off"

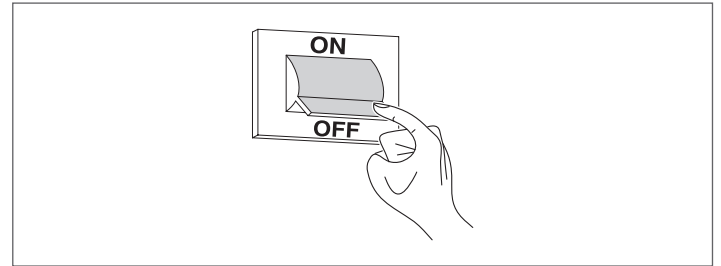

- Close the fuel cock and heating circuit water cock;

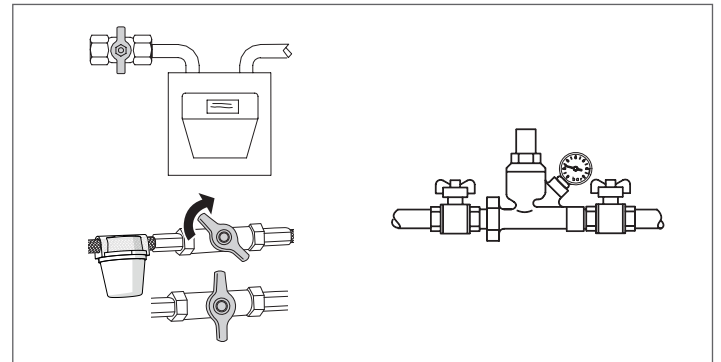

- Drain the central heating circuit if there is any risk of freezing.




**⚠** Contact your local **RIELLO** Technical Assistance Service if you encounter any problems in completing the above procedure.

## 2.4 Cleaning

---

Use a cloth dampened in soapy water to clean the boiler's external casing.

To remove stubborn marks, use a cloth dampened in a 50% mix of water and denatured alcohol or a suitable cleaning product. Carefully dry after cleaning.

-  Do not use abrasive cleaning pads or powder detergents.
-  Never clean the boiler without first disconnecting it from the mains electricity supply by turning the mains power switch and the control panel switch OFF.
-  The combustion chamber and flue pipes must be cleaned periodically by Technical Assistance Service or by a qualified heating engineer (see page 47).

## 2.5 Maintenance

---

Please remember that THE PERSON RESPONSIBLE FOR SYSTEM MANAGEMENT MUST ENSURE THAT PROFESSIONALLY QUALIFIED HEATING ENGINEERS UNDERTAKE PERIODIC MAINTENANCE AND COMBUSTION EFFICIENCY MEASUREMENTS.

**RIELLO's** Technical Assistance Service is qualified to satisfy these legal requirements and can also provide useful information on MAINTENANCE PROGRAMMES designed to guarantee:

- Greater safety
- Compliance with applicable legislation
- Freedom from the risk of fines in the event of spot checks.

Regular maintenance is essential for the safety, efficiency and durability of the boiler.

Servicing is a legal requirement and must be performed at least once a year by a professionally qualified heating engineer.




### 3 INSTALLER

#### 3.1 Unpacking the product



RTS 3S RIELLO boilers are delivered in 3 separate packages:

- 1 **THE BOILER BODY** inside the protective cover (A), includes:
  - Ceramic insulation (B);
  - Document pouch (C) containing:
    - Instruction manual;
    - Technical data plate adhesive (to be applied to the panelling when installing the boiler);
    - Warranty Certificate and Hydraulic Test Certificate;
    - Labels with Bar Code.


**⚠ DO NOT START THE BOILER UNTIL THE OPERATIONS INDICATED ON THE RED LABEL ON THE FLAME VIEWER HAVE BEEN CARRIED OUT.**

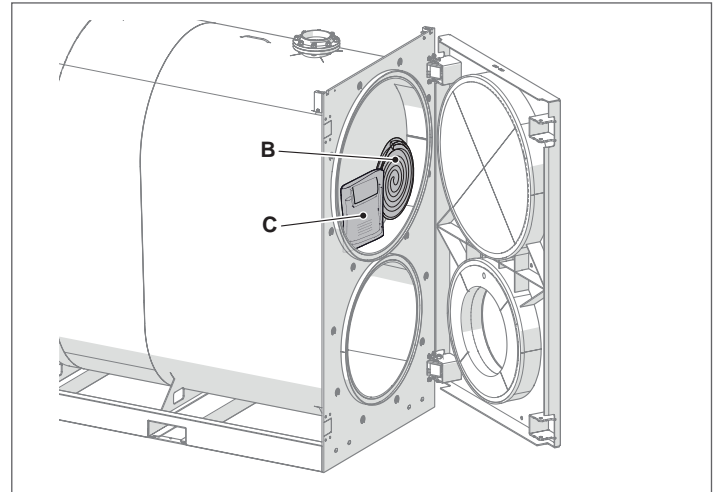

- 2 **THE PANELLING**, complete with the assembly accessories, inside a protective cardboard box and a wooden crate.

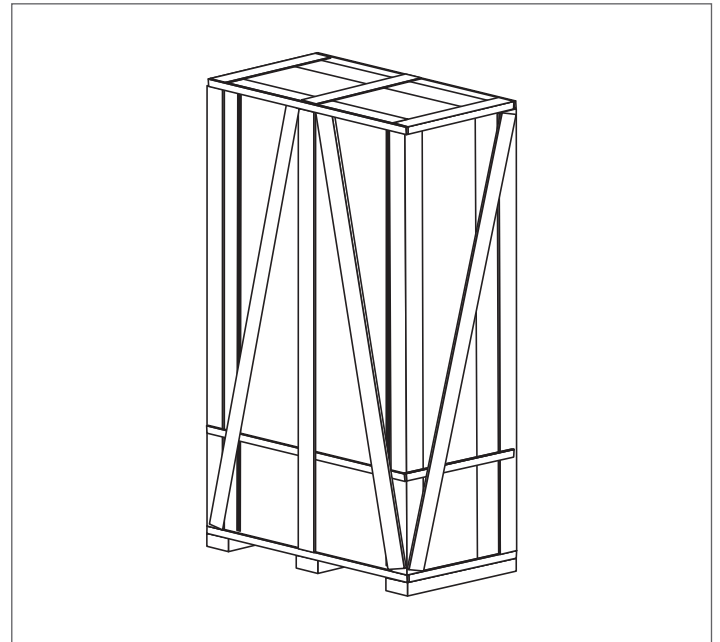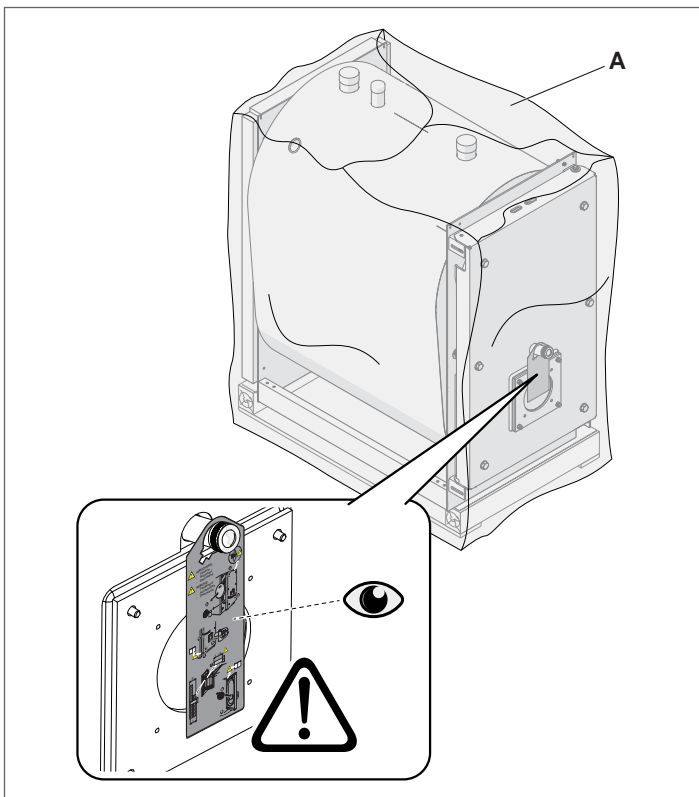


- 3 **FRONT PANEL** to be applied on the front door.

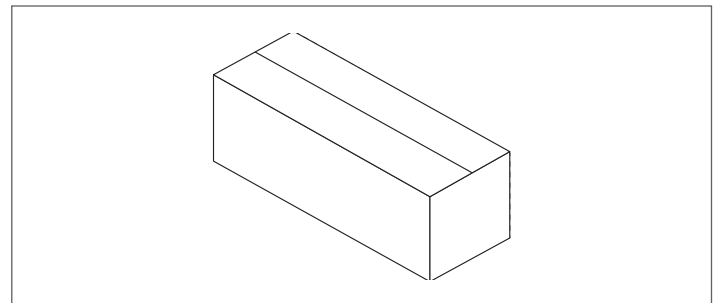

**⚠ THE INSTRUCTION MANUALS ARE AN INTEGRAL PART OF THE BOILER, THEREFORE WE RECOMMEND TO READ AND KEEP THEM WITH CARE.**

**⚠** The operation of the **RTS 3S RIELLO** boilers is conditional on the use of a control panel as indicated in section "Control panels" on page 5.

### 3.2 Overall dimensions and weights

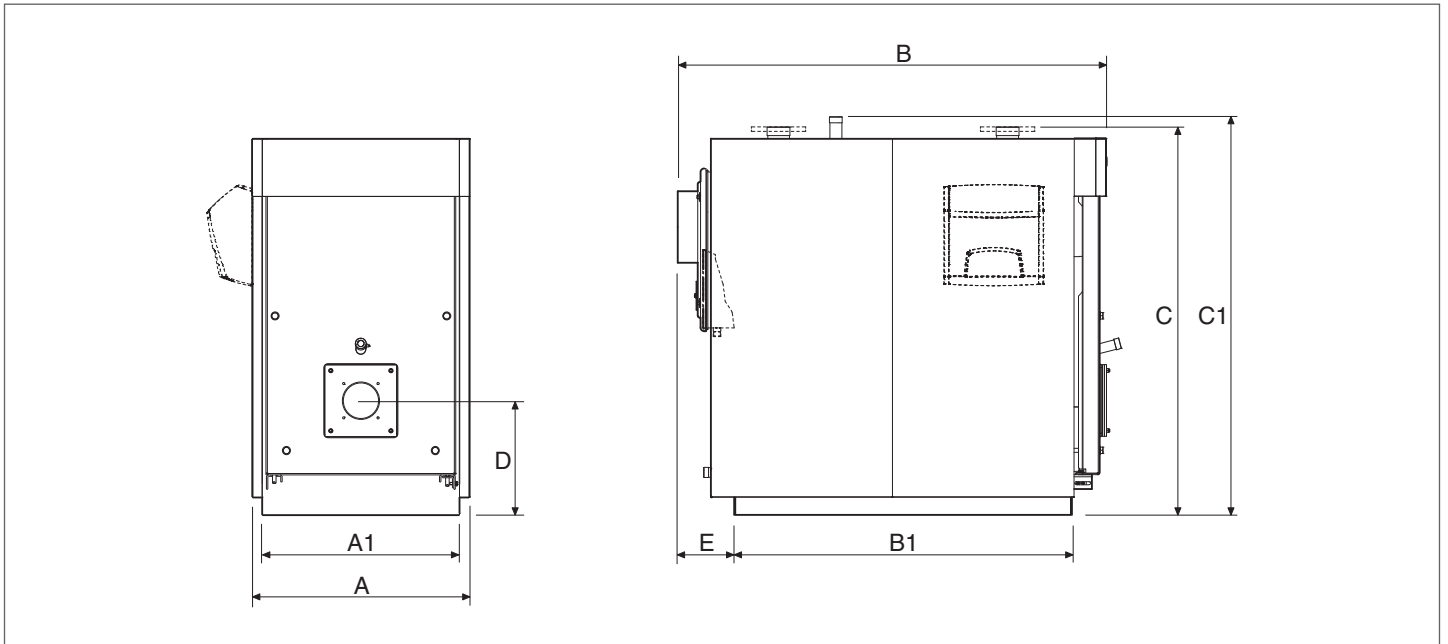

DESCRIZIONE		CALDAIA RTS 3S														
		90	115	166	217	255	349	448	511	639	750	850	1160	1450	1750	
A	Total Width	660	710	760	760	820	820	890	890	1000	1047	1047	1147	1237	1340	mm
A1	Width of Baseplate	580	640	690	690	750	750	790	790	900	980	980	1070	1160	1260	mm
B	Total Length	1155	1330	1500	1500	1660	1960	2085	2085	2375	2657	2657	2954	3173	3460	mm
B1	Floor-standing length	860	1010	1180	1180	1296	1596	1692	1692	1965	2236	2236	2533	2754	3020	mm
C	Height of Hydraulic Fittings	1205	1285	1390	1390	1524	1490	1685	1685	1830	1920	1920	2080	2222	2322	mm
C1	Total Height	1225	1305	1390	1390	1525	1525	1730	1730	1875	1960	1960	2120	2222	2322	mm
D	Burner Axis	380	380	400	400	468	468	510	510	560	570	570	625	650	670	mm
E	Baseplate Flue-Gas Stack	180	190	200	200	225	225	250	250	270	270	270	270	270	265	mm
Boiler body weight		305	392	488	503	675	809	1107	1107	1430	1947	1947	2527	3330	4310	kg
Weight of casing		30	28	32	32	40	42	53	53	70	93	93	100	110	150	kg
Total Boiler Weight (including panelling)		335	420	520	535	715	851	1160	1160	1500	2040	2040	2627	3440	4460	kg

### 3.3 Handling

**⚠** Before handling the appliance and removing the packaging, wear PPE and use tools suitable for the appliance's size and weight.

The product can be moved in two ways:


- Using a forklift truck with adequate lifting capacity.
- Using a hoist with adequate lifting capacity;

#### 3.3.1 With a hoist: RTS 90 ÷ 1750 3S

Two lifting points (A) are provided at the top of the boiler for handling with a hoist. Proceed as follows to move the boiler and remove the packaging:


- Remove the protective film;
- Move the boiler to the place of installation, use a crane for lifting and using only the lifting accessories provided with it.
- If chains are used to lift the boiler, make sure that at least two of the chains are load-bearing.
- Lift with the utmost care.
- Maintain an angle less than 45 degrees from the vertical when lifting the boiler with chains or ropes.
- The crane must be operated by trained personnel.

**⚠** The packaging material must be disposed of carefully and must not be abandoned, as it is a source of potential danger.

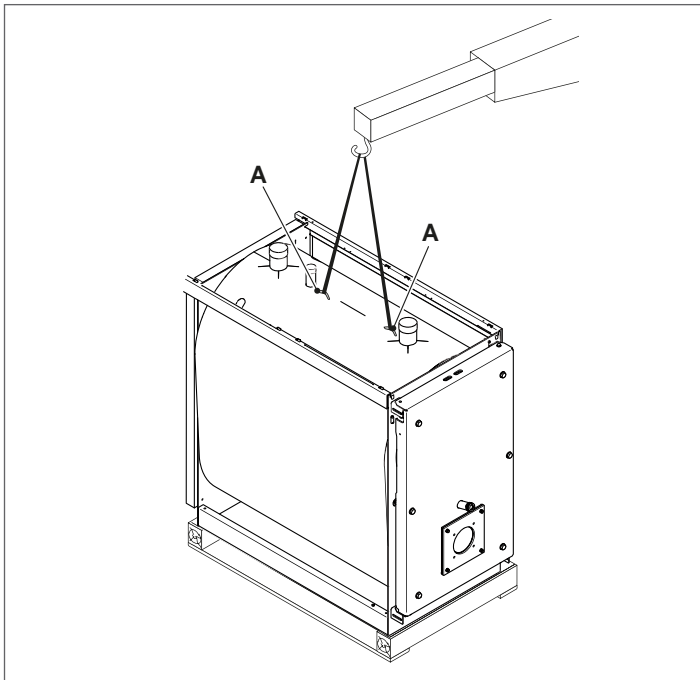

#### 3.3.2 With a forklift: RTS 1750 3S

Two pockets (B) for handling with a forklift are positioned in the lower part and accessible from both sides of the boiler.

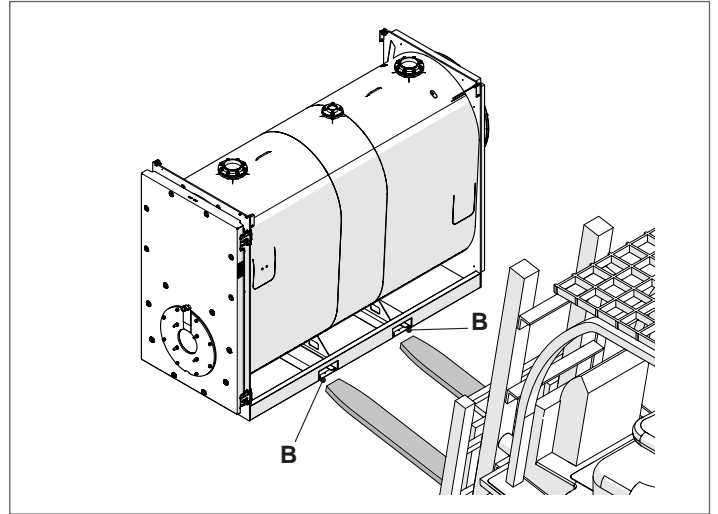

### 3.4 Place of installation

**RIELLO RTS 3S** steel boilers must be installed in a dedicated boiler room, with adequately sized vents, in compliance with applicable laws and standards.


If at all possible, the boiler should be installed on a raised base to prevent the burner fan sucking up dust.

The gas supply pipe must be installed in such away that the boiler's panelling can be removed and the front door opened without having to remove the burner.

**⚠** When installing the boiler, allow sufficient space around it to access all safety and control devices and to permit easy maintenance.

**⚠** If the specific weight of the gas supply to the burner is greater than the specific weight of air, install all electrical parts at least 500 mm above floor level.

**⊖** Do not install the boiler outdoors. It is not designed to work outdoors and is not fitted with the necessary automatic anti-frost systems to do so.

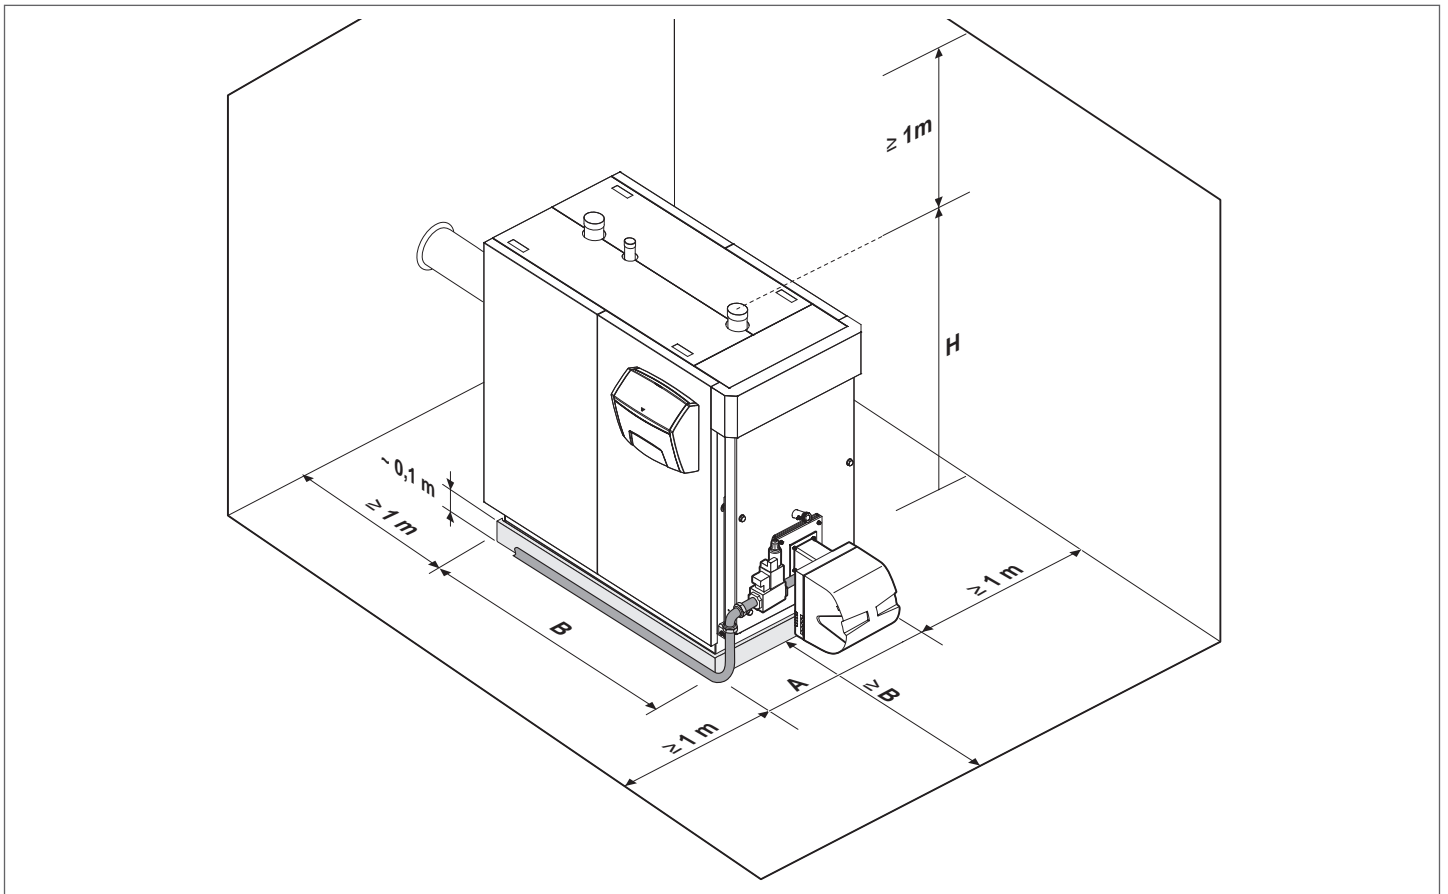


DESCRIZIONE		CALDAIA RTS 3S														
		90	115	166	217	255	349	448	511	639	750	850	1160	1450	1750	
A	Width	660	710	760	760	820	820	890	890	1000	1047	1047	1147	1237	1340	mm
B	Length	1155	1330	1500	1500	1660	1960	2085	2085	2375	2657	2657	2954	3173	3460	mm
H	Total height of boiler	1175	1285	1390	1390	1524	1490	1685	1685	1820	1900	1900	2080	2222	2320	mm

#### 3.4.1 Installation in older systems and systems requiring modernisation

When installing these boilers in old systems or systems requiring modernisation, always perform the following checks:

- make sure that the stack is able to withstand the temperature of the combustion gases and that it has been designed and made in compliance with applicable standards. The stack must also be as straight as possible, sealed, insulated and not blocked or choked;
- make sure that the electrical system has been installed by a qualified electrician in compliance with applicable standards;
- make sure that the oil feed line and any oil storage tank are made and installed in compliance with applicable standards;
- make sure that the expansion vessels are big enough to contain the volume generated by thermal expansion;
- make sure that flow rate, head and direction of flow of the pumps are suitable and correct;
- make sure that the circuit has been flushed out to remove all sludge and lime scale, and has been vented and seal tested;
- make sure that a suitable water treatment system is installed if the quality of the supply/recirculation water so demands.

### 3.5 Location of sensors

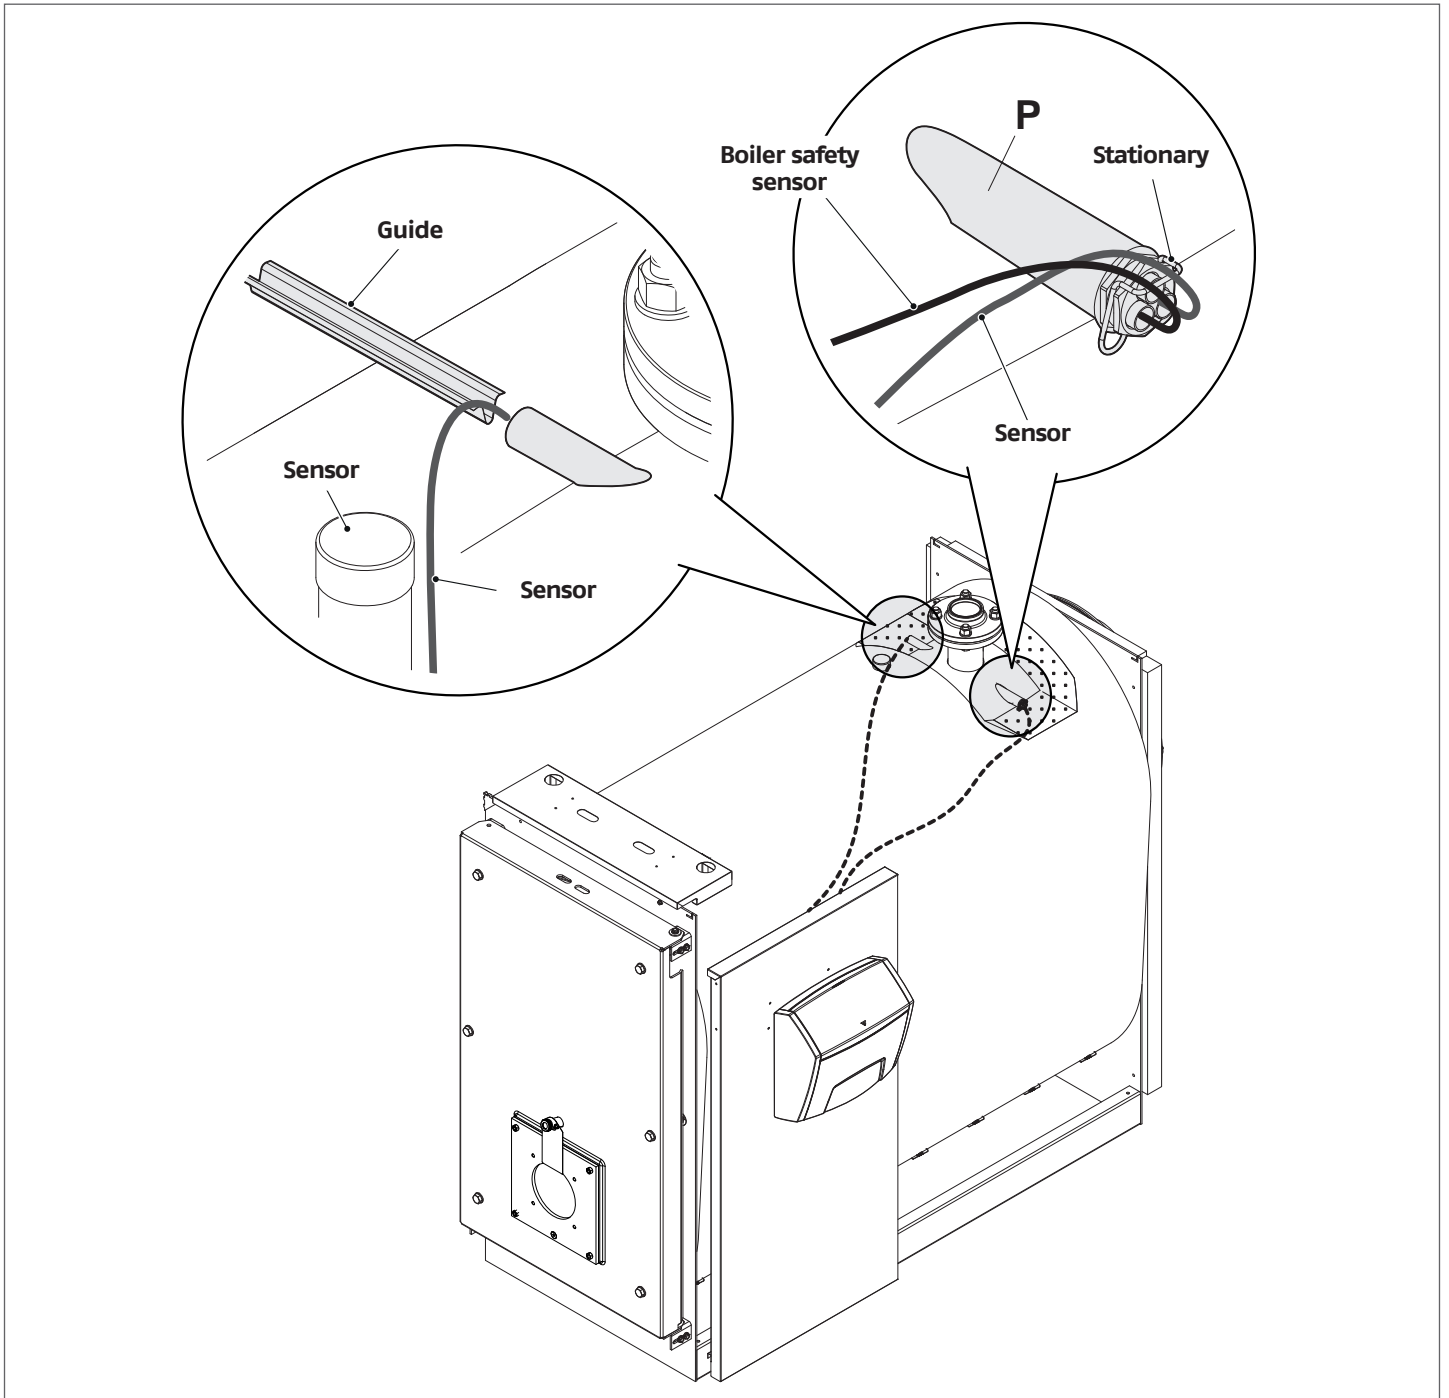

### 3.6 Water in central heating systems

#### INTRODUCTION

Water used in central heating systems MUST be suitably treated to ensure the correct functioning of those systems and to guarantee an extended working life for boilers and all other system components. This applies not only to existing systems but to newly installed systems too.

Sludge, lime-scale and pollutants present in the water can cause permanent damage to the heating unit, also within a short time and regardless of the quality standards of the materials used. Contact the Technical Assistance Service for any further information on type and use of additives.

**⚠** Always conform to the standards and legislation applicable in the country of installation.

#### WATER IN CENTRAL HEATING SYSTEMS. INSTRUCTIONS FOR THE DESIGN, INSTALLATION AND MANAGEMENT OF CENTRAL HEATING SYSTEMS.

##### 1. Chemical and physical characteristics of water

The chemical and physical characteristics of the water must comply with the standards and table below:

##### European Standards:

- EN 14868 Protection of metallic materials against corrosion in closed water circulation systems
- EN 12953-10 Quality requirements for the supply water and the water in the boiler >100°C

##### National Standards / Leg Dec:

- UNI 8065:2019 Water treatment for domestic use

STEEL BOILERS			
	U/M	Initial filling water	Regular service water (*)
pH (with aluminium)		7 - 8	7 - 8,5
pH (without aluminium)		8,3 - 9,5	8,3 - 9,5
Hardness	°F	< 15	< 15
Electrical conductivity	µs/cm		< 500
Chlorides	mg/l		< 50
Oxygen (O <sub>2</sub> )	mg/l		< 0,1
Iron (Fe)	mg/l	< 0,5	< 0,5 (**)
Copper (Cu)	mg/l	< 0,1	< 0,1 (**)
Aluminium (Al)	mg/l		< 0,1 (**)
Turbidity		Clear	Clear

(\*) system water values after 8 weeks of operation;  
 (\*\*) higher values are due to corrosion, to be eliminated.

##### General note on water used to top up systems:

- If softened water is used to top up a system, 8 weeks of functioning after topping up, verify that the water in the system respects the above limits, in particular for electrical conductivity
- This check is not necessary if demineralised water is used to top up the system.

### 2. Central heating systems

**⚠** Do not use automatic filling devices to add water to central heating systems. Use a manual device instead and record top-ups in the system service book.

**⚠** If there are more than one boiler, they must all be put into service either contemporarily or with a very low rotation time during the initial period of service, so as to evenly distribute the limited quantity of initial lime-scale.

**⚠** A flushing cycle must be programmed after the plant has been installed to flush out any installation debris.

**⚠** Water used to fill a system for the first time and water used to top it up must always be filtered (using synthetic or metal mesh filters with a filtration rating of no less than 50 microns) to prevent sludge from forming and triggering deposit corrosion.

**⚠** The heating system must be flushed out and cleaned with good workmanship before filling up the existing systems. The boiler may not be filled until after the heating system has been flushed out.

#### 2.1 New central heating systems

The system must be filled up slowly the first time; once it is filled and the air expelled it should never need to be topped up again. Systems should also be operated at maximum working temperature the first time they are started up, in order to facilitate de-aeration. (Gas is not released from the water at low temperatures).

#### 2.2 Reconditioning old central heating systems

If a boiler has to be replaced, do not refill the entire central heating circuit if the quality of water in it conforms to requirements. If the quality of water fails to conform to requirements, either recondition the old water or separate the water circuits (water in the boiler circuit must conform to requirements).

### 3. Corrosion

#### 3.1 Deposit corrosion

Under-deposit corrosion is an electrochemical process, due to the presence of sand, rust, etc., inside the mass of water. These solid substances generally deposit on the bottom of the boiler (sludge), on tube and pipe heads or in the gaps between pipes and tubes.

Micro-corrosion phenomena may be triggered off owing to the difference in electrochemical potential coming to be created between the material in contact with the impurity and the surrounding one.

#### 3.2 Stray current corrosion

Corrosion from stray currents can occur due to the differing electrical potentials between water in the boiler and the metallic mass of the boiler or piping. This process leaves unmistakable traces i.e. small regular conical holes.

**⚠** All metallic parts should be grounded by an efficient earth cable for this reason.

#### 4. Eliminating air and gas from central heating systems

If oxygen enters a circuit continuously or even intermittently (e.g. in under-floor heating systems whose pipes are not protected by impermeable synthetic sheaths, in circuits with open expansion vessels, or in circuits that require frequent top-ups) always separate the boiler's water circuit from the central heating circuit.

##### Mistakes to avoid and precautions.

From what we have seen it is therefore important to avoid two factors possibly leading to the above mentioned processes i.e. contact between air and water in the installation and regular topping up with fresh water.

To eliminate contact between air and water (and to prevent the latter from becoming oxidized), it is necessary:

- For the expansion system to be a closed vessel type, correctly scaled and with the correct pre-loading pressure (to be regularly checked)
- For the installation to always be at a higher pressure than that of the atmosphere at any point (comprising the pump suction side) and under all running conditions (all the water sealing and couplings in the installation are designed to resist pressure towards outside, but not for depression)
- That the installation will not be made with materials permeable to gas (e.g. plastic pipes for floor systems without anti-oxygen barrier).

**!** Lastly we would remind you that the warranty does not cover breakdowns incurred by the boiler due to deposits and corrosion.

#### 3.6.1 Use of antifreeze

Do not use automotive silicate-based antifreeze in the heating system.

In areas where freezing may occur, an antifreeze may be added to protect the system water. Please adhere to the specifications provided by the antifreeze manufacturer.

- Use the antifreeze manufacturer's data to determine the right antifreeze ratio for the desired protection temperature.
- Do not exceed 50% antifreeze mix ratio and do not use antifreezes other than those specifically designed for water heating systems.
- the chemical oxidation of the metals in the system also generates hydrogen.

#### 3.6.2 Glycol

The percentage of propylene glycol which can be used is dependent on the maximum delivery temperature and the project  $\Delta T$  as defined by the generator.

To calculate the freezing temperature associated with the mix and the maximum percentage to be used, please see the technical datasheet for the product used.

**!** The values given in the tables refer to the **RIELLO** product.

Anti-freeze effect		
Glycol (%)	Temperature (°C)	Temperature (°F)
55	-40,4	-40,7
50	-32,4	-26,3
45	-26,0	-14,8
40	-21,5	-6,7
35	-17,6	0,3
30	-14,0	6,8
25	-10,7	12,7
20	-7,0	19,4
15	-4,0	24,8
10	-2,0	28,4

P (bar)	Mix boiling point							T (°)
	Glycol (%)							
	25	30	35	40	45	50	55	
11,0	186,0	187,0	186,0	188,0	189,0	189,0	189,5	°C
	366,8	368,6	366,8	370,4	372,2	372,2	373,1	°F
10,0	181,5	182,0	182,5	183,0	184,0	185,0	186,5	°C
	358,7	359,6	360,5	361,4	363,2	365,0	367,7	°F
9,0	176,5	177,0	177,5	178,0	179,5	181,0	182,5	°C
	349,7	350,6	351,5	352,4	355,1	357,8	360,5	°F
8,0	171,5	172,0	172,5	173,0	174,0	175,0	176,0	°C
	340,7	341,6	342,5	343,4	345,2	347,0	348,8	°F
7,0	166,0	166,5	167,0	167,5	168,0	168,5	170,0	°C
	330,8	331,7	332,6	333,5	334,4	335,3	338,0	°F
6,0	159,0	159,5	160,5	161,0	161,5	162,0	163,5	°C
	318,2	319,1	320,9	321,8	322,7	323,6	326,3	°F
5,0	152,5	153,0	154,0	155,0	156,0	157,0	158,0	°C
	306,5	307,4	309,2	311,0	312,8	314,6	316,4	°F
4,0	144,5	145,0	145,5	146,0	147,0	148,0	149,0	°C
	292,1	293,0	293,9	294,8	296,6	298,4	300,2	°F
3,5	141,5	142,0	142,5	143,0	143,5	144,0	145,0	°C
	286,7	287,6	288,5	289,4	290,3	291,2	293,0	°F
2,0	122,5	123,0	123,5	124,0	125,0	126,0	127,0	°C
	252,5	253,4	254,3	255,2	257,0	258,8	260,6	°F
1,0	100,5	101,0	101,5	102,0	103,0	104,0	105,0	°C
	212,9	213,8	214,7	215,6	217,4	219,2	221,0	°F









**IMPORTANT INFORMATION REGARDING HEAT-TRANSFER FLUIDS**

Heat-transfer fluids are particularly important for protecting the system: efficient heat exchange, thanks to a good specific heat capacity; anti-freeze properties, important for the life of the system in the winter; and anti-corrosion properties to preserve the heating system components.


When choosing a heat-transfer fluid, consider the following:

- **toxicity** in the event of leakage, contaminating domestic water or water for animal/human use/contact
- **biodegradability** in the event of leakage into the environment

All heat-transfer fluids recommended by **RIELLO** are non-toxic and in large part biodegradable.

-  Choose the liquid carefully and manage the heating system correctly to keep monitoring and maintenance work to a minimum, and reduce fluid changes.
-  Use propylene glycol-based, non-polluting antifreeze concentrate with corrosion inhibitors for heating systems.
-  Do not use the mixture with other antifreeze liquids; always use the same one.
-  Use chemically non-hazardous liquid.
-  It is mandatory to check the percentage of glycol according to the antifreeze effect on the data sheet of the purchased product.
-  It is recommended to check the compatibility of the purchased product with the circuit sealing materials, e.g. elastomers or plastics.
-  It is recommended to use a filter on the primary circuit to purify the Propylene Glycol.
-  The system must not have any galvanised tanks or pipes on the primary side, as zinc can be dissolved by mixtures of propylene glycol and water.


### 3.7 Water-side pressure drop

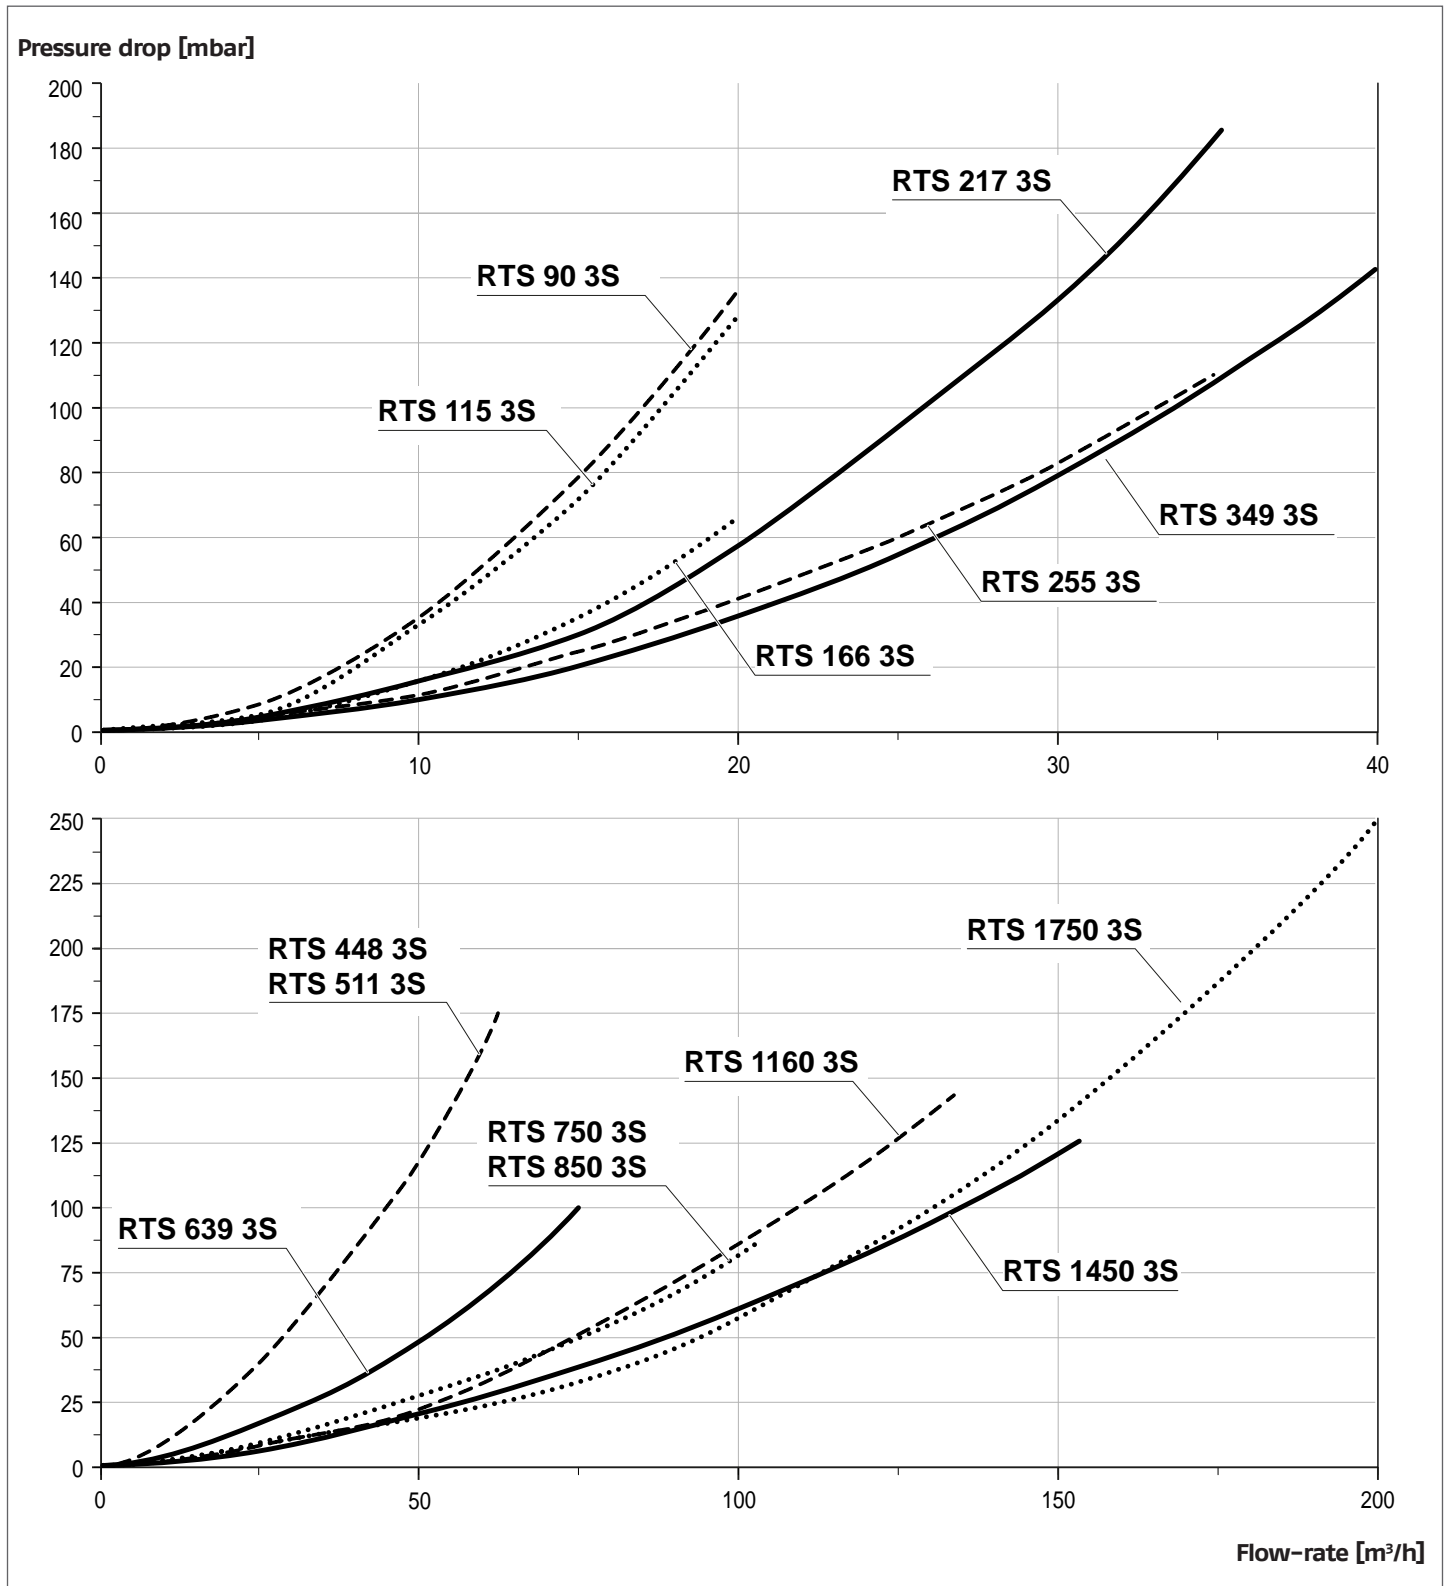

### 3.8 Water connections

Steel boilers **RIELLO RTS 3S** are designed and built to be installed on heating systems and also for the production of domestic hot water if connected to suitable systems.

The characteristics of the water fittings are shown in the table.

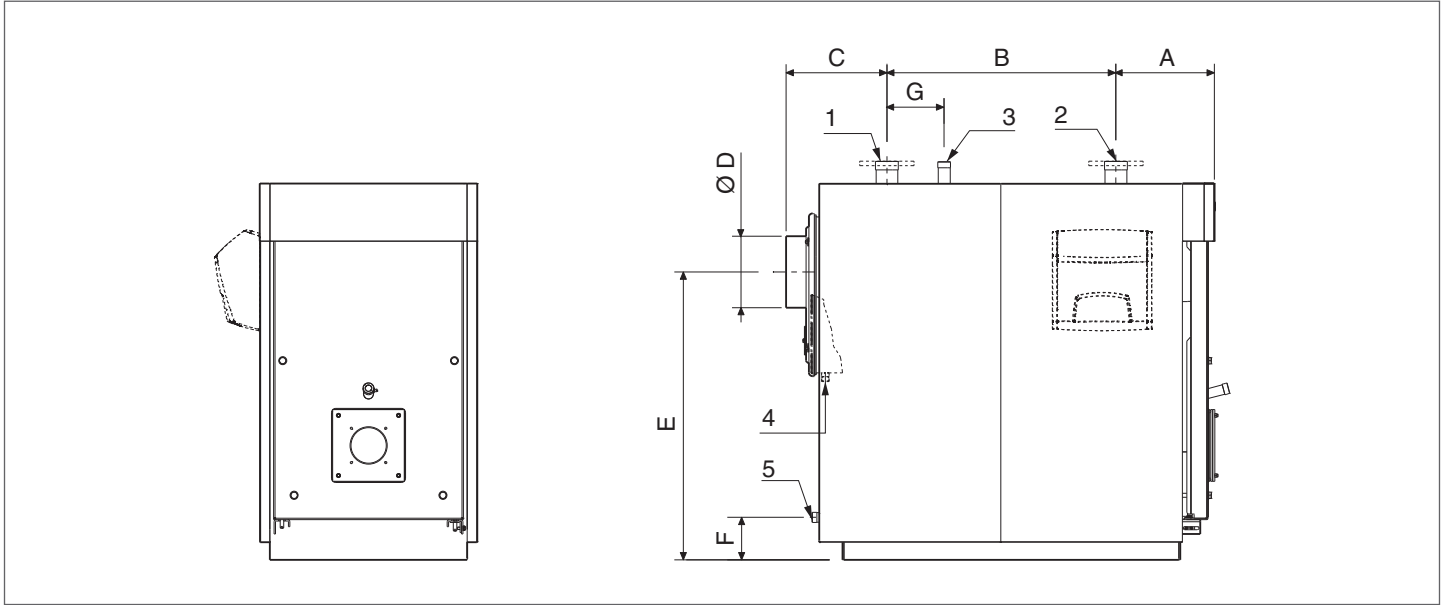


**⚠** The choice of system components and the method of their installation are left up to the installer. Installers must use their expertise to ensure proper installation and functioning in compliance with all applicable legislation.

**⚠** Circuits filled with anti-freeze must be fitted with water disconnectors.

DESCRIZIONE	CALDAIA RTS 3S														
	90	115	166	217	255	349	448	511	639	750	850	1160	1450	1750	
1 System delivery (*)	2"	2"	2"1/2	2"1/2	2"1/2	80	80	80	100	125	125	125	150	150	G"/DN
2 System return (*)	2"	2"	2"1/2	2"1/2	2"1/2	80	80	80	100	125	125	125	150	150	G"/DN
3 Safety device fitting	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4	1"1/2	1"1/2	1"1/2	2"1/2	2"1/2	2"1/2	80	80	G"/DN
4 Condensate outlet	3/4"	3/4"	3/4"	3/4"	3/4"	3/4"	3/4"	3/4"	3/4"	1"	1"	1"	1"	1"	G"/DN
5 Boiler drain	3/4"	1"	1"	1"	1"	1"	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4	1"1/4	1"1/2	G"/DN
A	320	335	348	348	360	390	395	395	450	512	512	514	563	590	mm
B	530	650	800	800	890	1085	1200	1200	1400	1570	1570	1865	2030	2300	mm
C	305	345	352	352	410	485	490	490	525	575	575	575	580	570	mm
D	180	200	250	250	250	250	300	300	350	350	350	400	450	450	∅
E	870	946	1005	1005	1130	1130	1290	1290	1405	1445	1445	1580	1695	1760	mm
F	175	150	148	148	187	187	185	185	205	190	190	218	190	210	mm
G	130	200	200	200	200	300	250	250	300	350	350	350	700	1000	mm

(\*) All flanged connections are PN6 according to EN 1092-1.

3.8.1 Schematic diagram

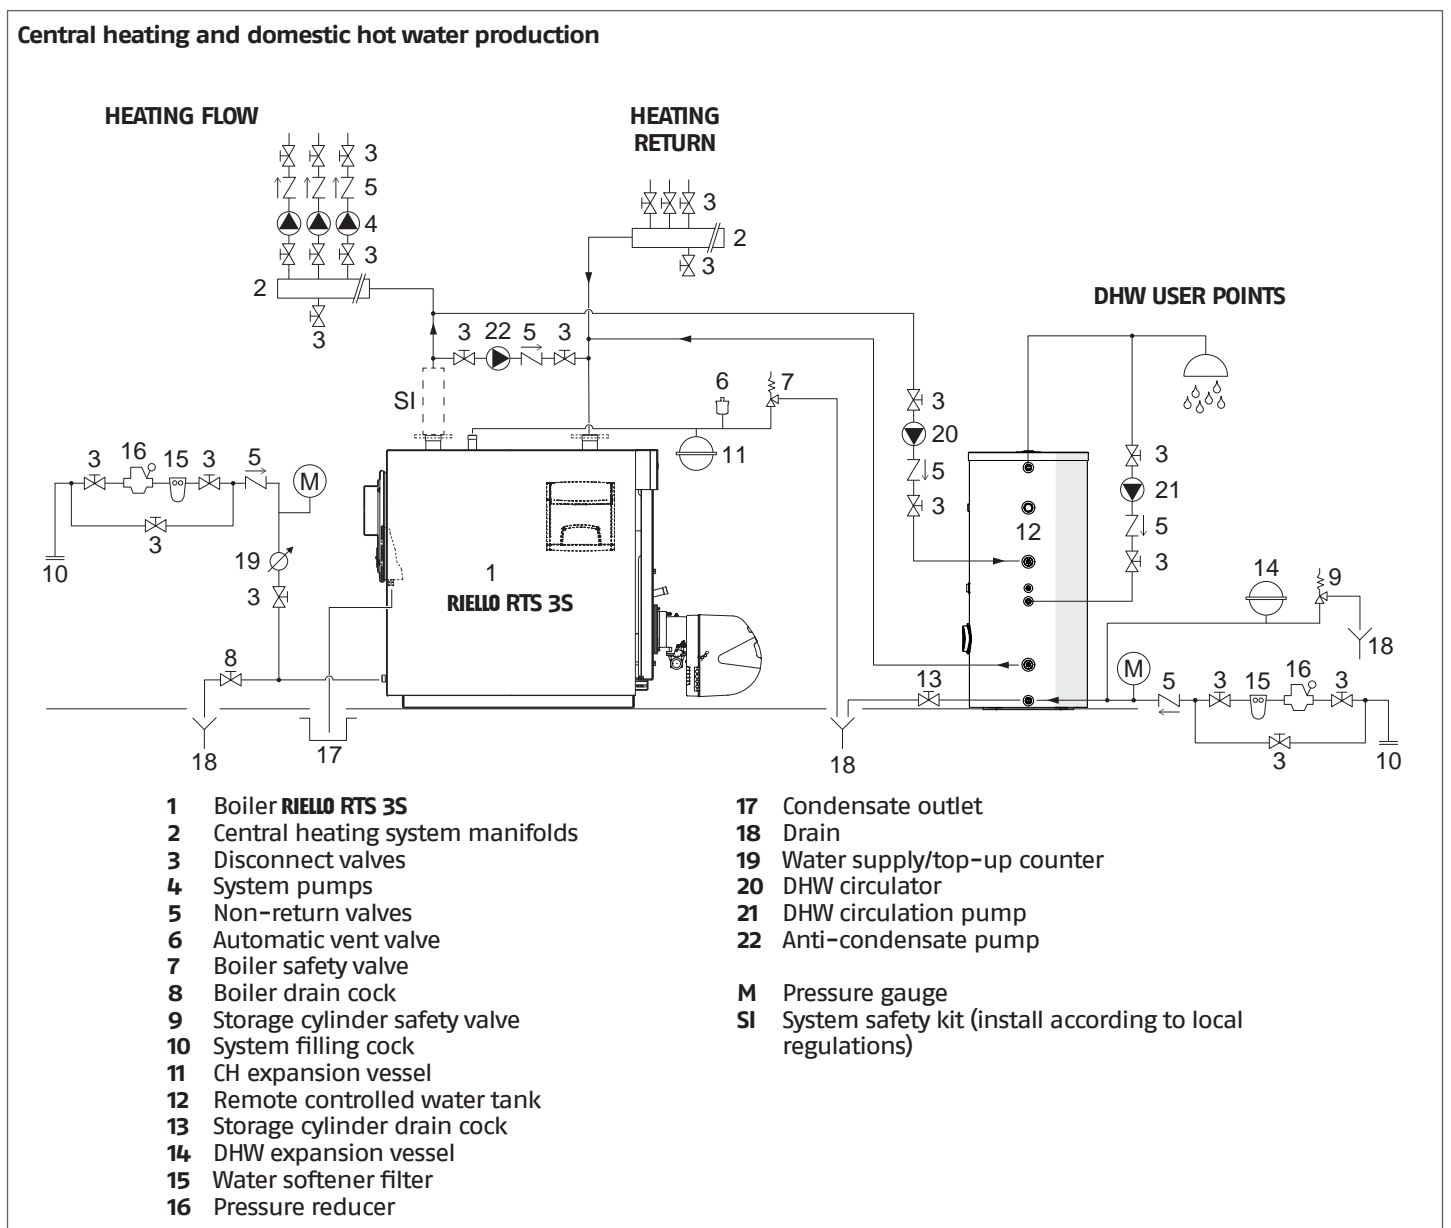

**⚠** Domestic hot water and central heating circuits must be completed with expansion vessels of adequate capacity and suitable, correctly-sized safety valves. The discharge of safety valves and appliances must be connected to a suitable collection and disposal system (see Catalogue for compatible accessories).

**⚠** The selection and the installation of the components of the system is the responsibility of the installer, who must operate in accordance with good practice and current Legislation.

**⚠** Circuits filled with anti-freeze must be fitted with water disconnectors.


**⚠** Special supply/reintegration water should be conditioned with appropriate treatment systems. The values stated in the table on page 24 can be used as a reference.

### 3.9 Anti-condensate pump

An anti-condensate pump must be used in order to prevent damage to the boiler during the transient periods and before the system is started up. The pump must ensure a flow rate of between 20 and 30% of the total flow rate during the system operating periods, must ensure a return water temperature of not less than the minimum permissible return water temperature (see technical data) and must delay its own shutdown by at least 3 minutes at the beginning of prolonged periods of boiler shutdown (night-time total shutdown, weekends, etc.).

**⚠** A sensor socket must be positioned at a distance of 3 to 5 times the diameter of the water return pipe, upstream from the water fitting, to measure effective water return temperature and control the anti-condensate pump or the temperature controller stabilisation function.


**⚠** Any temperature controllers installed remotely from the control panel must be compatible with the system's electrical connections and functioning logic.

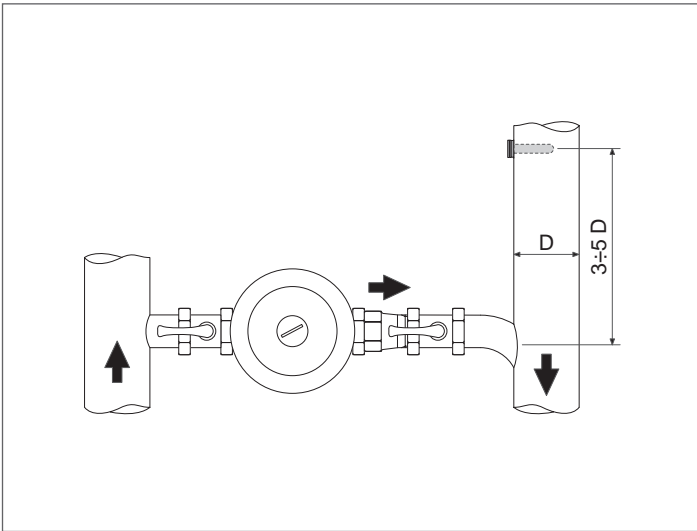

### 3.10 Discharge of combustion products

The flue gas exhaust and stack connection must be made in compliance with applicable laws and standards, using heat resistant, condensate resistant and stress resistant rigid pipe and sealed joints. The stack must be fitted with a condensate trap and drain and the flue gas exhaust pipe must be installed at a slope of at least 3° towards the boiler.

DIMENSIONS (mm)		CALDAIA RTS 3S														
		90	115	166	217	255	349	448	511	639	750	850	1160	1450	1750	
∅	Diameter of flue gas fitting	180	200	250	250	250	250	300	300	350	350	350	400	450	450	mm
H	Height of flue gas outlet	870	946	1005	1005	1130	1130	1290	1290	1405	1445	1445	1580	1695	1760	mm

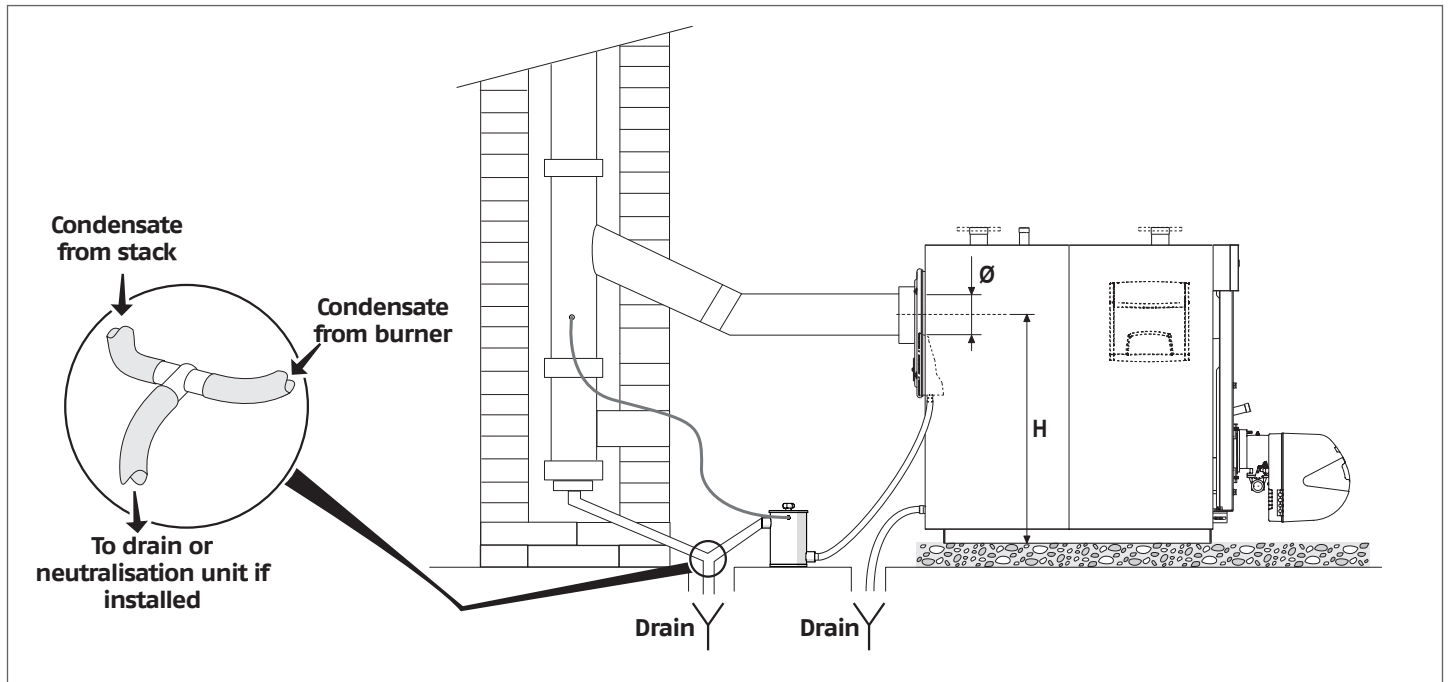


- ⚠** The stack must guarantee the minimum draught specified by applicable technical standards, assuming zero pressure at the connection to the flue gas exhaust.
- ⚠** Inadequate or badly dimensioned stacks and flues can increase combustion noise and affect combustion parameters
- ⚠** Joints must be sealed using suitable materials (e.g. filler, mastic or silicon based sealant).
- ⚠** Uninsulated flues are potentially dangerous and can cause burns.
- ⚠** For each boiler used, the horizontal exhaust duct must be connected to the vertical one using the 45° connectors.
- ⚠** When more than one boiler is installed in the boiler room, it is recommended to use separate flue-gas stacks for each boiler.

### 3.11 Door hinges

Boilers are fitted with three door hinge points in the factory. The doors are initially fitted to open to the right. If you need to change the door to open to the left, make the necessary modifications before performing any tests that require the boiler door to be opened. Proceed as instructed below to change the direction of door opening.

**⚠** Once you have decided on the direction of door opening and the door opens successfully, remove the unused hinge assembly B.

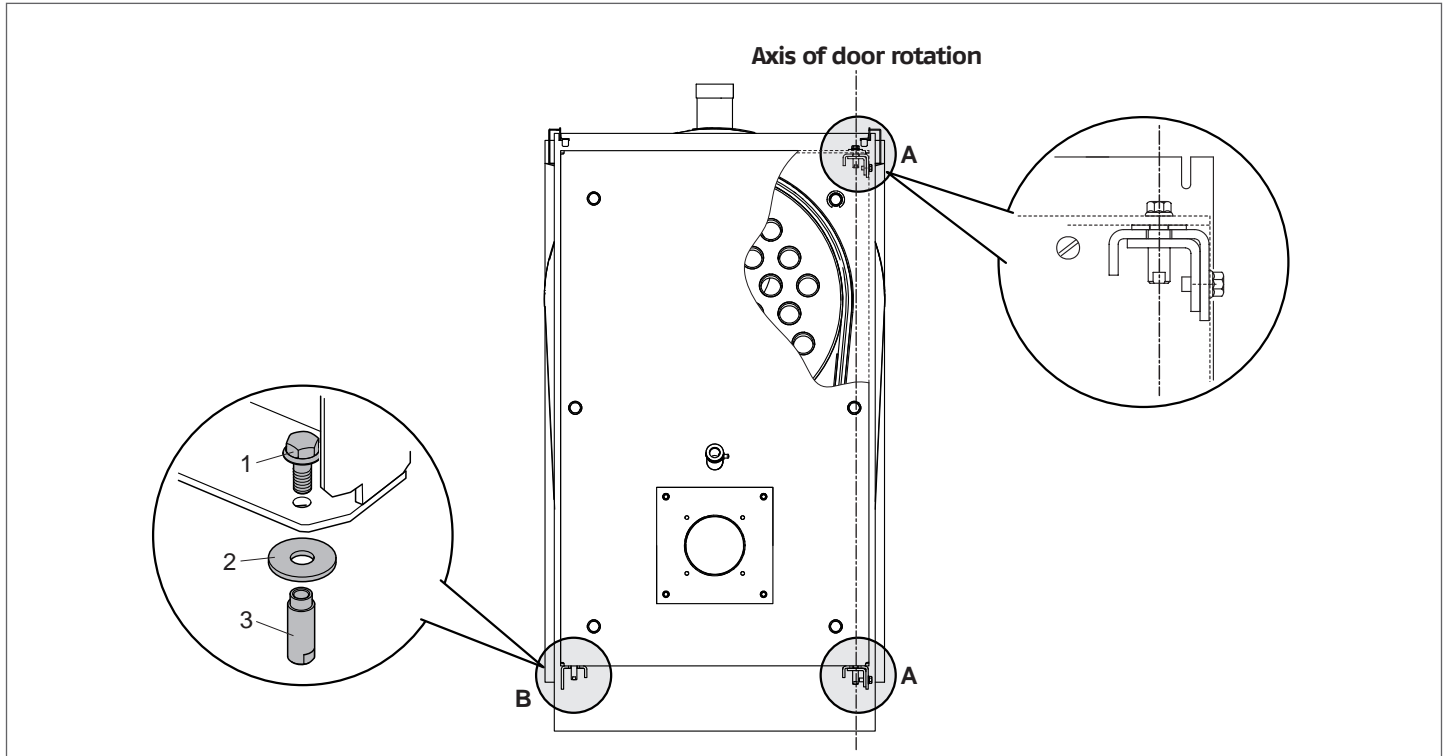

### 3.12 Changing the direction of door opening

**⚠** Perform this operation before starting the boiler up for the first time and before opening the door.

**⚠** When the door is not fitted correctly to the hinges, it must only be handled using equipment appropriate to its weight and using suitable personal protective equipment.

	CALDAIA RTS 3S							
	90	115	166	217	255	349	448	
Door weight	62	51,5	54	54	72,5	72,5	99	kg


  

	CALDAIA RTS 3S							
	511	639	750	850	1160	1450	1750	
Door weight	99	137,5	153	153	168	197	500	kg


If you wish to modify the door to open to the left, i.e. with the hinges on the left, proceed as follows:

#### 3.12.1 System A - RTS 90 ÷ 349 3S


- First ensure that the main door fixing bolts (1) are tight and then remove the safety bolts (2).
- And lift off the door fixing brackets (3)

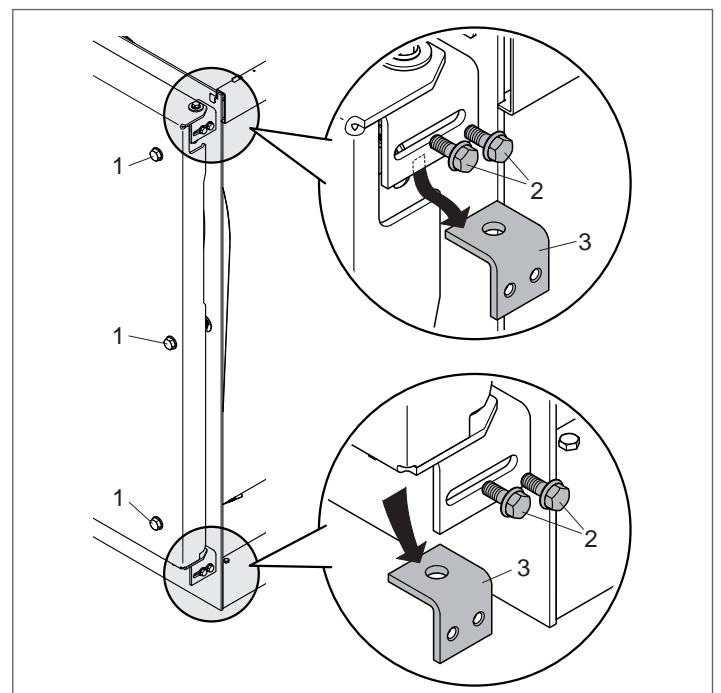

- Insert a spanner through the top slot and hold the bushing (4) steady.
- Unscrew the top bolt (5), then remove the bushing (4) and washer (6).

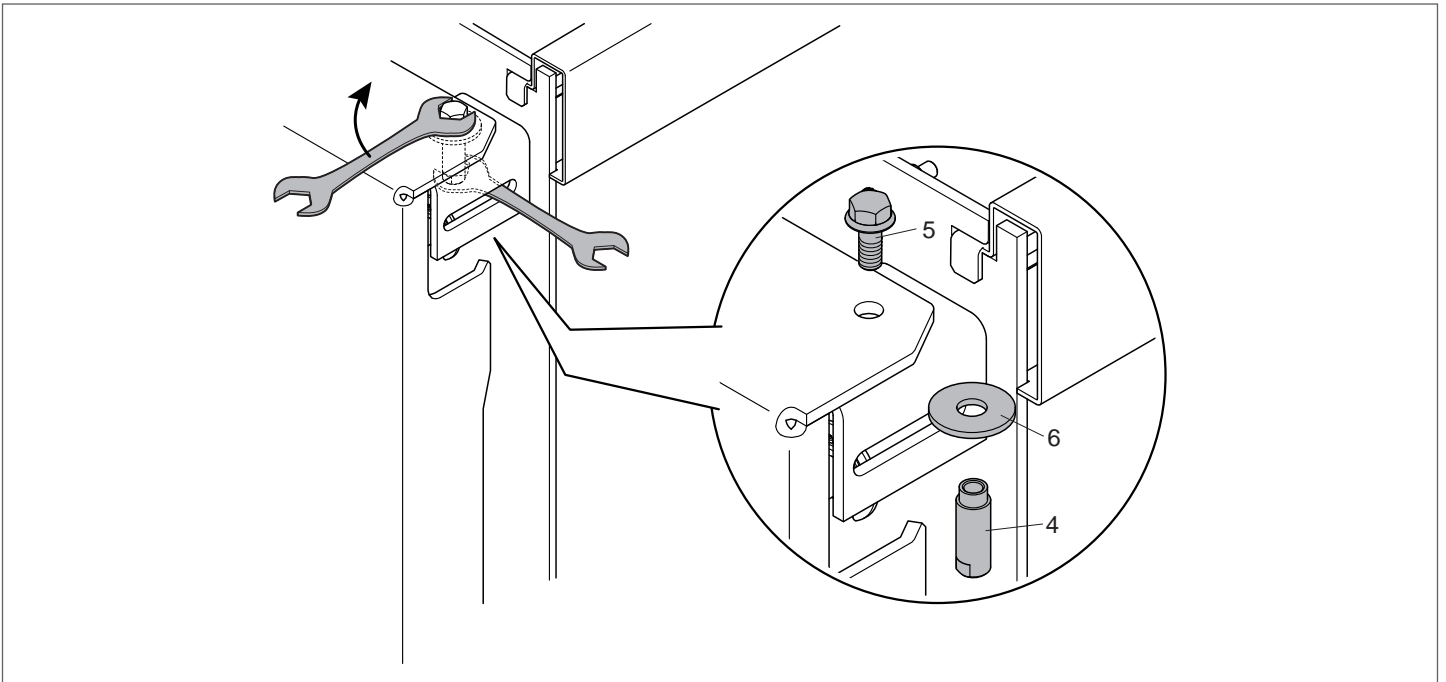


- Fit the bushing (4), bolt (5) and washer (6) to the opposite side of the door.

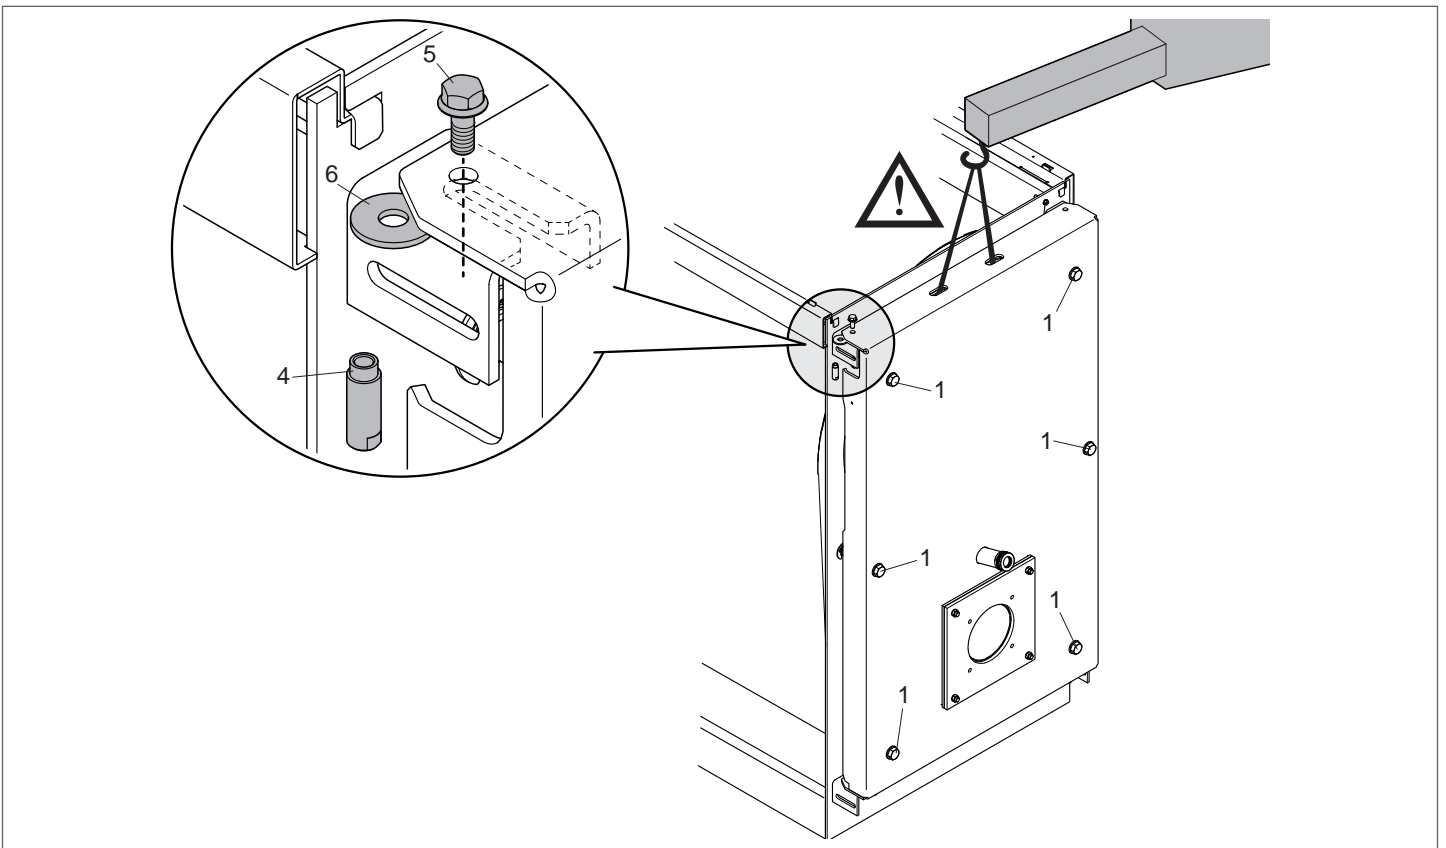


- ⚠** If there are alignment and height issues with the door when inserting the pin-locking assembly (4-5-6), slacken the fixing bolts (1) slightly and lift up the door to make it easier to insert the washer (6).
- ⚠** To lift the door, use suitable equipment for its weight and wear appropriate personal protective equipment. Once the washer (6) has been inserted, position the screw and bushing, and tighten them.

- Fit the top door stop bracket (3) to the opposite side of the door and fix it in place with the safety bolts (2).
- Fit the bottom door stop bracket (3) to the opposite side of the door and fix it in place with the safety bolts (2).

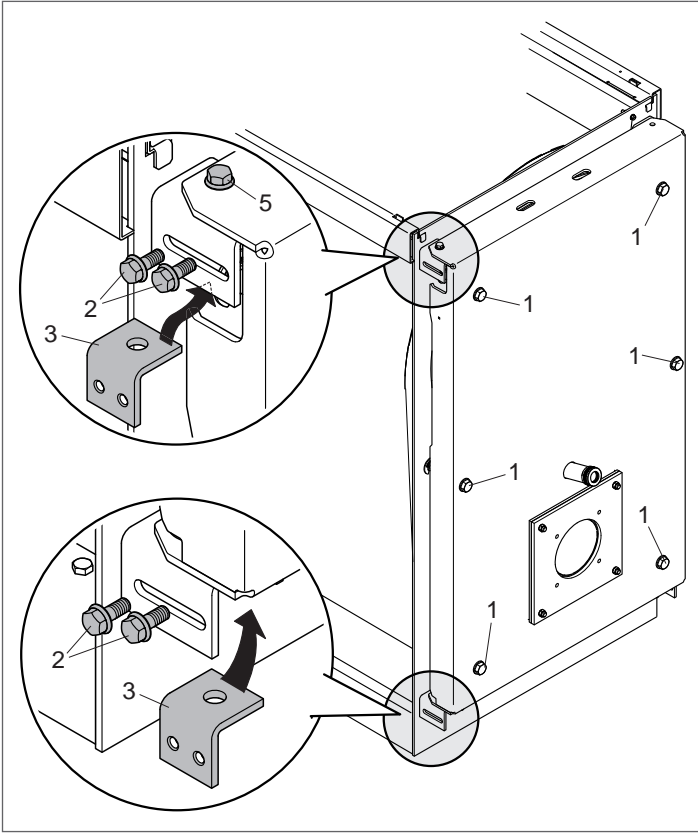


**⚠** Make sure that the safety bolts (2) and (5) are securely tightened before attempting to open the door.

- Completely unscrew the main fixing bolts (1) and open the door (these bolts are captive in the door and cannot be removed).
- Remove pin assembly "B" (screw (5), bushing (4) and washer (6)) positioned on the opposite side to the door rotation axis.

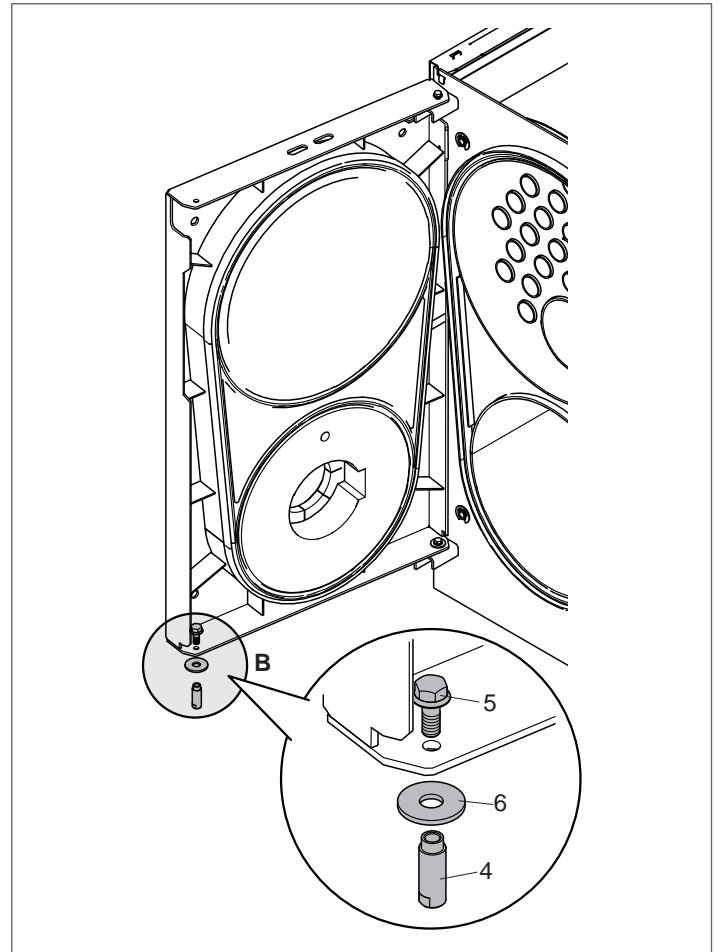


3.12.2 System B - RTS 448 ÷ 1450 3S

- Use a blade or alternative saw edge to remove the pre-cut parts (A) at the front end, on the opposite side to the door hinges.
- If necessary, unscrew the screws (1) and open the door to do this from the front.

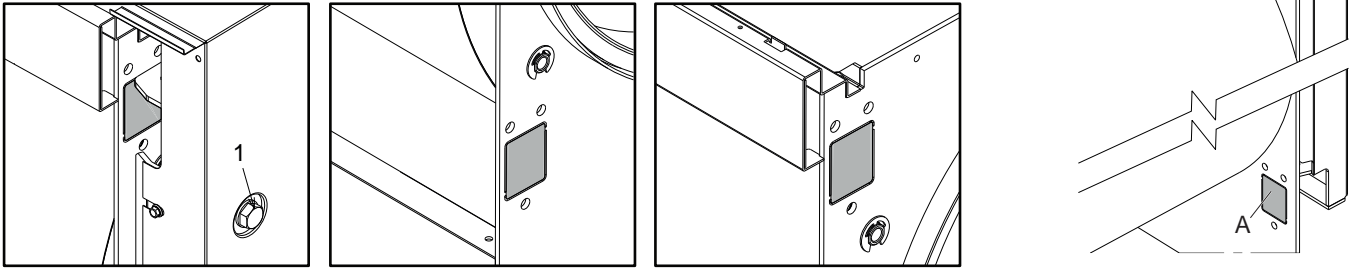


- Close the door and secure it with the screws (1).
- Remove the cap (2) from the bottom hinge, paying attention to the pressure of the spring inside (3).
- Remove the screws (4).
- Tighten the adjustment pin (5) to lower it.
- Remove the bolts (6) and slide out, from the inside, the hinges (7) supporting the door.

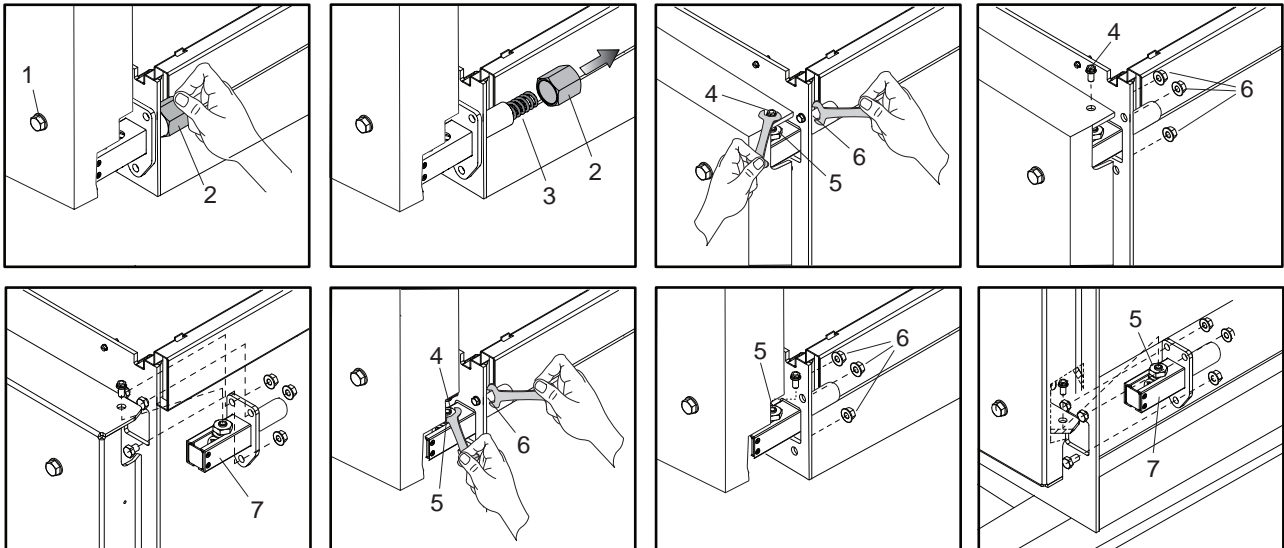

- Restore opening on the other side by repeating the sequence in reverse order.


Take care when assembling the adjustment pin:

- Unscrew the adjustment pin (5) to lift it.
- Check the pin groove (5) is slotted correctly into the door hole.
- Tighten the screws (4) and check the door opens/closes correctly.

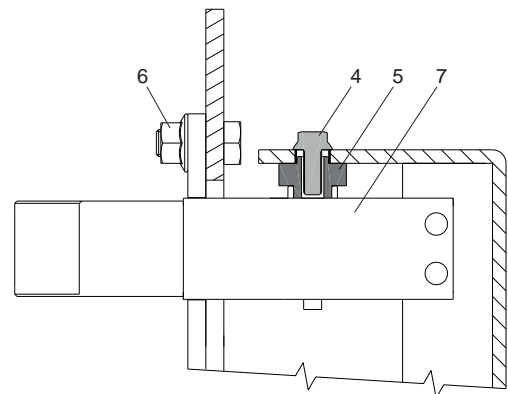


### 3.12.3 System C – RTS 1750 3S

- Check that the main locking screws (1) are fully tightened.

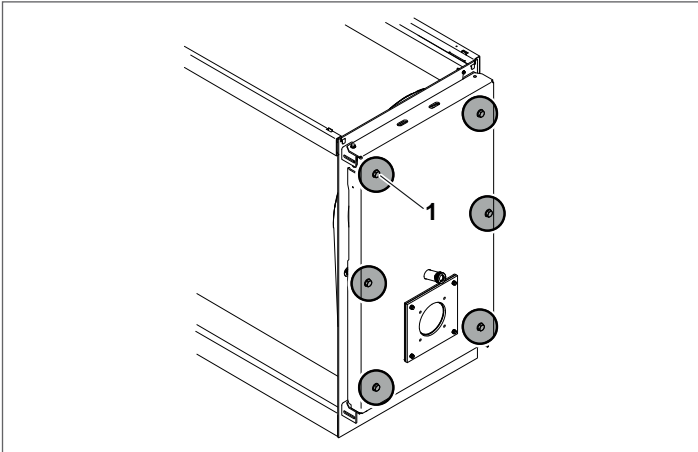


- Use a blade or alternative saw edge to remove the pre-cut parts (A) at the front end, on the opposite side to the door hinges.

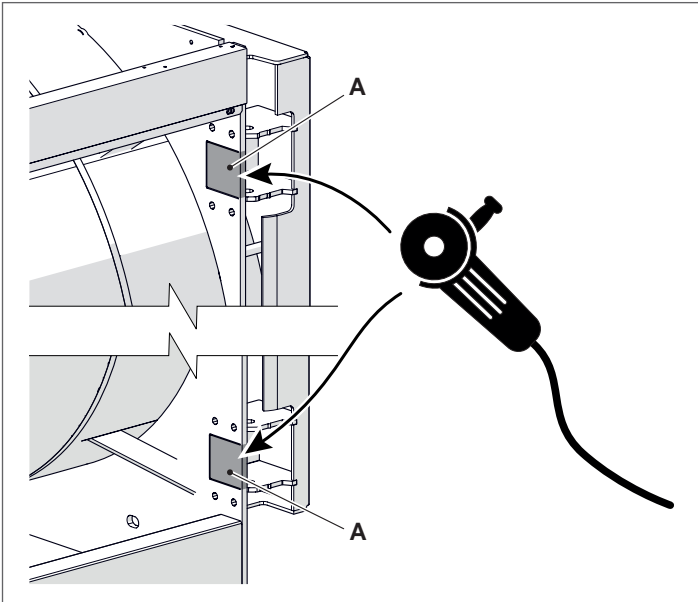


#### Top hinge

- Loosen the bolts (1) and remove the snap ring (2).
- Remove the through bolt (3).

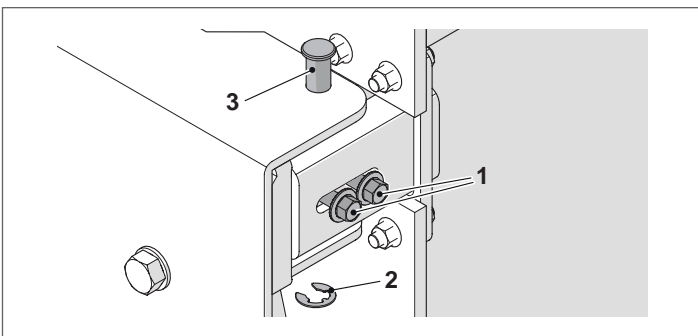


- Unscrew the four nuts (4), remove the bracket (5) and re-fit it on the opposite side by reversing the sequence of actions.

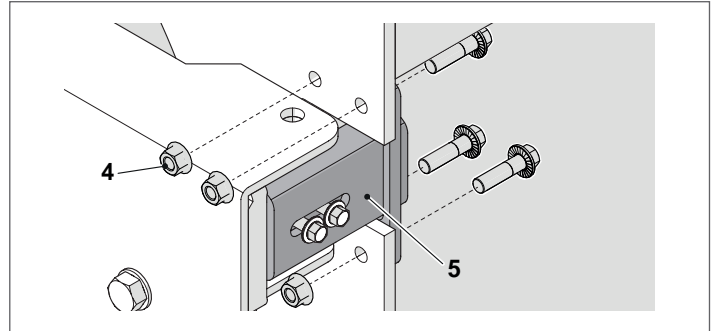

#### Bottom hinge


- Loosen the nuts (1).
- Loosen the nut (2), unscrew and remove the through bolt (3).

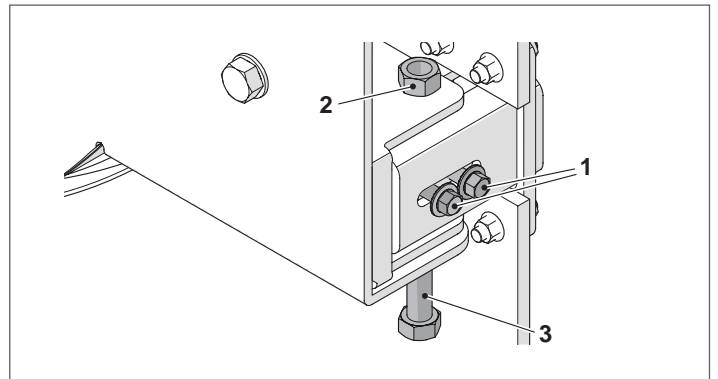

- Unscrew the four nuts (4), remove the bracket (5) and re-fit it on the opposite side by reversing the sequence of actions.

#### Closing the hinge holes

- Install the plates (6) on this side and tighten them with the nuts (7).

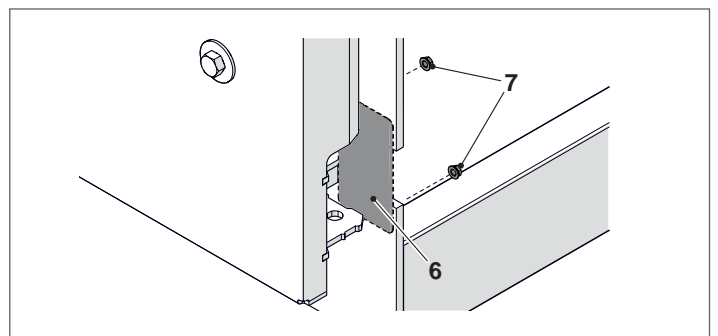


### 3.13 Earth connection

For the earthing of the boiler body, a connection point is provided in the centre of the frame to be connected to an effective earthing system.

Proceed as follows:

- Unscrew the nut and washer (1) from the earth terminal
- Attach the earth cable's eye connector (2) to the terminal. (Make sure that the cable is of adequate size and complies with legislation in the country of installation)
- Fit the nut and washer (1) to the earth terminal and tighten the nut
- Connect the other end of the cable to the system's earth bar.

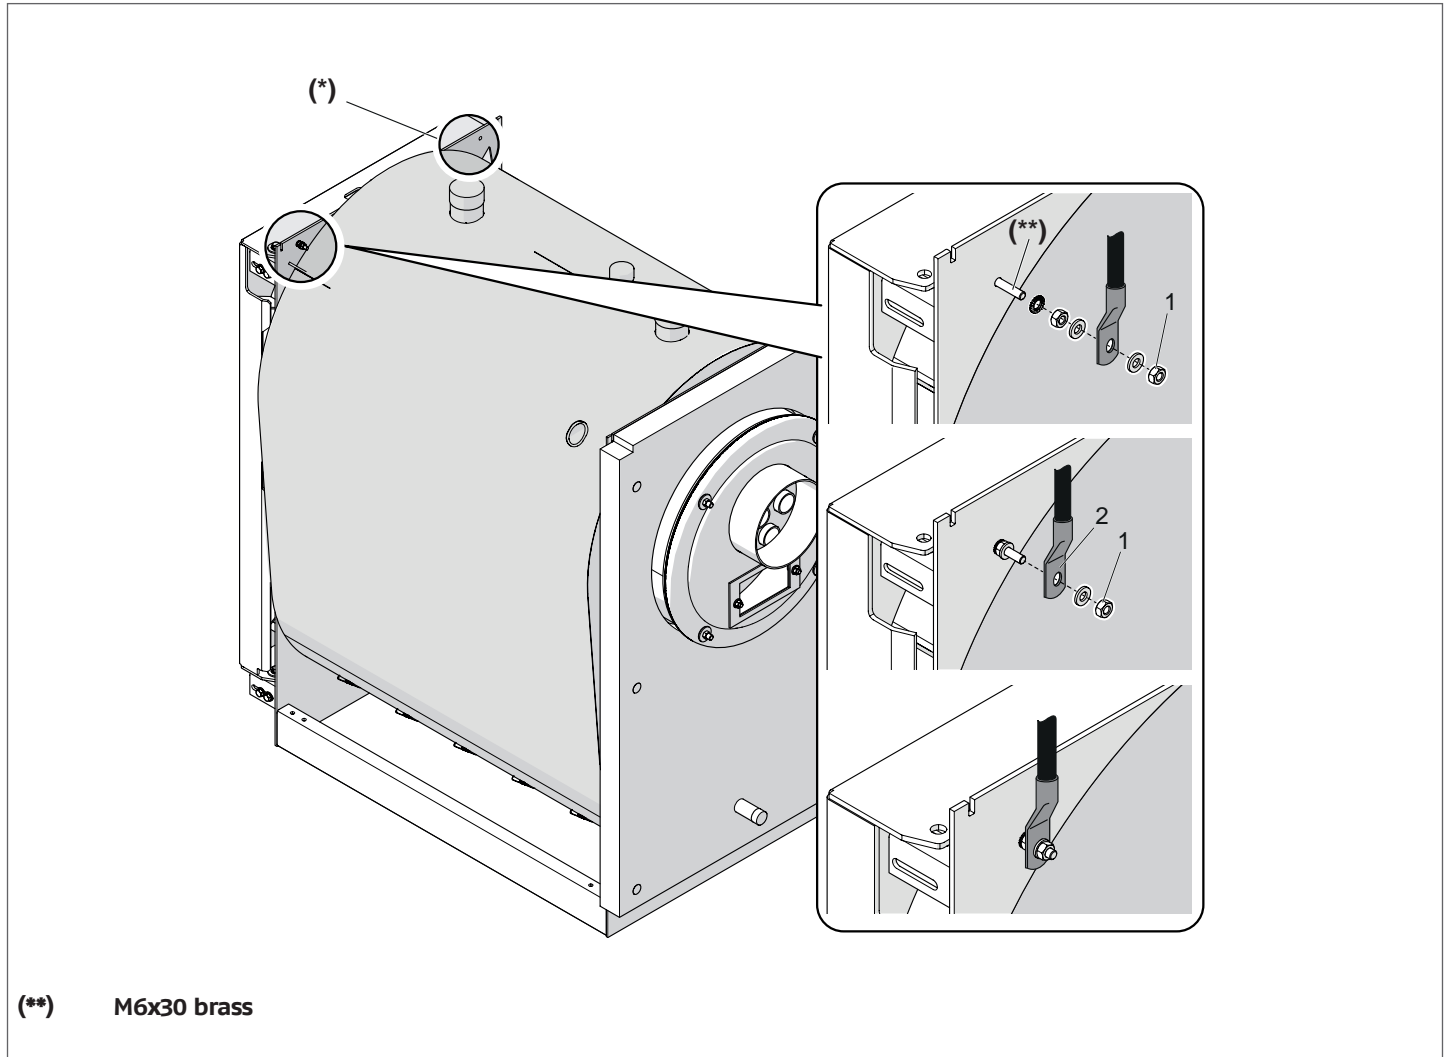

**⚠** On the left side there is another hole (\*) where the earth connection can be made. If you wish to use this hole for the earth connection, remove the terminal fittings from the right of the head and move them to the left earthing point.

### 3.14 Fitting the casing panels


#### 3.14.1 Models RTS 90 ÷ 639 3S

To mount the panelling, proceed as follows:

- Open the pre-cut slots located on the side panel (3-4-5-6) (depending on which side you want to install the chosen control panel (12) on), at the "oval" cable glands on the control panel.
- Perforate the membranes of the control panel cable grommets. Route the electrical cables through them and insert the sensors in their sockets.
- Fasten the control panel (12) to the panelling using the screws supplied.
- Assemble the side members (1) and cross members (2).
- Lay the side panels (3-4-5-6) on the side members securing the panelling and let them slide down from top to bottom. Take care to match the holes on the top with the fastening pins on the side members, and check that the bracket on the bottom part engages with the baseplate side members.
- Secure the side panels with the cross members (7), using the screws provided.
- Mount the control panel referring to the relevant manual.
- Prepare the cables for the electrical connections and insert the bulbs/probes into the probe holders.

**⚠ USE THE COPPER SHEATH (P) TO INSERT THE BULBS/PROBES OF THE SAFETY DEVICES (SEE "LOCATION OF SENSORS").**

- Insert the cable glands (supplied) into the slots provided on the panelling.
- Then assemble the front top panel (10) and centre top panels (8-9) to completely close the top.
- To complete the panelling, place the faceplate (11) on top of the door.

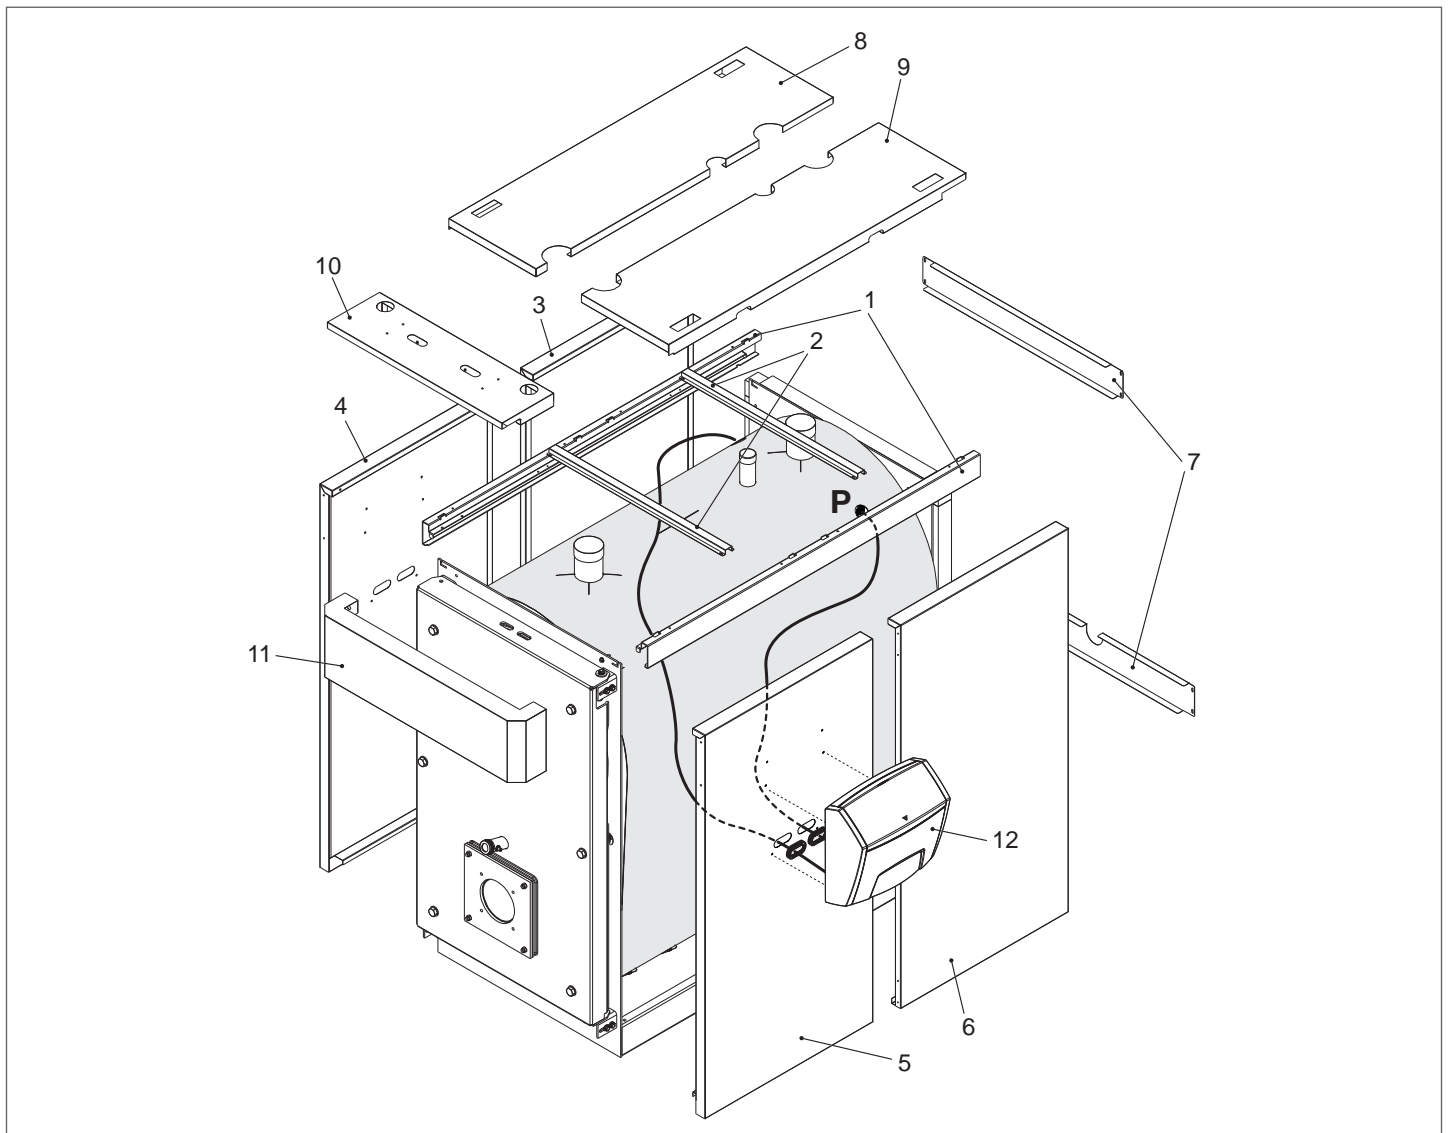


### 3.14.2 Models RTS 750 ÷ 1450 3S

To mount the panelling, proceed as follows:

- Open the pre-cut slots located on the side panel (3-4-5-6-13-14) (depending on which side you want to install the chosen control panel (12) on), at the "oval" cable glands on the control panel.
- Perforate the membranes of the control panel cable grommets. Route the electrical cables through them and insert the sensors in their sockets.
- Fasten the control panel (12) to the panelling using the screws supplied.
- Assemble the side members (1) and cross members (2).
- Lay the side panels (3-4-5-6-13-14) on the side members securing the panelling and let them slide down from top to bottom. Take care to match the holes on the top with the fastening pins on the side members, and check that the bracket on the bottom part engages with the baseplate side members.
- Secure the side panels with the cross members (7), using the screws provided.
- Mount the control panel referring to the relevant manual.
- Prepare the cables for the electrical connections and insert the bulbs/probes into the probe holders.

**⚠ USE THE COPPER SHEATH (P) TO INSERT THE BULBS/PROBES OF THE SAFETY DEVICES (SEE "LOCATION OF SENSORS").**

- Insert the cable glands (supplied) into the slots provided on the panelling.
- Then assemble the front top panel (10), the rear panel (15) and centre top panels (8-9) to completely close the top.
- To complete the panelling, place the faceplate (11) on top of the door.

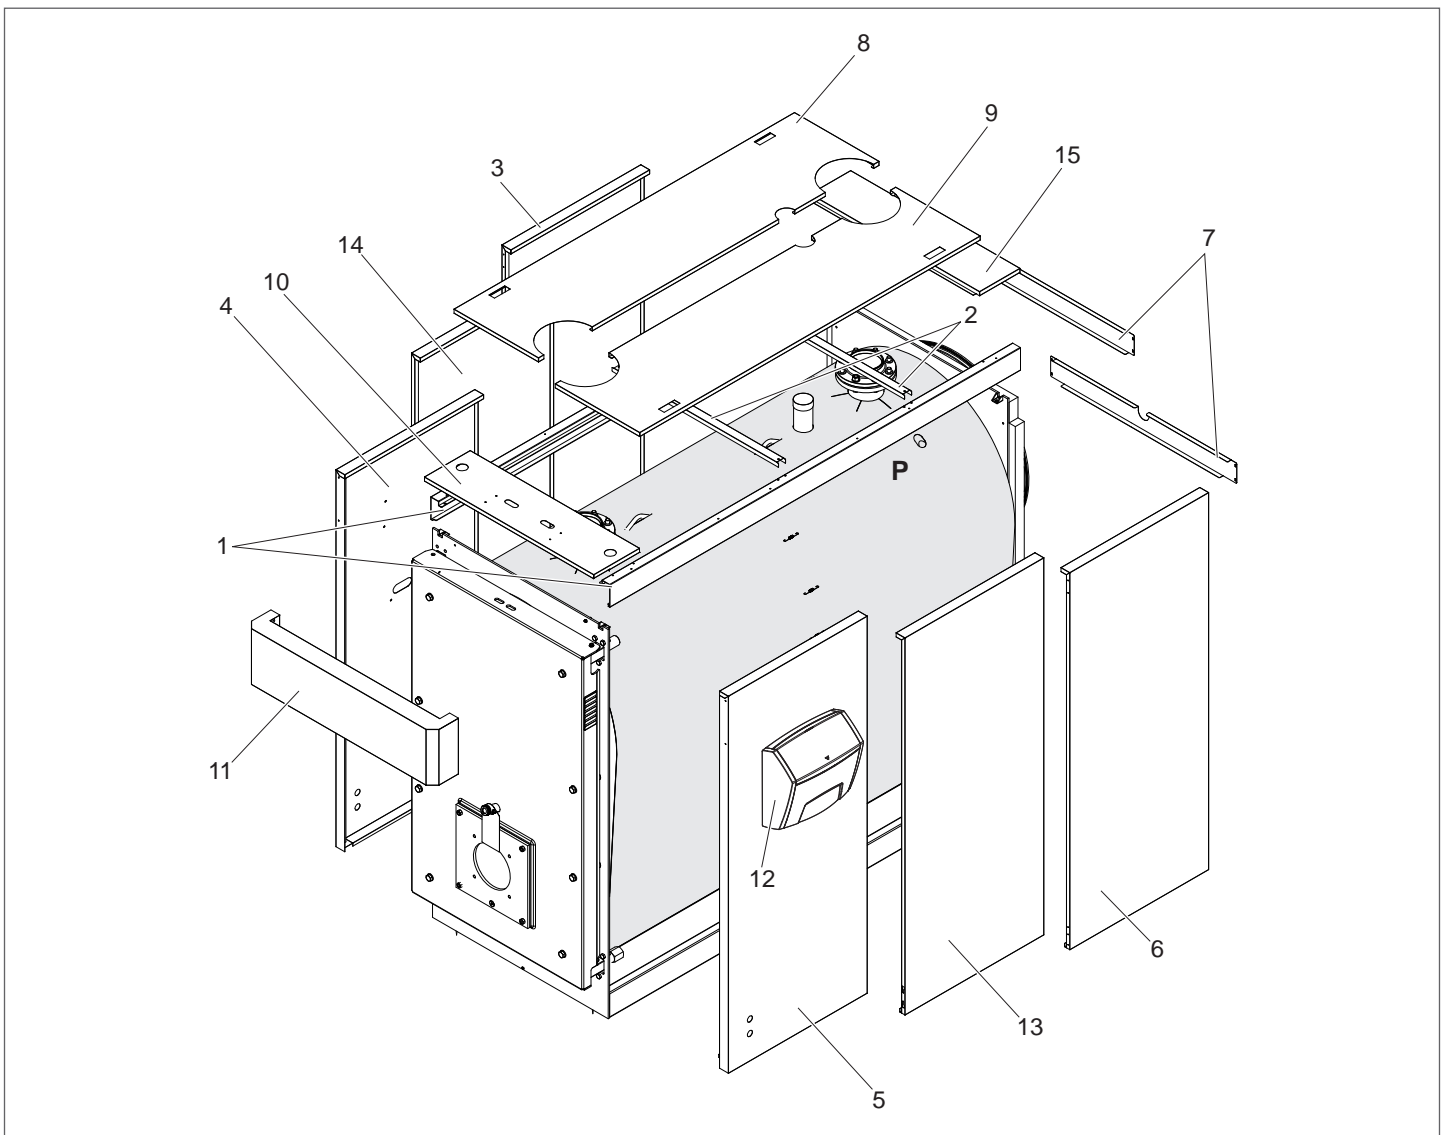


### 3.14.3 Model RTS 1750 3S

To mount the panelling, proceed as follows:

- Open the pre-cut slots located on the side panel (1-2-3-4-11-12) (depending on which side you want to install the chosen control panel (10) on), at the "oval" cable glands on the control panel.
- Perforate the membranes of the control panel cable grommets. Route the electrical cables through them and insert the sensors in their sockets.
- Fasten the control panel (10) to the panelling using the screws supplied.
- Assemble the side members (1) and cross members (2).
- Lay the side panels (1-2-3-4-11-12) on the side members securing the panelling and let them slide down from top to bottom. Take care to match the holes on the top with the fastening pins on the side members, and check that the bracket on the bottom part engages with the baseplate side members.
- Secure the side panels with the cross members (5), using the screws provided.
- Mount the control panel referring to the relevant manual.
- Prepare the cables for the electrical connections and insert the bulbs/probes into the probe holders.

**⚠ USE THE COPPER SHEATH (P) TO INSERT THE BULBS/PROBES OF THE SAFETY DEVICES (SEE "LOCATION OF SENSORS").**

- Insert the cable glands (supplied) into the slots provided on the panelling.
- Then assemble the front top panel (8), the rear panel (13) and centre top panels (6-7) to completely close the top.
- To complete the panelling, place the faceplate (9) on top of the door.

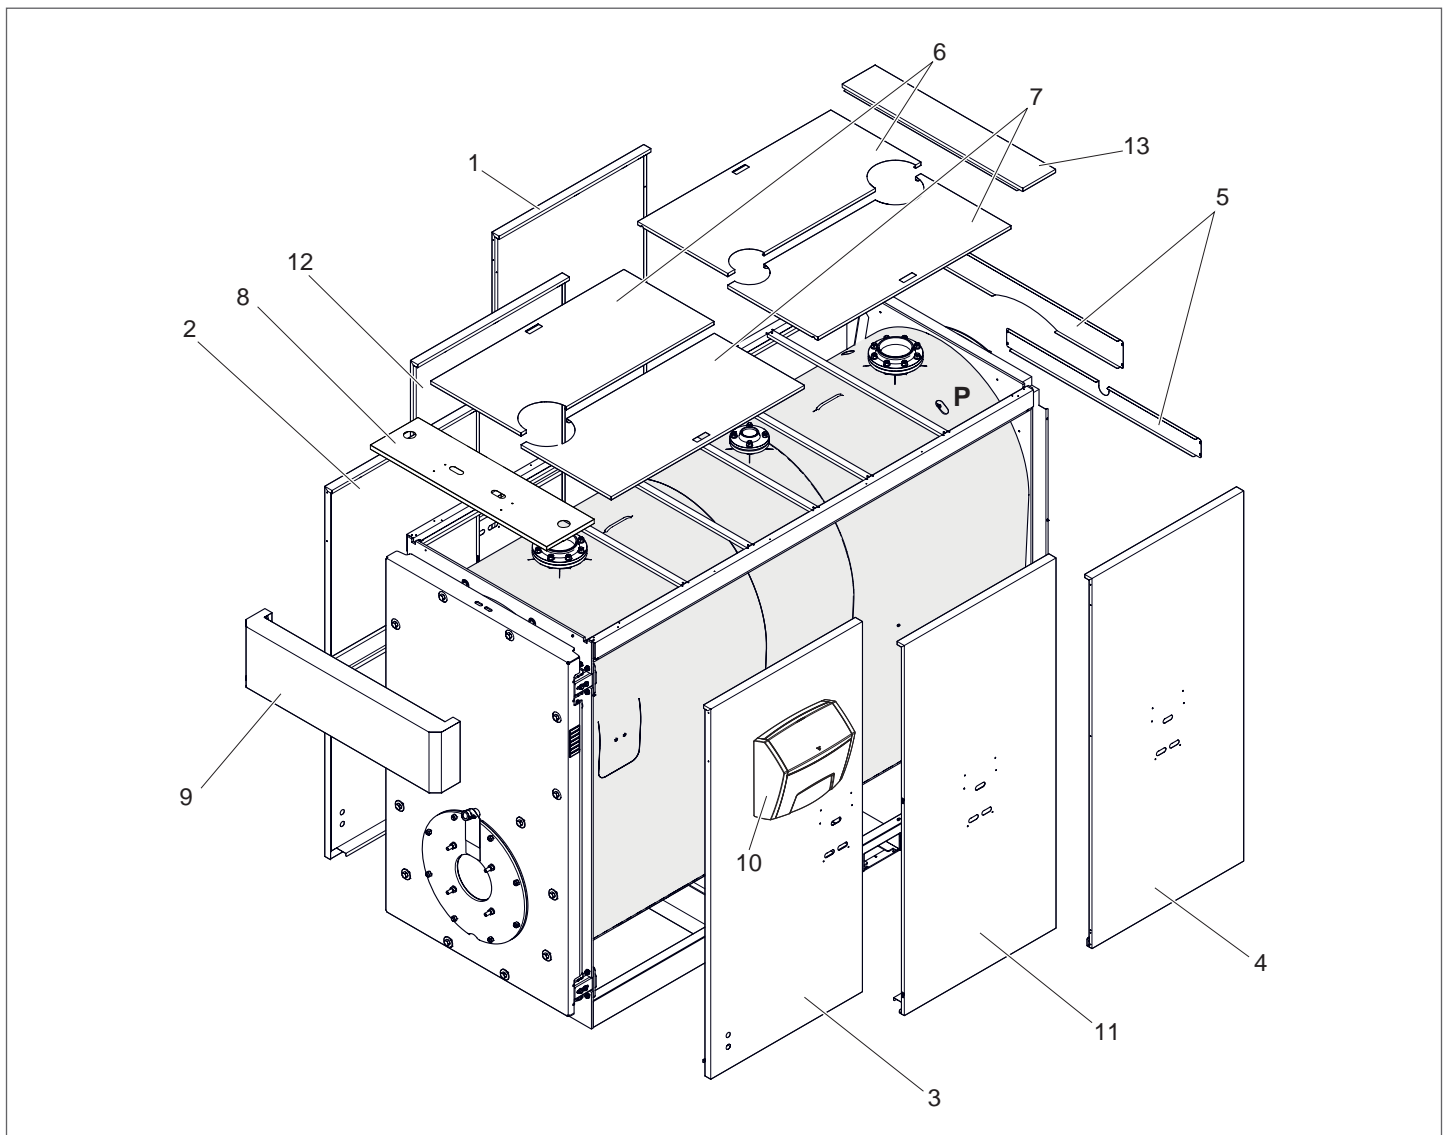


### 3.14.4 Applying nameplate label

Once the panelling has been fitted, attach the follow adhesive labels:

- 1 Data plate:** this lists the technical specifications and performance of the product. It comes inside the documentation envelope.

It is inside the documentation envelope and **MUST BE APPLIED** at the end of the installation by the appliance installer in a clearly visible position as shown in the figure.

If the labels are lost, please request new ones from the **RIELLO** Technical Assistance Service.

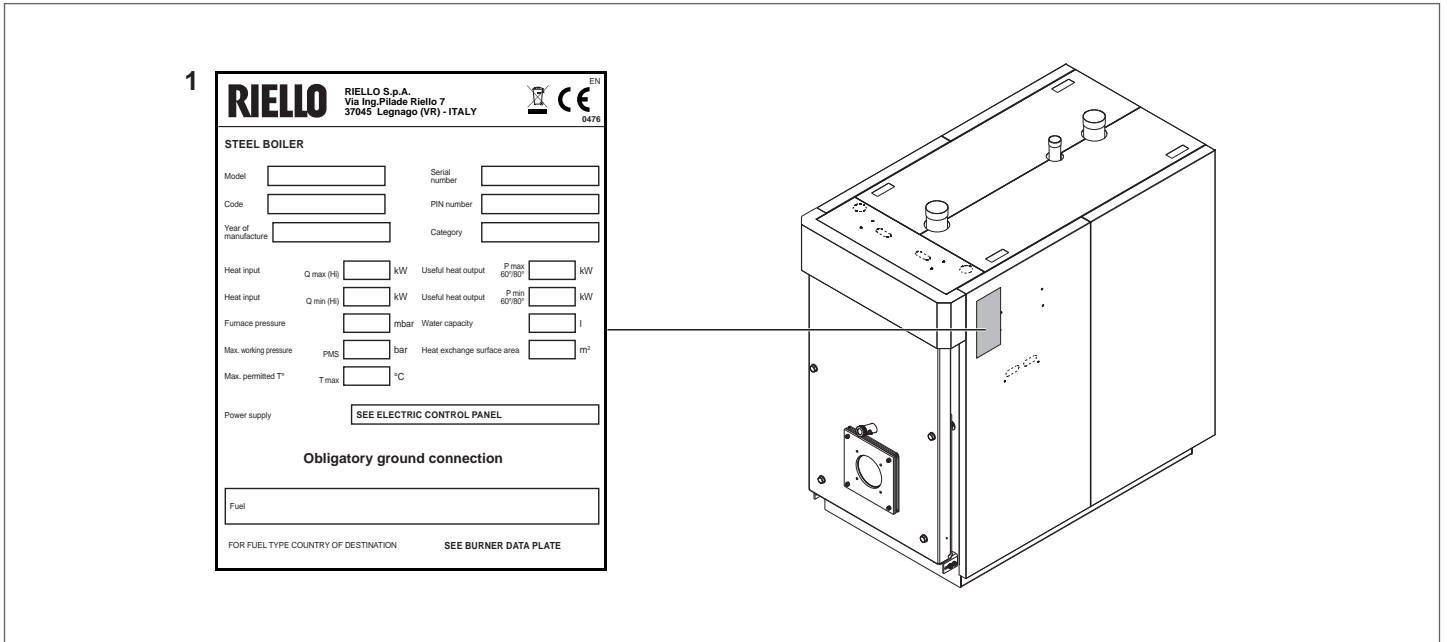


## 4 TECHNICAL ASSISTANCE SERVICE


### 4.1 Preparing for initial startup

It is essential to perform the following checks before starting up or testing the functioning of your **RIELLO RTS 3S** boiler. In particular, check that:


- the protective cardboard sheet (1) has been removed from the ceramic fibre;

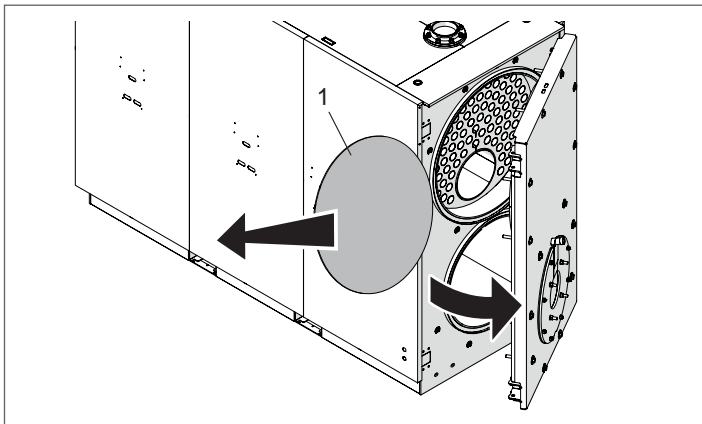


- the turbulators (2) are correctly positioned (vertical position) inside the heat exchanger tubes and the clips (3) are resting against the wall (4) of the heat exchanger;

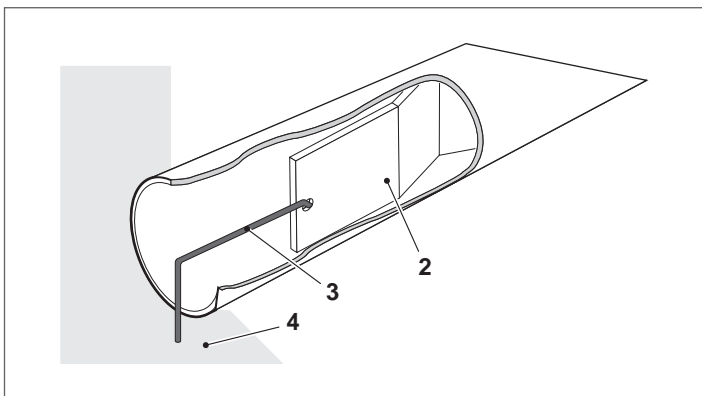


- The water and gas cocks are open

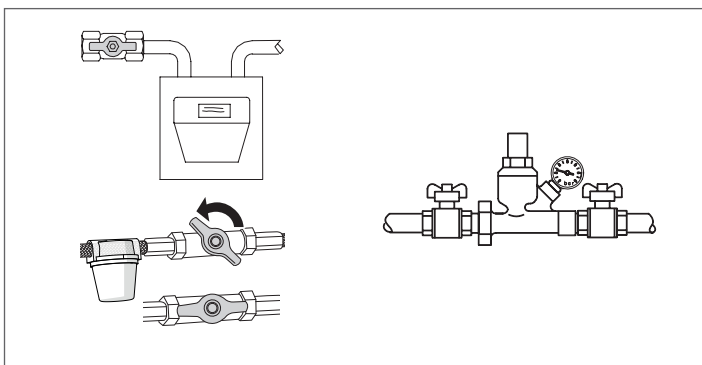

- there is an adequate fuel supply;

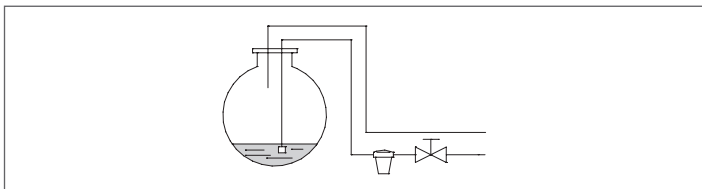


- The expansion vessel is properly charged

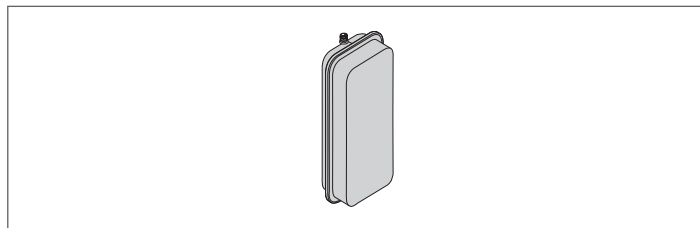

- The working pressure in the heating circuit is **over 1 bar** but below the maximum limit specified for the boiler
- The water circuits have been properly bled



- The mains power connections to the boiler and its accessories (burner, pump, control panel, thermostats, etc.) have been properly made.

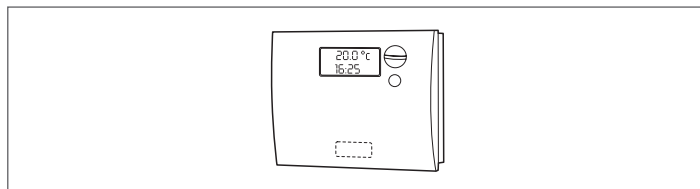


**⚠** The phase-neutral polarity has been respected.

**⚠** A ground (earth) connection is obligatory.


### 4.2 Initial startup

Once you have completed all the preparatory steps, proceed as follows to start up the boiler for the first time:


- turn the system's main power switch ON;
- if the system is equipped with a temperature controller or timer thermostat, make sure that it is switched on;

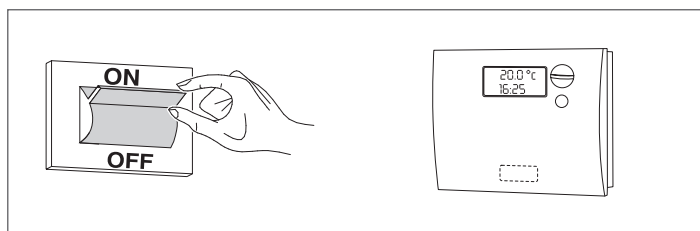

- Turn the control panel power switch ON and make sure that the green power indicator lights;

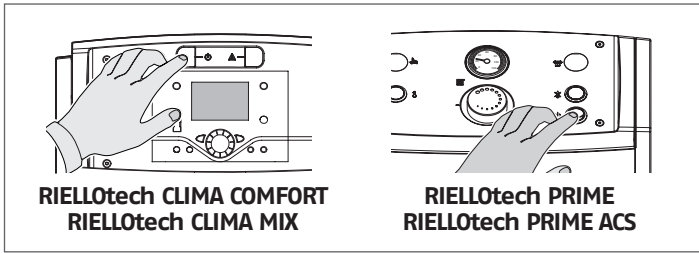

- make the necessary settings as instructed in the instruction manual for your control panel;

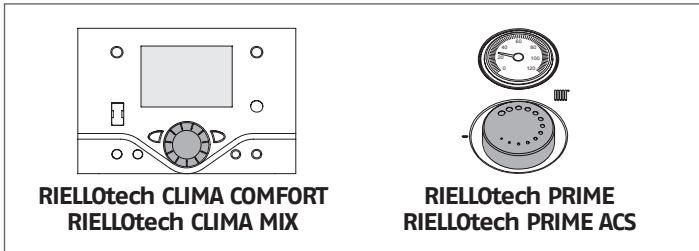


- adjust the timer thermostat/s or temperature controller to the desired temperature (~20°C).

The burner should now ignite and remain in operation until the set temperature is reached.

Subsequent starts and stops will be made automatically according to the desired temperature without the need for further intervention.

If any ignition faults or malfunctions occur, the burner performs a "LOCKOUT SHUTDOWN". This is shown by the red button light on the burner and by the warning light on the control panel.

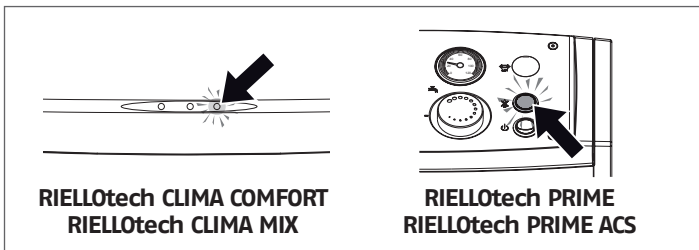

- ⚠ If a "LOCKOUT SHUTDOWN" occurs, wait about 30 seconds before resetting the burner.

To reset the burner, press the red button light on the burner and wait until the flame ignites.


This operation can be repeated 2 or 3 times at the most. If the problem still persists after that, check:

- all checks listed in the burner's own instruction manual;
- all steps listed in the 'Preparing for Initial Start-up' section;
- all the electrical connections shown on the control panel wiring diagrams.

If the problem persists, check that the safety thermostat has not tripped.

- ⚠ If the safety thermostat trips, the boiler shuts down and a warning is displayed on the control panel (if present). Proceed as follows to reset the safety thermostat:


- Wait until boiler temperature falls below 80°C;
- Remove the safety thermostat cover;
- Press the manual reset button;
- Wait for the complete ignition cycle to be repeated and for the flame to ignite.

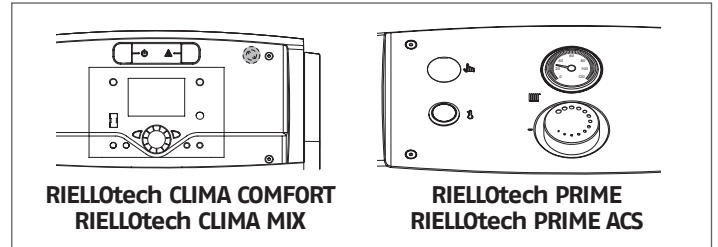


### 4.3 Checks during and after initial start-up

Once the boiler has started up, make sure that it shuts down and re-starts properly when the following actions are taken:

- Set the boiler thermostat to the required setting (making sure that the temperature control is in manual mode)

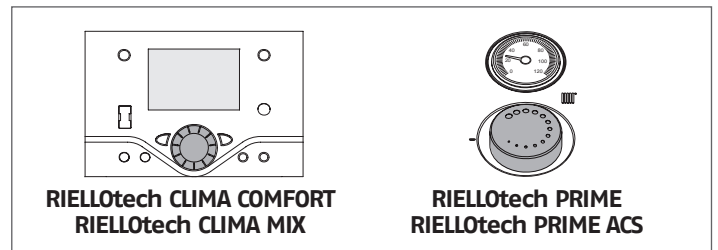


- The control panel is switched OFF
- Set the room thermostat or timer to the required temperature.

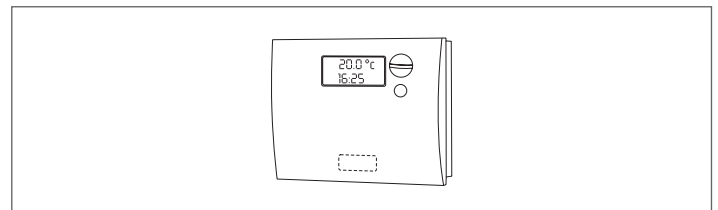


Check that there are no leaks from around the door seal. If there is any leakage of combustion gases, adjust the door as instructed on page 46.



Make sure that all the pumps in the system are free and rotate in the right direction.

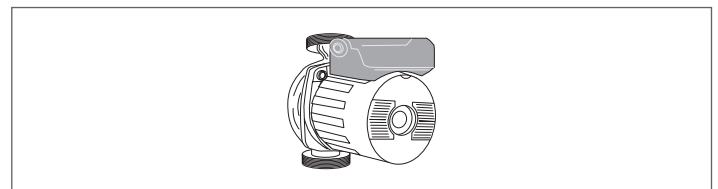

Turn off the main power switch to the boiler and make sure that the boiler shuts down properly.

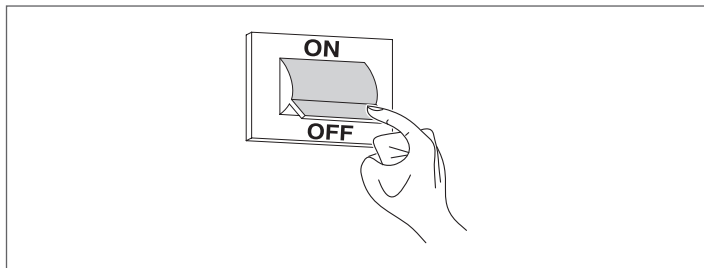

Provided all the above conditions are satisfied, start the boiler up again, then analyse the combustion fumes, measure fuel flow and re-check the door seal.

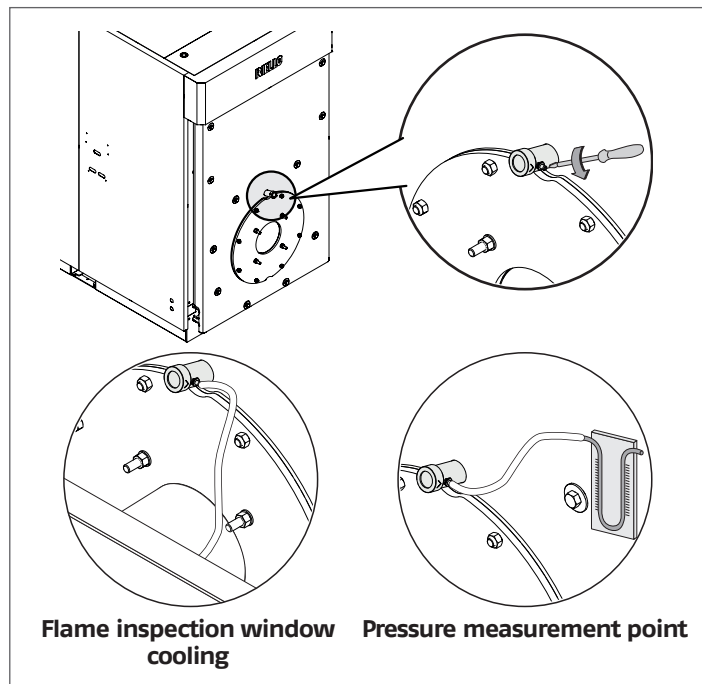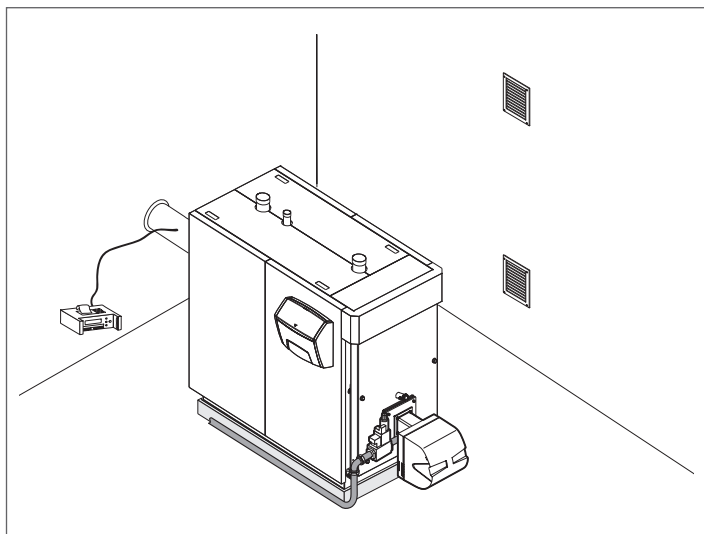

**Flame inspection window cooling**      **Pressure measurement point**

**⚠** A rubber socket is attached to the flame inspection window. If this is used as a pressure measurement point, leave the screw in place in order to close off the pressure measurement line during normal boiler functioning. If the rubber socket is used to cool the flame inspection window, remove the screw to ensure an adequate air flow.


Provided all the above conditions are satisfied, start the boiler up again, then analyse the combustion fumes, measure fuel flow and re-check the door seal.

## 4.4 Maintenance

Regular maintenance is a legal requirement. It is also essential for the safety, efficiency and durability of the boiler. Proper maintenance keeps consumption and emissions down, and ensures that the boiler continues to operate reliably over time. Have your boiler serviced either by **RIELLO's** Technical Assistance Service or by a qualified heating engineer.

Analyse the combustion fumes before commencing any maintenance. The results of fume analysis can give a clear idea of what servicing or repairs are needed.

- Turn the system's main power switch OFF
- Close all the gas cocks.

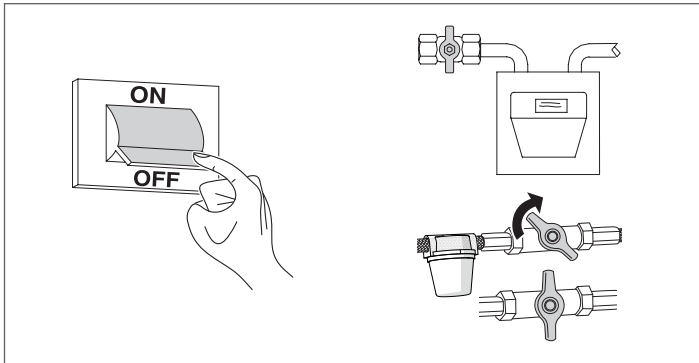


## 4.5 Door opening

### 4.5.1 System A - RTS 90 ÷ 349 3S


- Check that the upper (2) and lower (3) side safety screws and the pin screws are properly tightened;
- Unscrew the main locking screws (1) completely. These are self-supporting on the structure, and open the door.

### 4.5.2 System B - RTS 448 ÷ 1750 3S

- Unscrew the main locking screws (1) completely. These are self-supporting on the structure, and open the door.

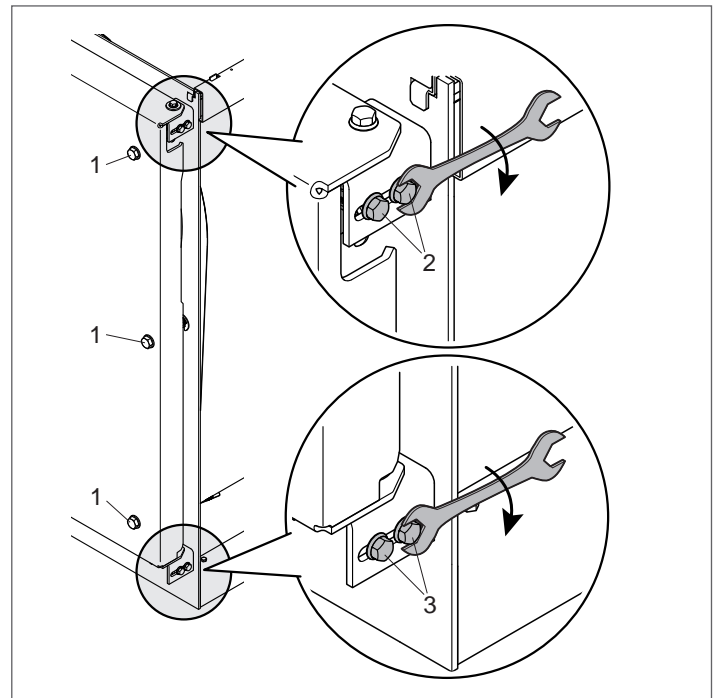

**!** When opening for the first time, remove the pin "A" assembly (bushing (4), screw (5), washer (6)) positioned on the opposite side to the door rotation axis.

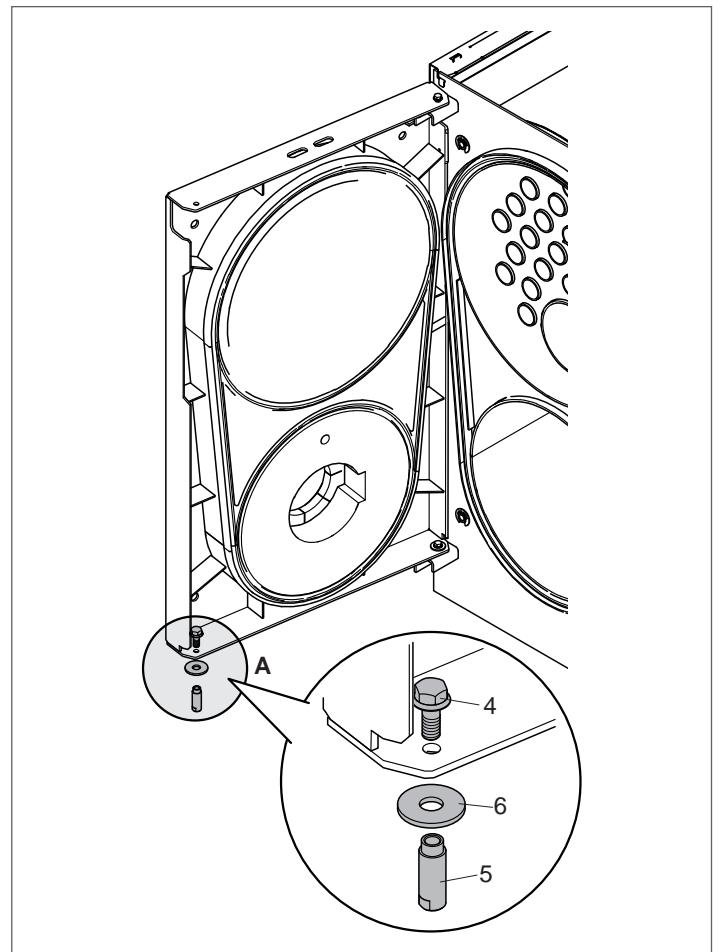

**!** Make sure that the door is properly adjusted after every maintenance operation.

## 4.6 Adjusting the door

- ⚠** Make sure that the door is properly adjusted after every maintenance operation.
- ⚠** Make sure that there are no leaks around the boiler door seal. If you detect any leakage of fumes, increase the tightening of the door fixing bolts.
- ⚠** Make sure that the door is properly adjusted after every maintenance operation.


Make quite sure that the door presses uniformly all around the double seal to prevent dangerous fumes escaping into the air from the pressurized furnace. Proceed as follows to adjust the door seals:

### 4.6.1 System A - RTS 90 ÷ 349 3S

- Fit the door and tighten the main fixing bolts (1) until the seals start to compress;
- Loosen the safety screws (2) and (3) and fully tighten the main locking screws (1) of the door;
- Tighten the safety screws (2) and (3).


### 4.6.2 System B - RTS 448 ÷ 1450 3S

- Fit the door and tighten the main fixing bolts (1) until the seals start to compress.

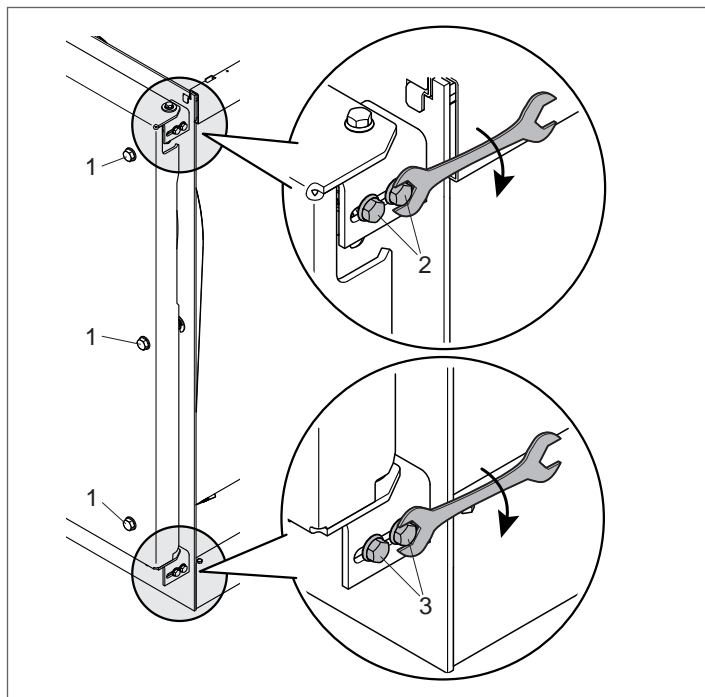

### 4.6.3 System C - RTS 1750 3S

- Loosen the nut (4) of the lower hinge and adjust the vertical alignment of the door opening/closing movement by acting on the screw (5);
- When finished, screw the nut on completely (4);
- Check the correct opening/closing of the door.

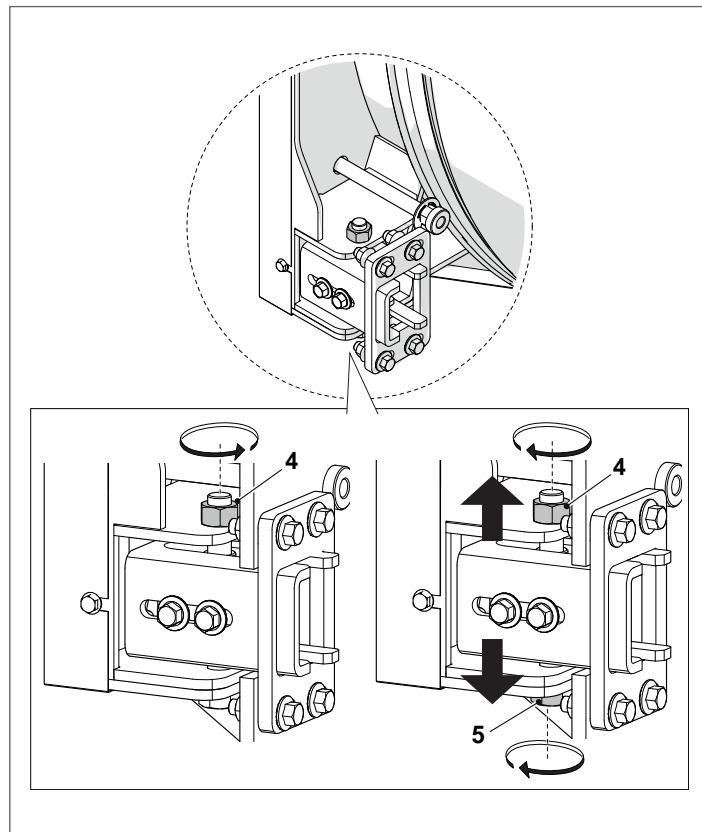

## 4.7 Cleaning the boiler

**⚠ DANGER:** Risk of death due to electric shock!  
 - Prior to opening the unit: disconnect the power supply and block it to prevent accidental reactivation.

**⚠ WARNING:** Damage to the system!  
 - Do not use abrasive cleaners or powder detergents.

**⚠ WARNING:** The combustion chamber and flues must be cleaned periodically - at least once a year - by a qualified technician.


Clean the boiler and remove any carbon deposits from the surfaces of the heat exchanger **at least once a year**. This not only extends the boiler's working life, but also keeps it efficient in terms of heat output and consumption.

Proceed as follows to clean the boiler:

- open the front door (1) and remove the turbulators (2);

**⚠** If you need to replace any turbulators, make sure that the replacements have the characteristics listed in the table below.

- Clean the inner surfaces of the combustion chamber and flue gas path using a brush (3) or other suitable tools;
- remove deposits accumulated in the flue gas box through the opening released by the inspection door.

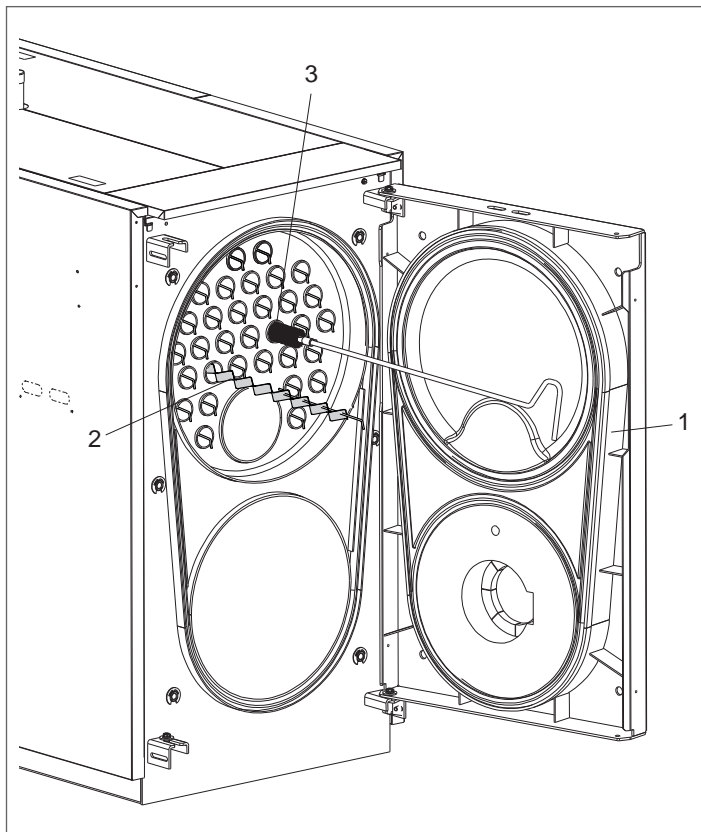

**⚠** Every 300 hours of operation, the use of light oil burners with a smoke value greater than 3 involves:  
 - clean the boiler's heat exchange surfaces;  
 - check and clean the turbulators. Replace if worn or damaged.

	CALDAIA RTS 3S						
	90	115	166	217	255	349	448
N° turbulators	22	22	27	32	38	40	55

	CALDAIA RTS 3S						
	511	639	750	850	1160	1450	1750
N° turbulators	55	61	71	71	71	90	98

### Boiler inspection - water-side

#### RTS 1450 - 1750 3S


Carrying out the inspection is important in order to check the condition of thermal exchange surfaces and the presence of sludge or lime scale.

The boiler's front door and the flue gas box can be opened completely to facilitate the inspection, maintenance and cleaning of internal parts and to speed up servicing in general.

**⚠** All the operations indicated MUST be carried out with:  
 - The appliance cold;  
 - The appliance electrically disconnected;  
 - Suitable personal protection equipment;  
 - The water and fuel shut-off valves closed.

In order to inspect the upper part of the boiler, partially empty the boiler before opening inspection openings.

The inspection openings are as follows:

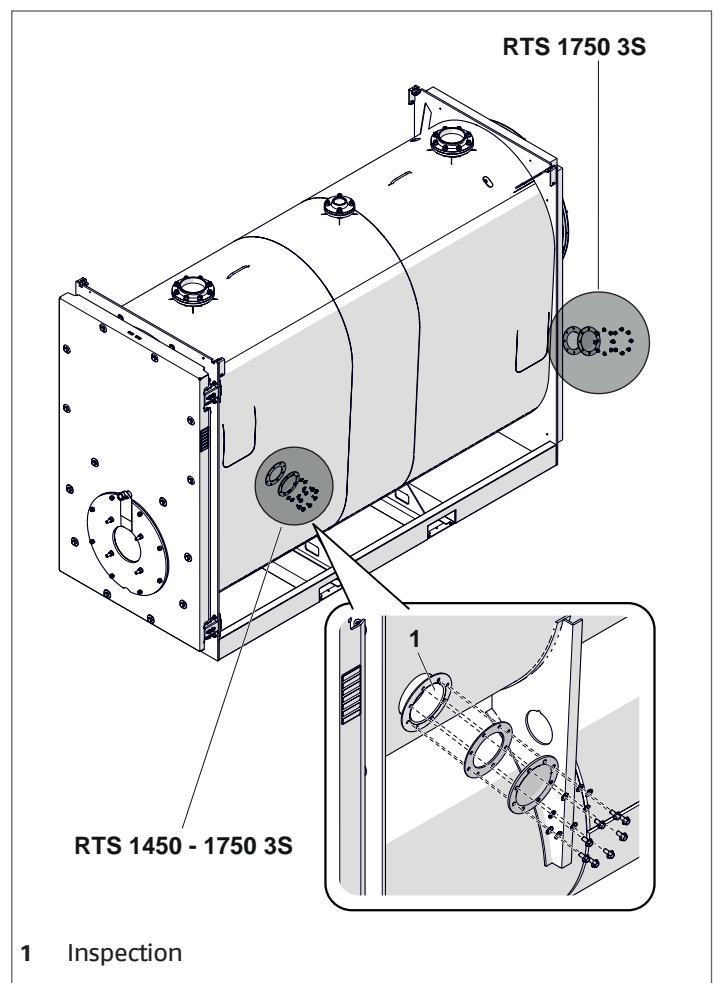

Check the state of wear of the gaskets and replace them if necessary.

Once the maintenance operations are complete, refit the components working in the opposite direction of what was described.

Slowly charge the boiler to a minimum pressure value of 1 bar.



Check that the boiler drain cock is closed prior to filling.

On completion of cleaning, follow the above steps in the reverse order to refit all removed parts.

## 4.8 External cleaning

---

The external panels of the boiler and control panel must be cleaned using cloths moistened with soap and water.

To remove marks from the boiler casing, use a cloth damped in a 50% mix of water and denatured alcohol or a suitable cleaning product.

Carefully dry after cleaning.



Do not use abrasive products, petrol or triethylene.

## 4.9 Troubleshooting

FAULT	CAUSE	SOLUTION
<b>The boiler becomes dirty very quickly</b>	Burner badly adjusted	- Check the adjustment of the burner (perform flue gas analysis)
	Blockage in stack	- Clean the flue gas pipes and stack
	Burner air intake dirty	- Clean the burner air intake
<b>The boiler does not reach its temperature setpoint</b>	Boiler dirty	- Clean the flue gas pipes
	Boiler and burner mismatched	- Check specifications and settings
	Insufficient air/fuel flow to burner	- Check and adjust the burner
	Incorrect adjustment	- Check correct functioning - Check the temperature setting
<b>The boiler keeps shutting down, and the control panel warning light comes on</b>	Incorrect adjustment	- Check correct functioning - Check the temperature setting - Check the electrical wiring - Check the sensors
	No water supply	- Check the circuit pressure
	Air in the circuit	- Check the circuit pressure - Check the vent valve
<b>The generator is at temperature but the heating system is cold</b>	Air in the circuit	- Bleed the circuit
	Pump malfunctioning	- Check/unseize the pump
	Problem with minimum temperature thermostat (if present)	- Check the temperature setting
	Problem with minimum temp. thermostat (if present)	- Check the efficiency of the expansion vessel
<b>The generator does not switch on (no fault light signal)</b>	Intervention of the transfer pump auxiliary control safety thermostat	- Check the complete deaeration of the compartmentalised zones of the hydraulic circuit - Check correct functioning - Check operation of the transfer pump activation thermostat or bit thermostat - Check the auxiliary control safety thermostat
<b>There is a smell of fumes</b>	Fumes escaping into the air	- Clean the boiler body - Clean the flue gas pipes - Check that the boiler, flue gas pipes and stack are all properly sealed - Check the door seal
<b>There is a smell of gas</b>	Gas supply circuit	- Check the seals, possible blockages and fuel quality
<b>The safety valve keeps opening</b>	Circuit pressure too high	- Check the circuit pressure - Check pressure reducer functioning - Check pressure reducer setting
	Problem with heating system expansion vessel	- Check the efficiency of the expansion vessel



A series of horizontal dashed lines spanning the width of the page, providing a template for handwriting practice.



# RIELLO

RIELLO S.p.A.  
Via Ing. Pilade Riello, 7  
37045 - Legnago (VR)  
[www.riello.com](http://www.riello.com)

The manufacturer strives to continuously improve all products. Appearance, dimensions, technical specifications, standard equipment and accessories are therefore liable to modification without notice.