

Solar storage tanks 7000

EN INSTALLATION INSTRUCTIONS

RIELLO

Dear Installer,
 Thank you for choosing a Riello 7000 solar storage tank. You have purchased a modern, quality product that is designed to give dependable and safe service and to provide comfort for many years to come. Arrange for the storage tank to be serviced regularly by an authorised Riello Technical Assistance Centre. Their personnel are specially trained to keep your storage tank efficient and cheap to run. Technical Assistance Centres also stock any original spare parts that might be required. This instruction manual contains important instructions and precautions that must be observed to ensure the trouble-free installation and efficient functioning of your Riello 7000 solar storage tank.

Please accept our renewed thanks for your purchase.
 Riello

MODEL	CODE
RIELLO 7000.1000/S	20136260
RIELLO 7000.1500/S	20136261
RIELLO 7000.2000/F	20136256
RIELLO 7000.3000/F	4383411
RIELLO 7000.5000/F	4383412

Contents

1	Safety precautions	3
2	General safety information	3
3	Product description	4
4	Identification	4
5	Design	5
6	Technical specifications	6
7	Pressure drops	6
8	Dimensions and weight	7
9	Unpacking the product	8
10	Handling	9
11	Place of installation	9
12	Installation in older systems and systems requiring modernisation	9
13	Fitting the insulation	10
14	Preparing for initial start-up	11
15	Maintenance	11
16	Cleaning and removing internal components	11

The following symbols are used in this manual:

-  CAUTION! = Indicates actions that require caution and adequate preparation.
-  STOP! = Identifies actions that you MUST NOT do.

1 Safety precautions

- ⚠ Check that the product is complete, undamaged and as ordered as soon as you receive it. Report any discrepancies or damage to the **RIELLO** dealer who sold it.
- ⚠ This product must be installed by a legally qualified heating engineer. On completion of the installation, the installer must issue the owner with a declaration of conformity confirming that the installation has been completed to the highest standards in compliance with the instructions provided by **RIELLO** in this instruction manual, and that it conforms to all applicable laws and standards.
- ⚠ This product must only be used for the purpose for which it is designed and made, as specified by **RIELLO**. **RIELLO** declines all responsibility, contractual or other, for damage to property or injury to persons or animals caused by improper installation, adjustment, maintenance or use.
- ⚠ The product must be serviced at least once a year. Servicing must be arranged in advance with the **RIELLO** Technical Assistance Centre.
- ⚠ All servicing and repairs must be performed by a qualified heating engineer.
- ⚠ If water leaks from the storage cylinder, turn off the water supply and contact **RIELLO**'s Technical Assistance Centre or a qualified heating engineer immediately.
- ⚠ If the product is not going to be used for an extended period of time, contact the manufacturer's Technical Assistance Centre to have at least the following operations performed:
 - Close the shut-off cocks for the domestic hot water circuit
 - Shut down the boiler connected to the storage cylinder as instructed in its own manual
 - Switch the storage cylinder OFF at the control panel (if fitted) and at the mains power switch
 - Drain the central heating circuit and domestic hot water circuit if there is any risk of freezing.
- ⚠ This instruction manual is an integral part of the product. It must be kept safe and must ALWAYS accompany the product, even if it is sold to another owner or transferred to another user or to another installation. If you lose this manual, order a replacement immediately. Keep the product purchase documents to be presented to the **RIELLO** authorised Technical Assistance Centre to request a service call under warranty.
- ⚠ Size the solar expansion tank so as to ensure complete absorption of the expansion of the fluid contained within the system, with reference to the prevailing regulations on the matter. In particular, consider fluid characteristics, considerable fluctuation of service temperature and vapour that might be generated during solar collector stagnation stage. Proper size of expansion tank ensures setting off of all volume changes of the heat transfer fluid, avoiding excessive pressure increase. Limited pressure changes avoid reaching safety valve opening pressure and the consequent fluid drainage.

2 General safety information

Please remember that the use of products using electric power and water involves respect for a few basic safety rules such as:

- ⊘ Never attempt to install the system without using suitable personal protection equipment and without following all applicable occupational safety standards.
- ⊘ Do not touch the product when barefoot or wet if it has any electrical accessories installed in it.
- ⊘ Never clean or service the storage cylinder without first turning the mains power switch OFF to disconnect all electrical accessories (if fitted) from the mains electricity supply.
- ⊘ Never pull, disconnect, or twist any electrical cables coming from the appliance even if it is disconnected from the mains electricity supply.
- ⊘ Do not expose the storage cylinder to the elements. It is not designed for use outdoors.
- ⊘ If solar plant pressure decreases, it is forbidden to top up with only water as there is a danger of freezing and overheating.
- ⊘ Do not use connections or safety devices or fittings (expansion vessels, pipes, insulation) that are not specifically designed and tested for use in solar water heating systems.
- ⊘ Do not allow children or infirm persons to operate the system unsupervised.
- ⊘ Do not dispose of packaging material into the environment, or leave it within the reach of children, since it can become a potential hazard. Dispose of packaging material in compliance with applicable legislation.

3 Product description

Solar storage tanks are specifically designed for integration in central heating systems (not for DHW use). The most important technical features of these storage tanks are:

- The tank and coils (only for models where provided) are specially designed and shaped for optimum performance in terms of stratification, heat exchange and replenishment times.
- Water fittings are available at different heights, permitting different hot water generators to be used without reducing the stratification effect.
- CFC-free polyurethane insulation and an elegant external coating reduce heat loss and improve efficiency.

- A flange is provided for easy cleaning and to allow an extra heat exchanger to be added (only for models where provided).

Storage tanks can be connected to a special solar controller and can be integrated in solar heating systems in which Riello boilers or water heaters serve as auxiliary heat generators.

4 Identification


Riello 7000 solar storage tanks are identified by three plates. (On models Riello 7000.2000/F - 3000/F - 5000/F these must be applied by the installer after the insulation has been fitted, see page 20).

- Data plate
This lists the technical specifications and performance of the product.

RIELLO		Riello S.p.A. Via degli Alpini 1 37045 Legnago (VR) - Italy	CE
scACCUMULO INERZIALE			
Model	<input type="text"/>	Serial number	<input type="text"/>
Code	<input type="text"/>	Year of manufacture	<input type="text"/>
Storage cylinder capacity	<input type="text"/>	l	
Maximum absorbed power [Primary T = 80°C]	<input type="text"/>	kW	
Specific flow rate [ΔT 35°C]	<input type="text"/>	l/m ²	
Maximum working pressure of coil	<input type="text"/>	bar	
Maximum working temperature of coil	<input type="text"/>	°C	
Maximum working pressure of cylinder	<input type="text"/>	bar	
Maximum working temperature of cylinder	<input type="text"/>	°C	
Heat loss	<input type="text"/>	kW/24h	
Electrical consumption	<input type="text"/>	W	
Power supply	<input type="text"/>	V-Hz	
Obligatory ground connection			

- Product identification plate
This bears the name of the product.

RIELLO		Riello S.p.A. Via degli Alpini 1 37045 Legnago (VR) - Italy	CE
Serial number	<input type="text"/>	Maximum absorbed power	<input type="text"/> kW
Model	<input type="text"/>	Storage cylinder capacity	<input type="text"/> l

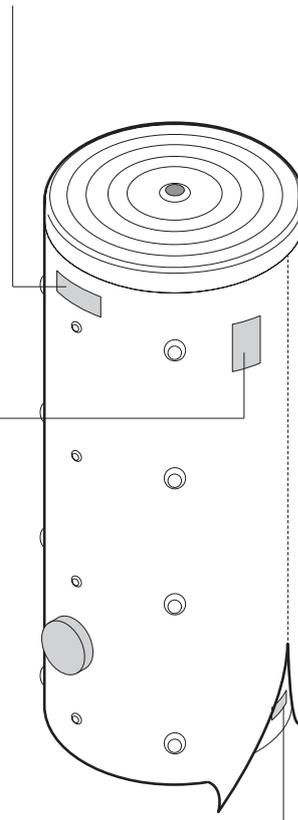

- Serial number plate
This specifies the serial number, model, consumption and capacity.


⚠ If these plates or any other means of clearly identifying the product are defaced, removed or lost, proper installation and servicing may be rendered difficult.

5 Design

Riello 7000.1000/S and 1500/S models

- 1 - Soft polyurethane insulation (100 mm)
- 2 - Vent/outlet fitting ($\varnothing 1\frac{1}{4}F$)
- 3 - Outlet/return fittings ($\varnothing 1\frac{1}{2}F$)
- 4 - Probe wells (8 mm)
- 5 - Collector outlet fitting ($\varnothing 1\text{'' F}$)
- 6 - Collector return fitting ($\varnothing 1\text{'' F}$)
- 7 - Tank
- 8 - Coil


	Riello 7000.1000/S	Riello 7000.1500/S	
A	280	390	mm
B	805	850	mm
C	1335	1310	mm
D	1860	1770	mm
E	280	390	mm
F	990	1290	mm

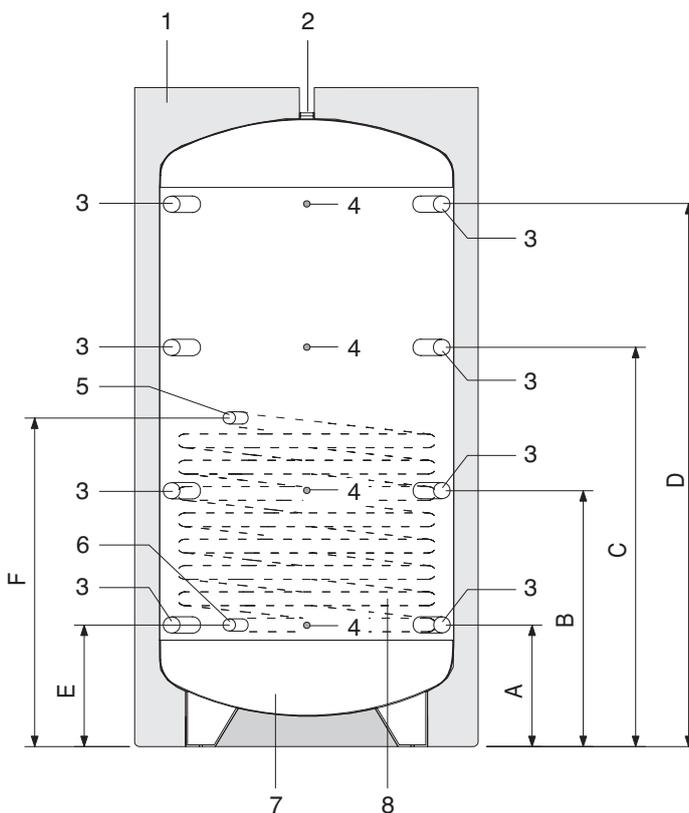

Riello 7000.2000/F - 3000/F - 5000/F models

- 1 - Soft polyurethane insulation (100 mm)
- 2 - Vent/outlet fitting ($\varnothing 1\frac{1}{4}F$)
- 3 - Outlet/return fittings ($\varnothing 1\frac{1}{2}F$)
- 4 - Probe wells (8 mm)
- 7 - Tank
- 9 - Tank inspection flange

	Riello 7000.2000/F	Riello 7000.3000/F	Riello 7000.5000/F	
A	390	390	465	mm
B	950	1020	1095	mm
C	1510	1650	1725	mm
D	2070	2280	2355	mm

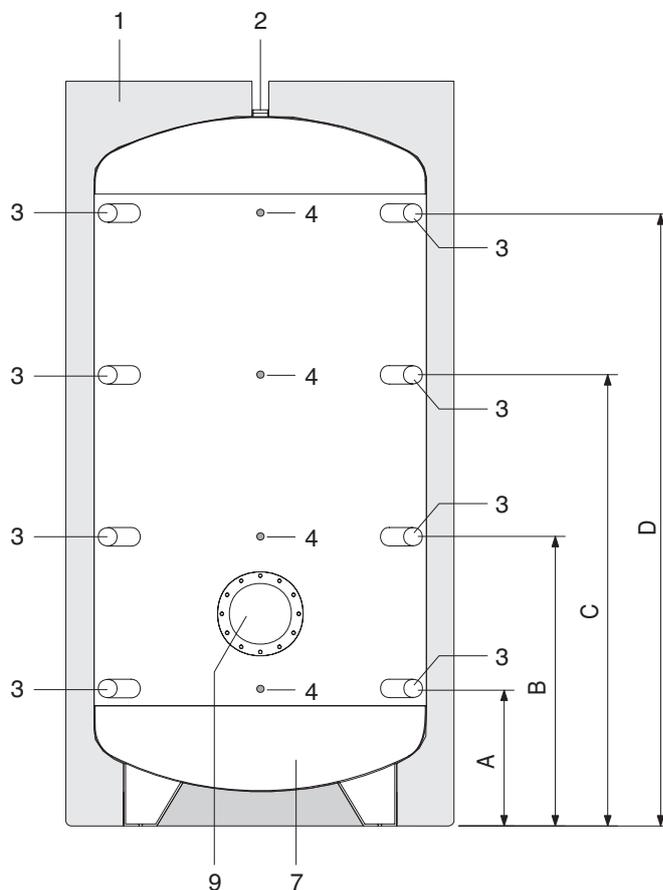


6 Technical specifications

DESCRIPTION	Riello 7000. 1000/S	Riello 7000. 1500/S	Riello 7000. 2000/F	Riello 7000. 3000/F	Riello 7000. 5000/F	
Type of buffer tank	non vitrified					
Tank layout	Vertical					
Buffer tank capacity	920	1410	2010	2959	5055	l
Diameter with insulation	990	1200	1300	1450	1800	mm
Diameter of storage cylinder without insulation	790	1000	1100	1250	1600	mm
Height with insulation	2190	2165	2480	2720	2870	mm
Height without insulation	2115	2090	2405	2645	2795	mm
Insulation thickness	100					mm
Flange diameter (external/internal)	-	-	290/220	290/220	290/220	mm
Maximum operating pressure	3					bar
Maximum operating temperature	99					°C
Net weight with insulation	172	239	330	415	570	kg
Diameter of sensor socket	8					mm
Coil water capacity	14,6	21,6	-	-	-	l
Coil heat exchange surface area	2,6	3,8	-	-	-	m ²
Power absorbed by coil (*)	68	99	-	-	-	kW
Flow required at coil (*)	2,9	4,2	-	-	-	m ³ /h
Maximum working temperature of coil	110		-	-	-	°C
Maximum operating pressure of coil	6		-	-	-	bar
Discharges according to EN 12897:2006 ($\Delta T=45$ °C, ambient 20°C and storage at 65°C)	143	167	190	344	646	W
	3,43	4,01	4,56	8,256	15,504	kWh/24h
Insulation type	Soft PU shells					


(*) In accordance with DIN 4708 with a ΔT of 20°C (80°/60°C) at the coil.

7 Pressure drops

COIL pressure drop (Riello 7000.1000/S -1500/S models only)

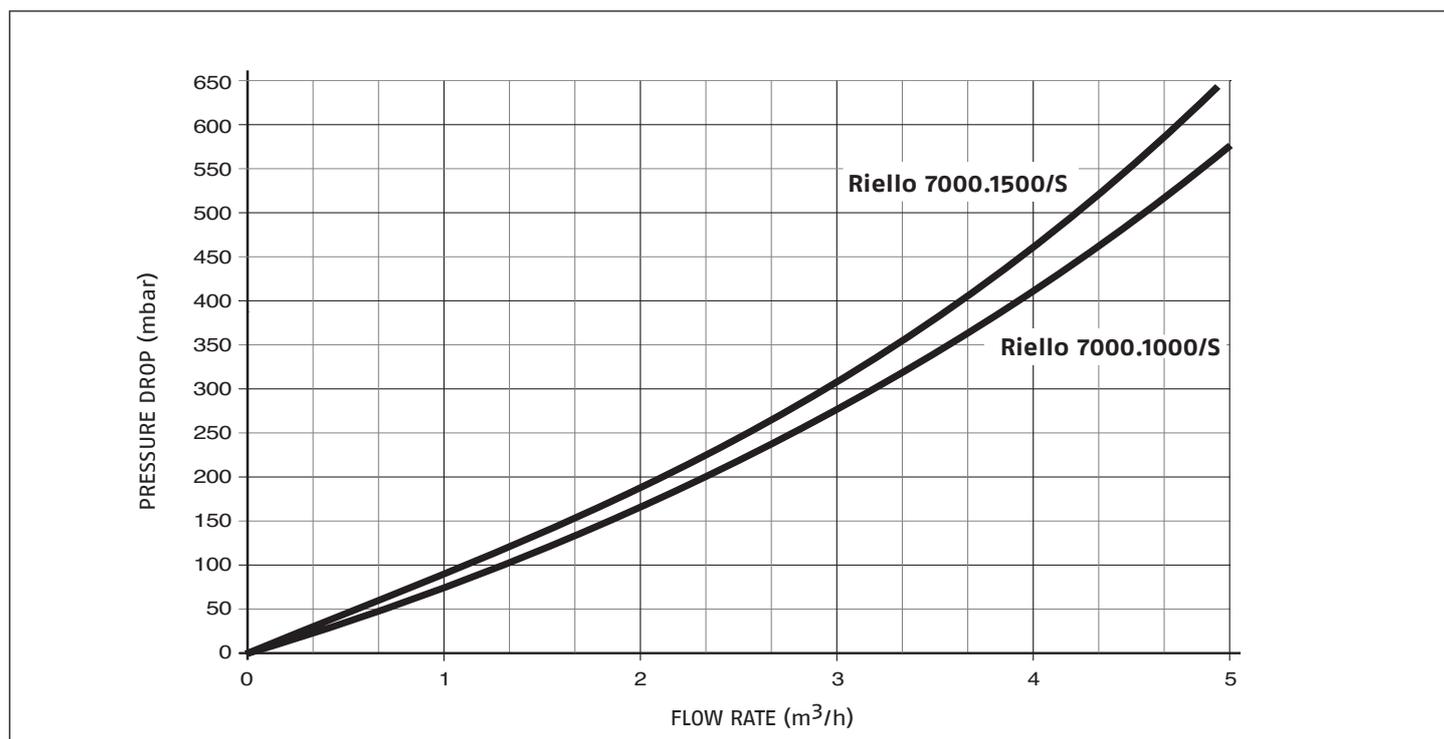

Heat exchanger coil KIT PRESSURE DROP (Riello 7000.2000/F - 3000/F - 5000/F models only)

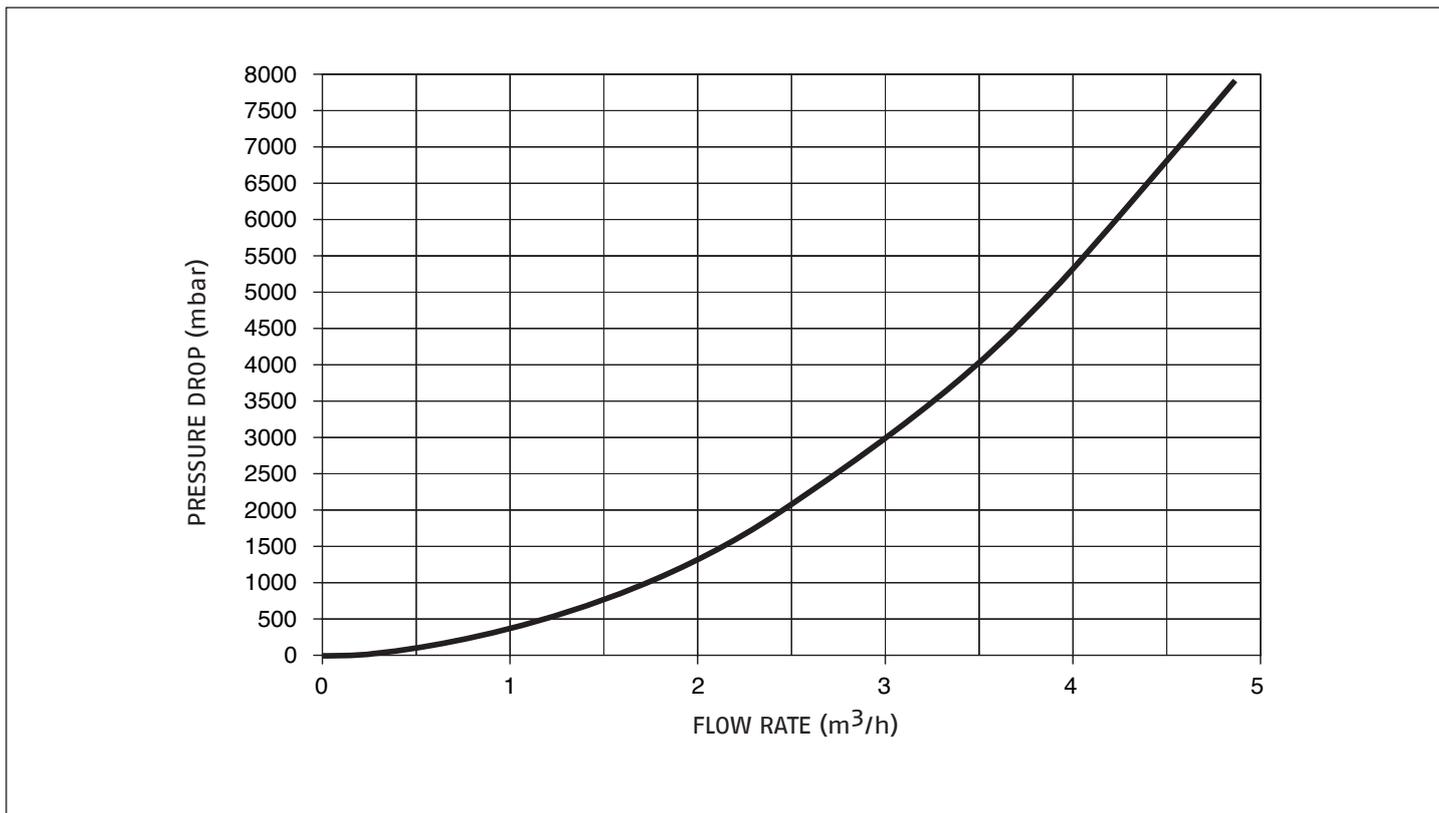

8 Dimensions and weight

**Riello 7000.1000/S e
1500/S models**


**Riello 7000.2000/F - 3000/F -
5000/F models**

	Riello 7000. 1000/S	Riello 7000. 1500/S	Riello 7000. 2000/F	Riello 7000. 3000/F	Riello 7000. 5000/F	
H - Height	2190	2165	2480	2720	2870	mm
Ø - Diameter	990	1200	1300	1450	1800	mm
Net weight with insulation	172	239	330	415	570	kg

9 Unpacking the product

Riello 7000.1000/S e 1500/S solar storage tanks are delivered in a single package, protected by a plastic bag and supported by a wooden pallet.


Riello 7000.1000/S - 1500/S

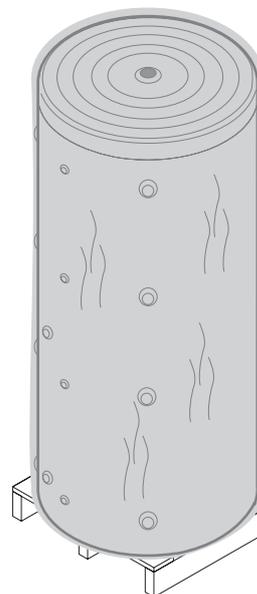

Riello 7000.2000/F - 3000/F - 5000/F solar storage tanks are delivered in two separate packages:

- The first contains the painted tank, protected by a plastic bag and supported on a wooden pallet. The tank is complete with four probe wells fitted in special sleeves. (All other sleeves are covered with protective caps.) The counter-flange comes ready bolted to the tank's flange and fitted with a seal.
- The second package contains another plastic bag with the elegantly finished polyurethane insulation, fitting sleeves for the insulation, thermoformed cover, flange cover, identification plates and documentation.

Riello 7000.2000/F - 3000/F - 5000/F

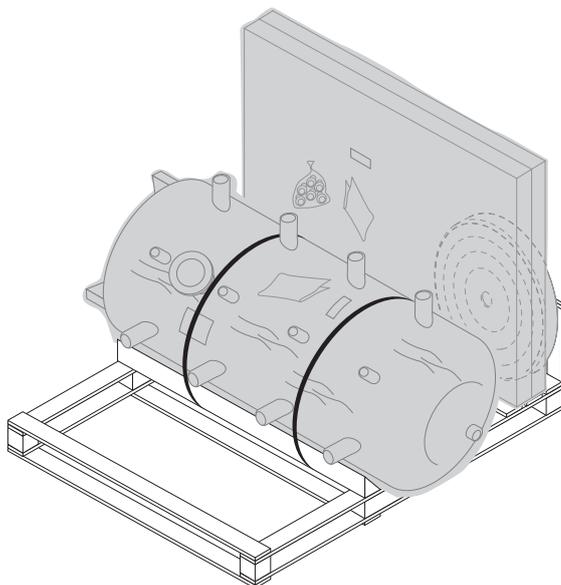

The following items are delivered in a plastic bag inside the packaging:

- instruction manual
- data plate and label with bar code
- hydraulic test certificate.

⚠ The instruction manual is an integral part of the solar storage tank. Once located, read it thoroughly and keep it safe.

10 Handling



Make sure that any lifting equipment is of adequate capacity to lift and move the storage tank.

Cut the straps (1) to remove the tank from the pallet. On Riello 7000.1000/S e 1500/S models the straps are located under the insulation at the hinges.

The storage tanks are fitted with a plug (2) into which you can screw a lifting eyebolt (\varnothing 10 mm). Make sure that the eyebolt is strong enough to lift the weight of the tank.

To lift Riello 7000.2000/F – 3000/F – 5000/F storage tanks, first remove the insulation, then attach a rope of adequate strength to the top of the tank before proceeding to lift with great care.

-  Wear suitable personal protective equipment and use suitable safety devices.
-  Do not leave packaging material within the reach of children, since it can become a potential hazard.

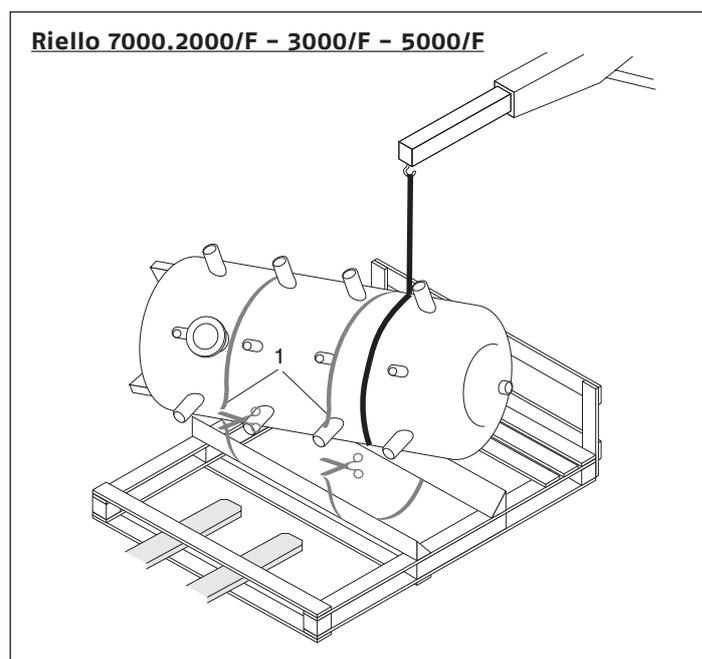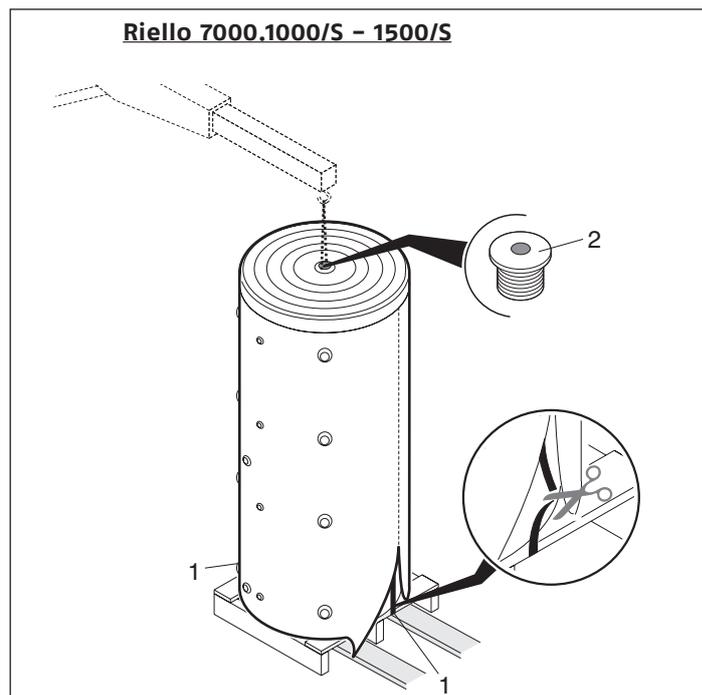

11 Place of installation

Riello 7000 solar storage tanks can be installed in any room where there is no specific requirement for an electrical protection rating higher than IP X0D.

-  The room where the appliance is installed must, however, be dry to prevent the formation of rust.
-  Respect the minimum specified installation distances to ensure correct installation and access for maintenance

12 Installation in older systems and systems requiring modernisation

When installing Riello 7000 solar storage tanks in old systems or systems requiring modernisation, always perform the following checks:

- Make sure that the system is fitted with safety and control devices in accordance with applicable legislation and standards.
- Make sure that the system has been flushed out to remove all sludge and lime scale, and has been vented and seal tested.


13 Fitting the insulation (Riello 7000.2000/F - 3000/F - 5000/F)

Once the storage tank is correctly positioned inside the room where it is to be installed, proceed to fit the insulation and the accessories to complete the tank.

Proceed as follows:

- Unpack all the material from the second package.

- Wrap the insulation (1) around the storage tank, carefully lining up the fittings with the holes on the inside of the insulation. Secure the insulation in place with the zips (2) at the edges of the two sections.

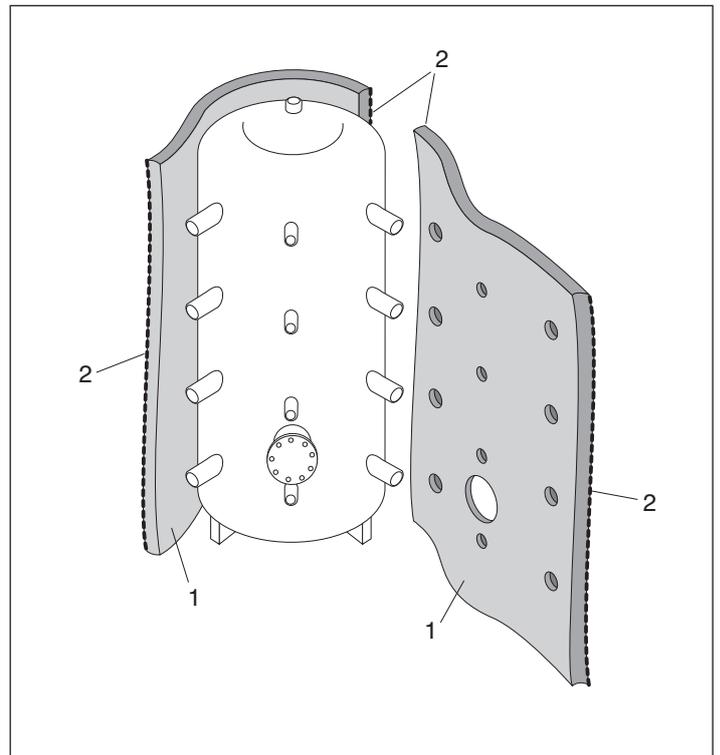


- Perforate the insulation at the fittings and fit the insulation sleeves (3).

- Fit the flange cover (4).

- Finally, fit the insulation top panel (5) and cover it with the cover (6).


⚠ With all the insulation in place, apply the serial number plate, data plate and product identification plate to ensure that the storage tank can be accurately identified (see the plate positions on page 14).

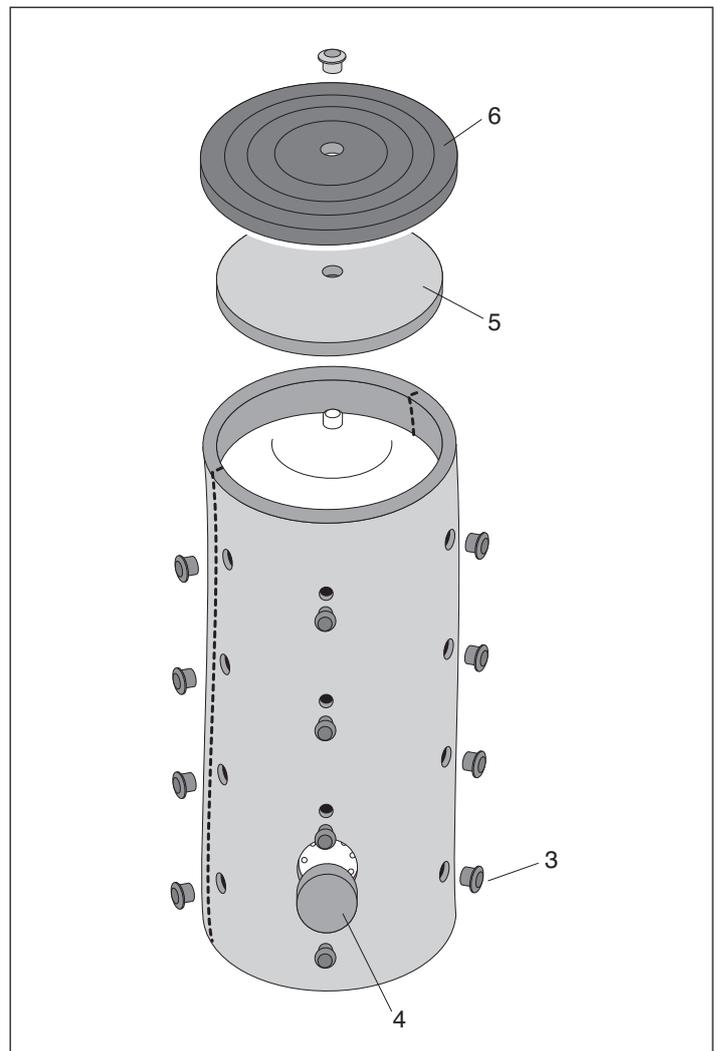

14 Preparing for the initial start-up

It is essential to perform the following checks before starting up or testing the functioning of the storage tank. In particular, check that:

- The supply cocks are all open in the heating water circuit.
- The water connections to the boiler and to the valve group of the solar heating system have been made correctly.
- The solar heating circuit has been correctly flushed out and filled with water-glycol mix, and all air has been bled out of the circuit


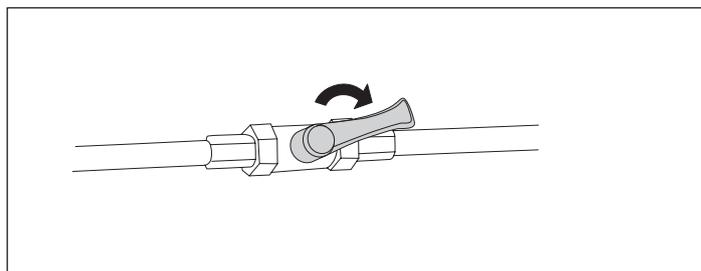


15 Maintenance

Scheduled maintenance is essential for the safety, efficiency and long working life of your solar storage tank. Proper maintenance also reduces energy consumption and ensures reliability over time. Have your storage tank serviced either by a Riello Technical Assistance Centre or by a qualified professional at least once a year.

Perform the following operations before beginning any maintenance.

- Switch the electricity supply to all the devices in the storage tank's water circuit and to any associated boiler OFF at the main switch and at the control panel.
- Close the shut-off cocks for the heating water circuit.
- Drain the storage tank, or its secondary circuit if a primary circuit is connected.

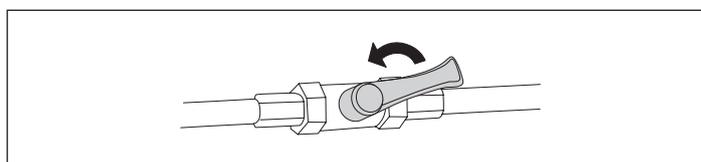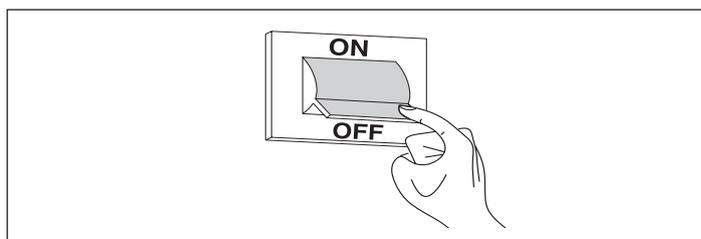

16 Cleaning and removing internal components

EXTERNAL CLEANING

Clean the outside of the storage tank's insulation with a soft cloth damped in soapy water. To remove stubborn marks, use a cloth damped in a 50% mix of water and denatured alcohol or a suitable cleaning product. Dry the storage tank after cleaning it.

- ⊘ Do not use abrasive products, petrol or triethylene.

INTERNAL CLEANING

(Riello 7000.2000/F - 3000/F - 5000/F models only)

- Use a wrench to unscrew the flange fixing bolts and remove the counter-flange complete with the seal.
 - Clean inside the tank and remove any residues through the access hole.
- Once cleaned, refit all components, following the above steps in the reverse order.

- ⚠ Tighten the flange fixing bolts, proceeding diagonally around the flange to apply pressure uniformly around the seal.

- Fill the storage tank circuit and check that there are no leaks from any of the seals.
- Check the performance of the storage tank.

RIELLO

RIELLO S.p.A.

37045 Legnago (VR)

Tel. 0442630111 - Fax 044222378 - www.riello.it

The manufacturer strives to continuously improve all products. Appearance, dimensions, technical specifications, standard equipment and accessories are therefore liable to modification without notice.