

GB Dual fuel light oil/gas burners

Modulating operation

CE

**UK
CA**

EAC

CODE	MODEL	TYPE
20147806 - 20147807 20147811	RLS 310/M MX	1161T
20147894 - 20147809 20147810	RLS 410/M MX	1162T
20147812	RLS 510/M MX	1163T
20147813	RLS 610/M MX	1164T



Translation of the original instructions

1	Declarations	4
2	Information and general warnings	5
2.1	Information about the instruction manual	5
2.1.1	Introduction	5
2.1.2	General dangers	5
2.1.3	Other symbols	5
2.1.4	Delivery of the system and the instruction manual	6
2.2	Guarantee and responsibility	6
3	Safety and prevention	7
3.1	Introduction	7
3.2	Personnel training	7
4	Technical description of the burner	8
4.1	Burner designation	8
4.2	Models available	9
4.3	Burner categories - Countries of destination	9
4.4	Technical data	9
4.5	Electrical data	10
4.6	Burner weight	11
4.7	Maximum dimensions	11
4.8	Firing rates	12
4.9	Test boiler	13
4.10	Burner equipment	13
4.11	Burner description	14
4.12	Electrical panel description	15
4.13	RFGO-A22 control box	16
4.14	Servomotor SQM40	17
4.15	Calibration of the thermal relay	18
4.16	Motor rotation	18
5	Installation	19
5.1	Notes on safety for the installation	19
5.2	Handling	19
5.3	Preliminary checks	19
5.4	Operating position	20
5.5	Preparing the boiler	20
5.5.1	Boring the boiler plate	20
5.5.2	Blast tube length	20
5.6	Securing the burner to the boiler	20
5.7	Access to head internal part	21
5.8	Position of the electrodes and central gas nozzles	21
5.9	Gas butterfly valve	22
5.10	Combustion head adjustment	22
5.11	Nozzle installation	23
5.11.1	Recommended nozzle	23
5.12	Light oil supply	24
5.12.1	Double-pipe circuit	24
5.12.2	The loop circuit	24
5.12.3	Hydraulic connections	24
5.12.4	Hydraulic circuit diagram	25
5.12.5	Priming pump	25
5.13	Gas feeding	26
5.13.1	Gas feeding line	26
5.13.2	Gas train	27

5.13.3	Gas train installation	27
5.13.4	Gas pressure	28
5.14	Electrical wiring	29
5.14.1	Supply cables and external connections passage	29
6	Start-up, calibration and operation of the burner	30
6.1	Notes on safety for the first start-up	30
6.2	Servomotor adjustment	30
6.3	Adjustments prior to ignition (light oil)	30
6.3.1	Nozzle	30
6.3.2	Combustion head	30
6.3.3	Pump pressure	30
6.3.4	Fan damper	30
6.4	Burner start-up (light oil)	31
6.5	Burner ignition (light oil)	31
6.6	Pressure variator	32
6.6.1	Light oil burner calibration procedure	33
6.6.2	Maximum output (light oil)	33
6.6.3	Minimum output (light oil)	33
6.6.4	Intermediate outputs	33
6.7	Change of fuel	33
6.8	Adjustments prior to ignition (gas)	34
6.9	Burner ignition (gas)	34
6.10	Proceed with the calibration (gas)	35
6.10.1	Burner adjustment	35
6.10.2	Output upon ignition	35
6.10.3	Maximum output	35
6.10.4	Minimum output	36
6.10.5	Intermediate outputs	37
6.11	Pressure switch adjustment	37
6.11.1	Air pressure switch - check CO	37
6.11.2	Maximum gas pressure switch	37
6.11.3	Minimum gas pressure switch	38
6.11.4	Minimum oil pressure switch	38
6.11.5	Maximum oil pressure switch	38
6.12	Operation sequence of the burner (gas)	39
6.12.1	Burner start-up	39
6.12.2	Operation	39
6.12.3	Burner flame goes out during operation	39
6.12.4	Ignition failure	39
6.12.5	Control box reset	39
6.13	Operation sequence of the burner (light oil)	40
6.13.1	Burner start-up	40
6.13.2	Operation	40
6.13.3	Burner flame goes out during operation	40
6.13.4	Ignition failure	40
6.13.5	Control box reset	40
6.14	Final checks (with burner operating)	41
7	Maintenance	42
7.1	Notes on safety for the maintenance	42
7.2	Maintenance programme	42
7.2.1	Maintenance frequency	42
7.2.2	Safety test - with gas feeding closed	42
7.2.3	Checking and cleaning	42
7.2.4	Safety components	43
7.3	Opening the burner	45
7.4	Closing the burner	45
8	LED indicator and special function	46
8.1	Description of LED lamps	46

8.2	Check mode function.....	46
8.3	Flame control lock-out or emergency stop condition.....	46
8.4	LED lamps: burner operating status.....	47
9	Problems - Causes - Remedies signalled by LED indicators.....	48
A	Appendix - Accessories.....	53
B	Appendix - Electrical panel layout.....	54

1 Declarations

Declaration of Conformity in accordance with ISO / IEC 17050-1

Manufacturer: RIELLO S.p.A.
 Address: Via Pilade Riello, 7
 37045 Legnago (VR)
 Product: Forced draught gas burners
 Model and type: RLS 310/M MX 1161T
 RLS 410/M MX 1162T
 RLS 510/M MX 1163T
 RLS 610/M MX 1164T

These products are in compliance with the following Technical Standards:

EN 676

EN 12100

and according to the European Directives:

GAR	2016/426/EU	Gas Appliances Regulation
MD	2006/42/CE	Machine Directive
LVD	2014/35/EU	Low Voltage Directive
EMC	2014/30/EU	Electromagnetic Compatibility

The products are marked as follows:



0085CQ0196

RLS 310/M MX (Class 2 EN 267 - Class 3 EN 676)
 RLS 410/M MX (Class 2 EN 267 - Class 3 EN 676)
 RLS 510/M MX (Class 2 EN 267 - Class 3 EN 676)
 RLS 610/M MX (Class 2 EN 267 - Class 3 EN 676)

Legnago, 21/04/2018

Research & Development Director
 RIELLO S.p.A. - Burner Department

Mr. F. Maltempo

The quality is guaranteed by a quality and management system certified in accordance with ISO 9001:2015.

Manufacturer's Declaration

RIELLO S.p.A. declares that the following products comply with the NOx emission limits specified by German standard "1. BIm-SchV revision 26.01.2010".

Product	Model	Type	Output
Forced draught gas burners	RLS 310/M MX	1161T	600 - 3600 kW
	RLS 410/M MX	1162T	640 - 4200 kW
	RLS 510/M MX	1163T	660 - 5170 kW
	RLS 610/M MX	1164T	1000 - 6155 kW

2 Information and general warnings

2.1 Information about the instruction manual

2.1.1 Introduction

The instruction manual supplied with the burner:

- is an integral and essential part of the product and must not be separated from it; it must therefore be kept carefully for any necessary consultation and must accompany the burner even if it is transferred to another owner or user, or to another system. If the manual is lost or damaged, another copy must be requested from the Technical Assistance Service of the area;
- is designed for use by qualified personnel;
- offers important indications and instructions relating to the installation safety, start-up, use and maintenance of the burner.

Symbols used in the manual

In some parts of the manual you will see triangular DANGER signs. Pay great attention to these, as they indicate a situation of potential danger.

2.1.2 General dangers

The **dangers** can be of **3 levels**, as indicated below.



Maximum danger level!
This symbol indicates operations which, if not carried out correctly, cause serious injury, death or long-term health risks.



This symbol indicates operations which, if not carried out correctly, may cause serious injury, death or long-term health risks.



This symbol indicates operations which, if not carried out correctly, may cause damage to the machine and/or injury to people.

2.1.3 Other symbols



DANGER: LIVE COMPONENTS
This symbol indicates operations which, if not carried out correctly, lead to electric shocks with lethal consequences.



DANGER: FLAMMABLE MATERIAL
This symbol indicates the presence of flammable materials.



DANGER: BURNING
This symbol indicates the risks of burns due to high temperatures.



DANGER: CRUSHING OF LIMBS
This symbol indicates the presence of moving parts: danger of crushing of limbs.



WARNING: MOVING PARTS

This symbol indicates that you must keep limbs away from moving mechanical parts; danger of crushing.



DANGER: EXPLOSION

This symbol signals places where an explosive atmosphere may be present. An explosive atmosphere is defined as a mixture - under atmospheric conditions - of air and flammable substances in the form of gases, vapours, mist or dust in which, after ignition has occurred, combustion spreads to the entire unburned mixture.



PERSONAL PROTECTION EQUIPMENT

These symbols indicate the equipment that must be worn and kept by the operator for protection against threats against safety and/or health while at work.



OBLIGATION TO ASSEMBLE THE COVER AND ALL THE SAFETY AND PROTECTION DEVICES

This symbol signals the obligation to reassemble the cover and all the safety and protection devices of the burner after any maintenance, cleaning or checking operations.



ENVIRONMENTAL PROTECTION

This symbol gives indications for the use of the machine with respect for the environment.



IMPORTANT INFORMATION

This symbol indicates important information that you must bear in mind.

- This symbol indicates a list.

Abbreviations used

Ch.	Chapter
Fig.	Figure
Page	Page
Sec.	Section
Tab.	Table

2.1.4 Delivery of the system and the instruction manual

When the system is delivered, it is important that:

- the instruction manual is delivered to the user by the system manufacturer, with the recommendation to keep it in the room where the heat generator is to be installed.
- The instruction manual shows:
 - the serial number of the burner;

.....

- the address and telephone number of the nearest Assistance Centre;

.....

.....

.....

- The system supplier must carefully inform the user about:
 - the use of the system;
 - any further tests that may be required before activating the system;
 - maintenance, and the need to have the system checked at least once a year by a representative of the manufacturer or another specialised technician.
 To ensure a periodic check, the manufacturer recommends the drawing up of a Maintenance Contract.

2.2 Guarantee and responsibility

The manufacturer guarantees its new products from the date of installation, in accordance with the regulations in force and/or the sales contract. At the moment of the first start-up, check that the burner is integral and complete.



WARNING

Failure to observe the information given in this manual, operating negligence, incorrect installation and carrying out of non authorised modifications will result in the annulment by the manufacturer of the guarantee that it supplies with the burner.

In particular, the rights to the guarantee and the responsibility will no longer be valid, in the event of damage to things or injury to people, if such damage/injury was due to any of the following causes:

- incorrect installation, start-up, use and maintenance of the burner;
- improper, incorrect or unreasonable use of the burner;
- intervention of unqualified personnel;
- carrying out of unauthorised modifications on the equipment;
- use of the burner with safety devices that are faulty, incorrectly applied and/or not working;
- installation of untested supplementary components on the burner;
- powering of the burner with unsuitable fuels;
- faults in the fuel supply system;
- continuation of use of the burner when a fault has occurred;
- repairs and/or overhauls incorrectly carried out;
- modification of the combustion chamber with inserts that prevent the regular development of the structurally established flame;
- insufficient and inappropriate surveillance and care of those burner components most likely to be subject to wear and tear;
- use of non-original components, including spare parts, kits, accessories and optional;
- force majeure.

The manufacturer furthermore declines any and every responsibility for the failure to observe the contents of this manual.

3 Safety and prevention

3.1 Introduction

The burners have been designed and built in compliance with current regulations and directives, applying the known technical rules of safety and envisaging all the potential danger situations.

It is necessary, however, to bear in mind that the imprudent and clumsy use of the equipment may lead to situations of death risk for the user or third parties, as well as the damaging of the burner or other items. Inattention, thoughtlessness and excessive confidence often cause accidents; the same applies to tiredness and sleepiness.

It is a good idea to remember the following:

- The burner must only be used as expressly described. Any other use should be considered improper and therefore dangerous.

In particular:

it can be applied to boilers operating with water, steam, diathermic oil, and to other uses expressly foreseen by the manufacturer;

the type and pressure of the fuel, the voltage and frequency of the electrical power supply, the minimum and maximum deliveries for which the burner has been regulated, the pressurisation of the combustion chamber, the dimensions of the combustion chamber and the room temperature must all be within the values indicated in the instruction manual.

- Modification of the burner to alter its performance and destinations is not allowed.
- The burner must be used in exemplary technical safety conditions. Any disturbances that could compromise safety must be quickly eliminated.
- Opening or tampering with the burner components is not allowed, apart from the parts requiring maintenance.
- Only those parts envisaged by the manufacturer can be replaced.



The manufacturer guarantees safety and proper functioning only if all burner components are intact and positioned correctly.

3.2 Personnel training

The user is the person, body or company that has acquired the machine and intends to use it for the specific purpose. He is responsible for the machine and for the training of the people working around it.

The user:

- undertakes to entrust the machine exclusively to suitably trained and qualified personnel;
- undertakes to inform his personnel in a suitable way about the application and observance of the safety instructions. With that aim, the user undertakes to ensure that everyone knows the use and safety instructions for his own duties.
- Personnel must follow all the danger and caution indications shown on the machine.
- Personnel must not carry out, on their own initiative, operations or interventions that are not within their province.
- Personnel are obliged to inform their superiors of every problem or dangerous situation that may arise.
- The assembly of parts of other makes, or any modifications, can alter the characteristics of the machine and hence compromise operating safety. The manufacturing company therefore accepts no responsibility whatsoever for any which may result from the use of non-original parts.


In addition:



- must take all the measures necessary to prevent unauthorised people gaining access to the machine;
- the user must inform the manufacturer if faults or malfunctioning of the accident prevention systems are noticed, along with any presumed danger situation;
- personnel must always use the personal protective equipment envisaged by legislation and follow the indications given in this manual.

4 Technical description of the burner

4.1 Burner designation

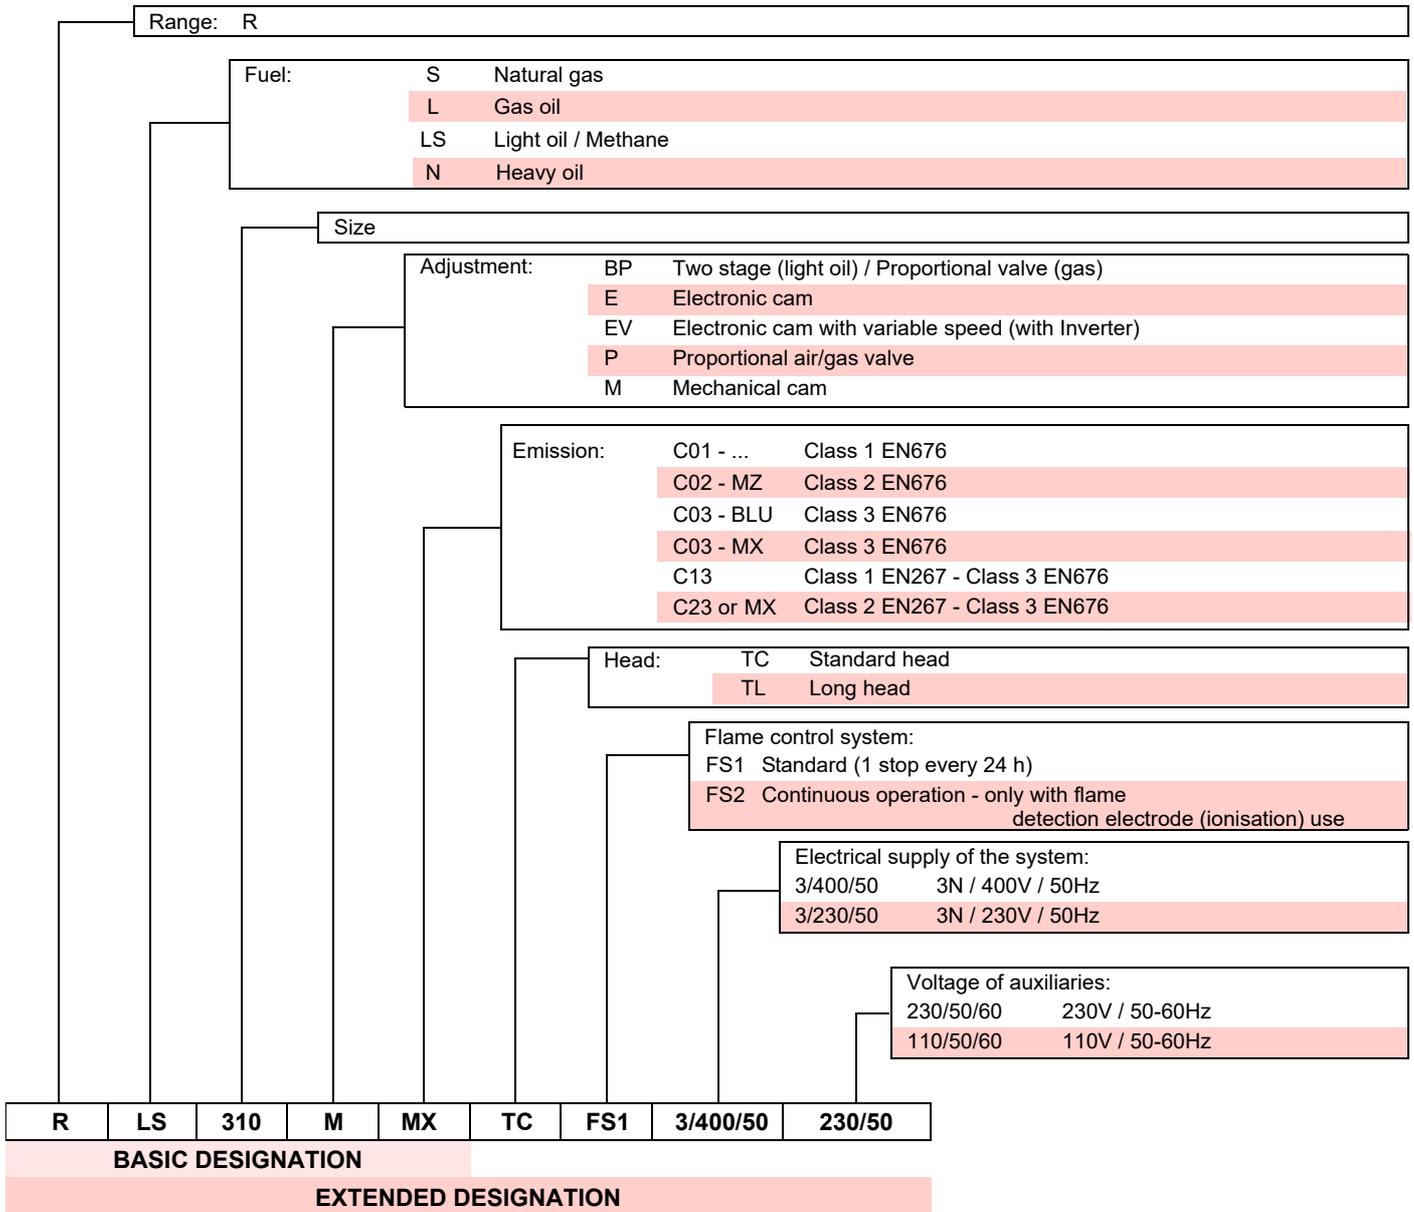

4.2 Models available

Designation	Voltage	Start-up	Code
RLS 310/M MX	3/400/50	Star/Triangle	20147811
	3/230/50	Direct	20147806
	3/400/50	Direct	20147807
RLS 410/M MX	3/400/50	Star/Triangle	20147894
	3/230/50	Direct	20147809
	3/400/50	Direct	20147810
RLS 510/M MX	3/400/50	Star/Triangle	20147812
RLS 610/M MX	3/400/50	Star/Triangle	20147813

Tab. A

4.3 Burner categories - Countries of destination

Gas category	Destination country
SE - FI - AT - GR - DK - ES - GB - IT - IE - PT - IS - CH - NO	I ₂ H
DE	I ₂ ELL
NL	I ₂ EK
FR	I ₂ Er
BE	I ₂ E(R)
LU - PL	I ₂ E

Tab. B

4.4 Technical data

Model			RLS 310/M MX	RLS 410/M MX	RLS 510/M MX	RLS 610/M MX
Type			1161T	1162T	1163T	1164T
Power ⁽¹⁾ Delivery ⁽¹⁾	min - max	kW Kg/h	600/1200 - 3600 50/100- 305	640/1500 - 4200 55/126- 352	660/1800 - 5170 56/195- 435	1000/2200 - 6155 110/185- 516
Fuels			Natural gas: G20 (methane gas) - G21 - G22 - G23 - G25 Light oil, max. viscosity at 20 °C: 6 mm ² /s (1.5°E - 6 cSt)			
Gas pressure at max. output ⁽²⁾ Gas: G20/G25		mbar	31.8/47.4	47.3/70.6	47.8/71.3	68.2/101.8
Operation			FS1: Intermittent (min. 1 stop in 24 hours)			
Pump			TA 3	TA 4	TA 5	
Minimum output at 16.5 bar		kg/h	700	930	1270	
Pressure range		bar	7/40	7/40	7/30	
Fuel temperature		°C max	140			
Nozzles		number	1			
Standard applications			Boilers: water, steam, diathermic oil			
Ambient temperature		°C	0 - 40			
Combustion air temperature		°C max	60			
Noise level ⁽³⁾ Sound pressure Sound power		dB(A)	78 89	80 91	82.5 93.5	85 96

Tab. C

- (1) Reference conditions: Ambient temperature 20°C - Gas temperature 15°C - Barometric pressure 1013 mbar - Altitude 0 m a.s.l.
- (2) Pressure on the socket 5)(Fig. 5) with zero pressure in the combustion chamber and at maximum burner output.
- (3) Sound pressure measured in manufacturer's combustion laboratory, with burner operating on test boiler and at maximum rated output. The sound power is measured with the "Free Field" method, as per EN 15036, and according to an accurate "Accuracy: Category 3", as described by EN ISO 3746".

4.5 Electrical data

DIRECT START UP

Model		RLS 310/M MX	RLS 410/M MX	RLS 310/M MX	RLS 410/M MX
Main electrical supply		3/3N ~ 230-400V+/-10% 50 Hz			
Fan motor IE3	rpm	2920	2930	2920	2930
	V	220 - 240	230	380 - 415	400
	kW	7.5	9.2	7.5	9.2
	A	25.2	28.6	14.5	16.5
Absorbed electrical power					
Gas	kW max	9.1	10.9	9.1	10.9
Light oil		10.8	12.6	10.8	12.6
Pump motor IE3		2890			
	rpm	220-240 / 380-415			
	V	1,5			
	kW	5.9-3.4			
	A				
Ignition transformer		230 V - 2 x 5 kV			
	V1 - V2	1.9 A - 35 mA			
	I1 - I2				
Protection level		IP 54			

STAR - TRIANGLE START UP

Model		RLS 310/M MX	RLS 410/M MX	RLS 510/M MX	RLS 610/M MX
Main electrical supply		3N ~ 400V +/-10% 50 Hz			
Fan motor IE3	rpm	2910	2930	2920	2915
	V	400/690	400/690	400/690	400/690
	kW	7.5	9.2	12	15
	A	13.9 / 8.0	16.5 / 9.6	21 / 12.2	26.8 / 15.5
Absorbed electrical power					
Gas	kW max	9.1	10.9	13.8	17.1
Light oil		10.9	12.6	15.5	18.8
Pump motor IE3		2890			
	rpm	220-240 380-415			
	V	1,5			
	kW	5.9-3.4			
	A				
Ignition transformer		230 V - 2 x5 kV			
	V1 - V2	1.9 A - 35 mA			
	I1 - I2				
Protection level		IP 54			

Tab. D

4.6 Burner weight

The weight of the burner complete with its packaging is shown in Tab. E.

Model	kg
RLS 310/M MX	300
RLS 410/M MX	300
RLS 510/M MX	300
RLS 610/M MX	320

Tab. E

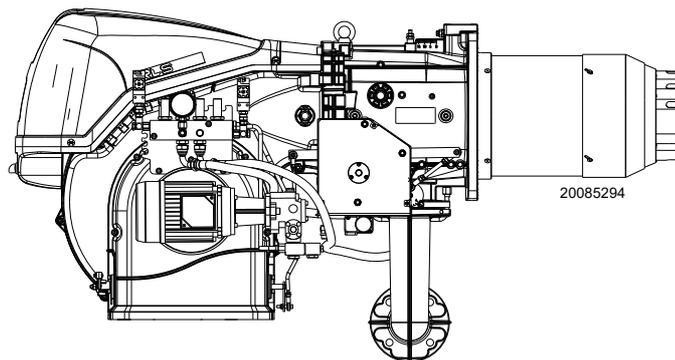


Fig. 1

4.7 Maximum dimensions

The maximum dimensions of the burner are given in Fig. 2.

Bear in mind that inspection of the combustion head requires the burner to be opened and the rear part turned on the hinge.

The maximum dimensions of the open burner are indicated by the L and R positions.

The I position is reference for the refractory thickness of the boiler door.



WARNING

* The gas adaptor is set also for DN 80 bore.

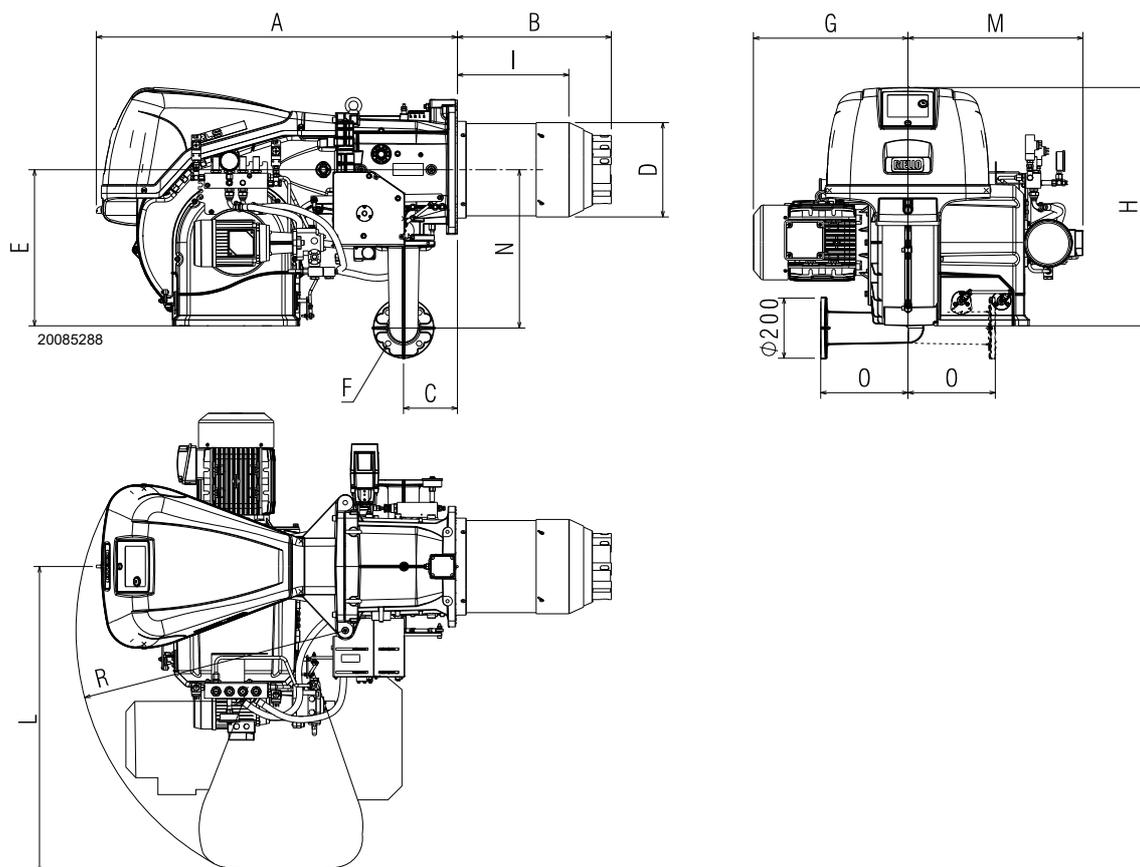


Fig. 2

mm	A	B	C	D	E	F*	G	H	I	L	M	N	O	R
RLS 310/M MX	1190	507	178	313	520	DN65	490	790	340	1015	576	528	290	890
RLS 410/M MX	1190	507	178	313	520	DN65	508	790	340	1015	576	528	290	890
RLS 510/M MX	1190	507	178	313	520	DN65	508	790	340	1015	576	528	290	890
RLS 610/M MX	1190	510	178	334	520	DN65	580	790	360	1015	576	528	290	890

Tab. F

4.8 Firing rates

The **MAXIMUM OUTPUT** is chosen from within the diagram area (Fig. 3).

The **MINIMUM OUTPUT** must not be lower than the minimum limit of the diagram:

Model	kW
RLS 310/M MX	600
RLS 410/M MX	640
RLS 510/M MX	660
RLS 610/M MX Gas	1000
RLS 610/M MX Light oil	1300

Tab. G



The firing rate value (Fig. 3) has been obtained considering an ambient temperature of 20 °C, an atmospheric pressure of 1013 mbar (approx. 0 m a.s.l.), and with the combustion head adjusted as shown on page 22.



Pre-calibration of the combustion head only for the burner model RLS 310/M MX:

If the maximum burner output of the burner falls within:

- area A of the firing rate, it is necessary to replace the gas nozzles with those supplied (No. 8 gas nozzles Ø 5.3), Fig. 16.

- area B of the firing rate, no modifications are required.

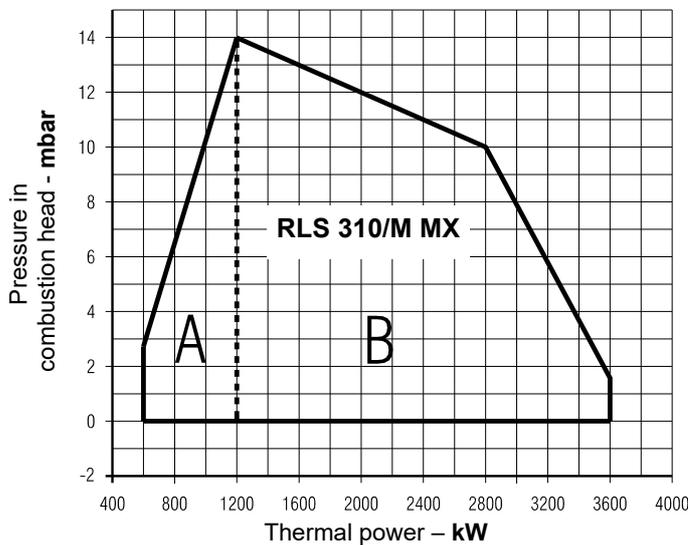
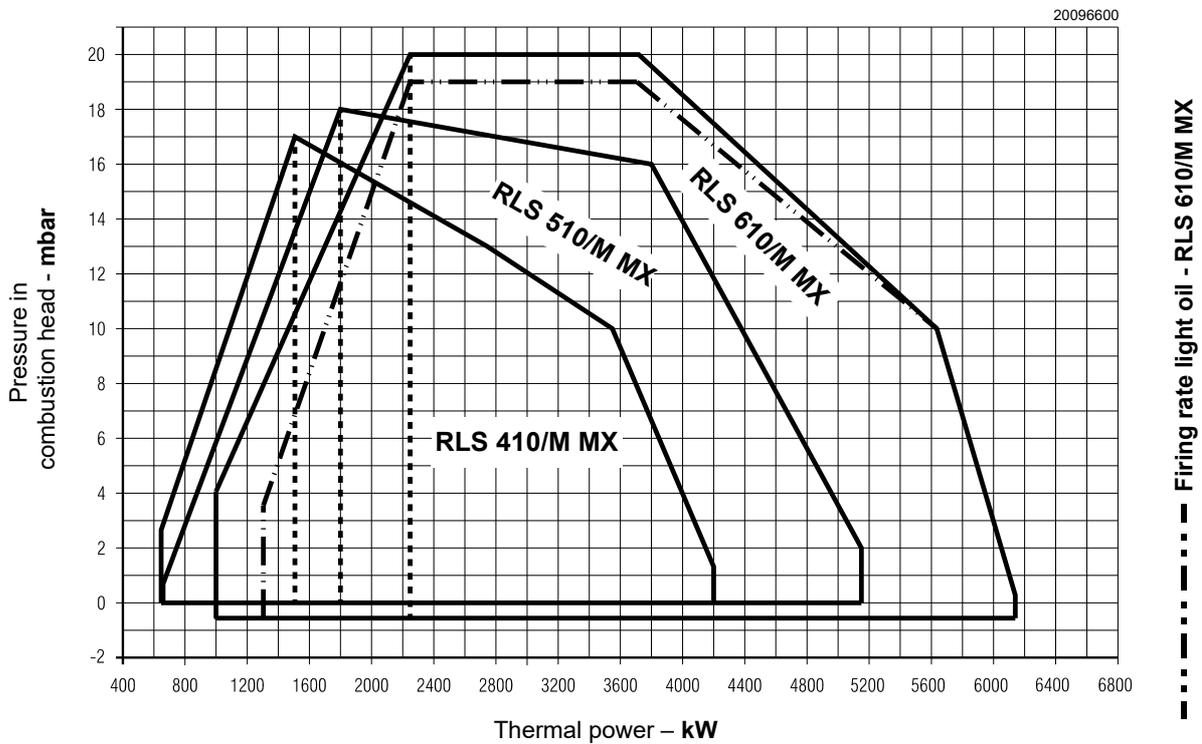


Fig. 3

4.9 Test boiler


The burner/boiler combination does not pose any problems if the boiler is EC approved and its combustion chamber dimensions are similar to those indicated in the diagram (Fig. 4).

If the burner must be combined with a boiler that has not been EC approved and/or its combustion chamber dimensions are clearly smaller than those indicated in the diagram, consult the manufacturer.

The firing rates were set in relation to special test boilers, according to EN 676 regulations.

In Fig. 4 you can see the diameter and length of the test combustion chamber.

Example: RLS 510/M MX
Output 5000 kW - diameter 100 cm - length 5 m

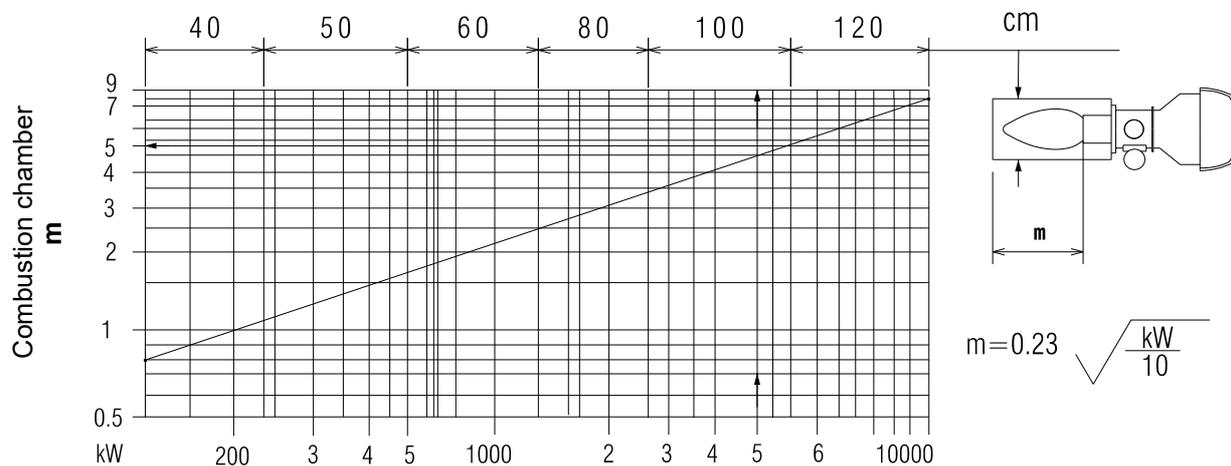


20057548

Fig. 4

4.10 Burner equipment

- Gasket for gas train adaptor. No. 1
- Adaptor for gas train. No. 1
- Screws for fixing the gas train adaptor: M 16 x 70 No. 4
- Thermal insulation screen No. 1
- M 18 x 60 screws to secure the burner flange to the boiler. No. 4
- Flexible hoses No. 2
- Hydraulic fittings No. 2
- Cable grommets kit for optional electrical wiring input No. 1
- M16 x 6 studs for fixing the gas elbow to the pipe coupling No. 4
- M16 nuts to fix the gas elbow to the pipe coupling. No. 4
- Gas nozzles (only for version RLS 310/M MX). No. 8
- Instructions. No. 1
- Spare parts list No. 1

4.11 Burner description

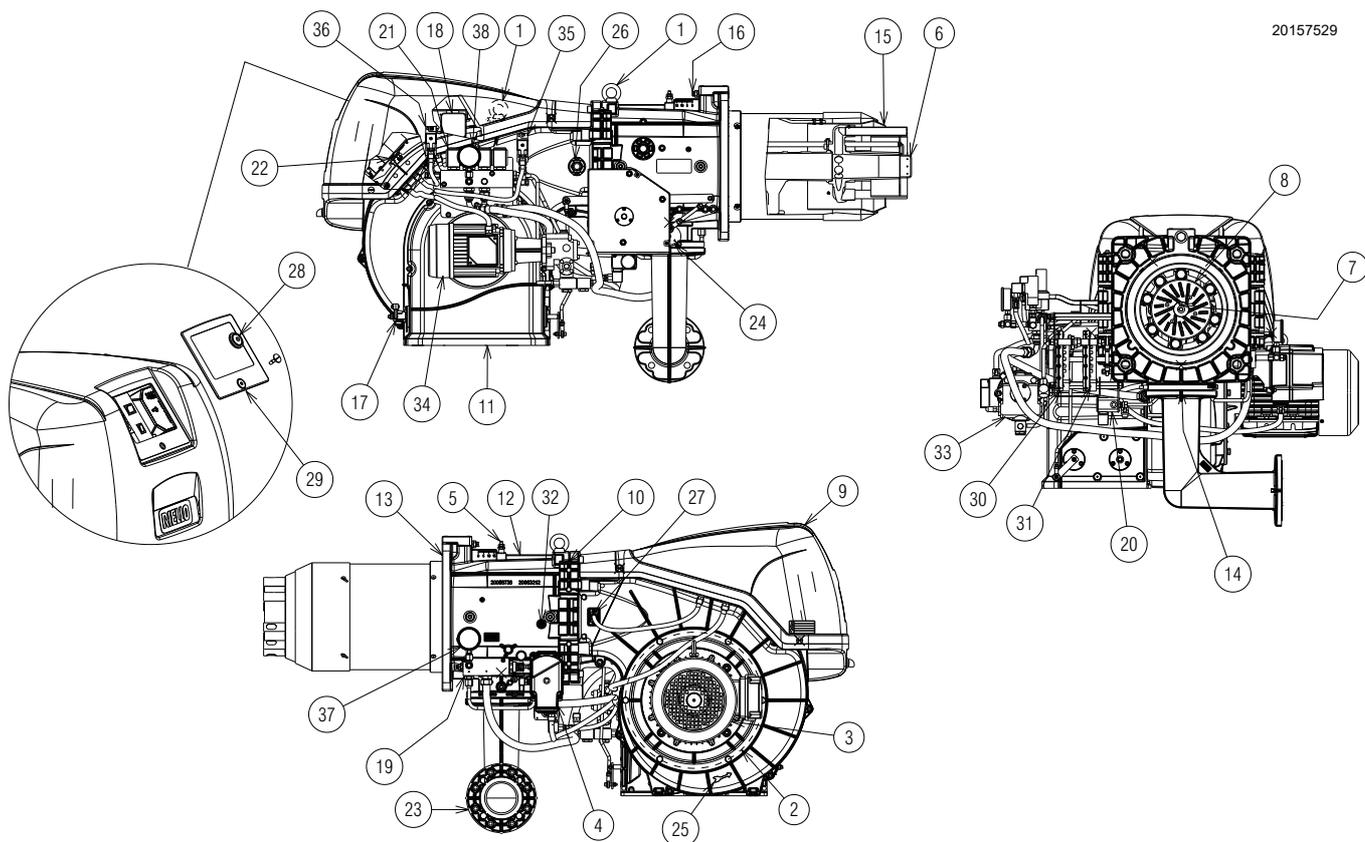

- 1 Lifting rings
- 2 Fan
- 3 Fan motor
- 4 Air/gas servomotor
- 5 Combustion head gas pressure test point
- 6 Combustion head
- 7 Ignition electrodes
- 8 Flame stability disk
- 9 Electrical panel casing
- 10 Hinge for opening the burner
- 11 Fan air inlet
- 12 Pipe coupling
- 13 Gasket for boiler fixing
- 14 Gas butterfly valve
- 15 Shutter
- 16 Combustion head movement screw
- 17 Air damper control lever
- 18 Air pressure switch
- 19 Oil modulator
- 20 Maximum gas pressure switch with pressure test point
- 21 Valve group
- 22 Pressure test point for air pressure switch “+”
- 23 Gas train adapter
- 24 Gas butterfly valve control lever
- 25 Indication for checking the rotation direction of the purging motor
- 26 Flame inspection window
- 27 UV sensor (QRI cell)
- 28 Reset button
- 29 Transparent protection
- 30 Variable profile cam (air)
- 31 Variable profile cam (gas)
- 32 Combustion head air pressure test point
- 33 Pump
- 34 Pump motor
- 35 Maximum oil pressure switch

- 36 Minimum oil pressure switch
- 37 Nozzle return pressure gauge
- 38 Nozzle delivery pressure gauge



The burner can be opened to the right or to the left without links to the fuel supply side.



WARNING

To open the burner see section “Access to head internal part” on page 21.

4.12 Electrical panel description

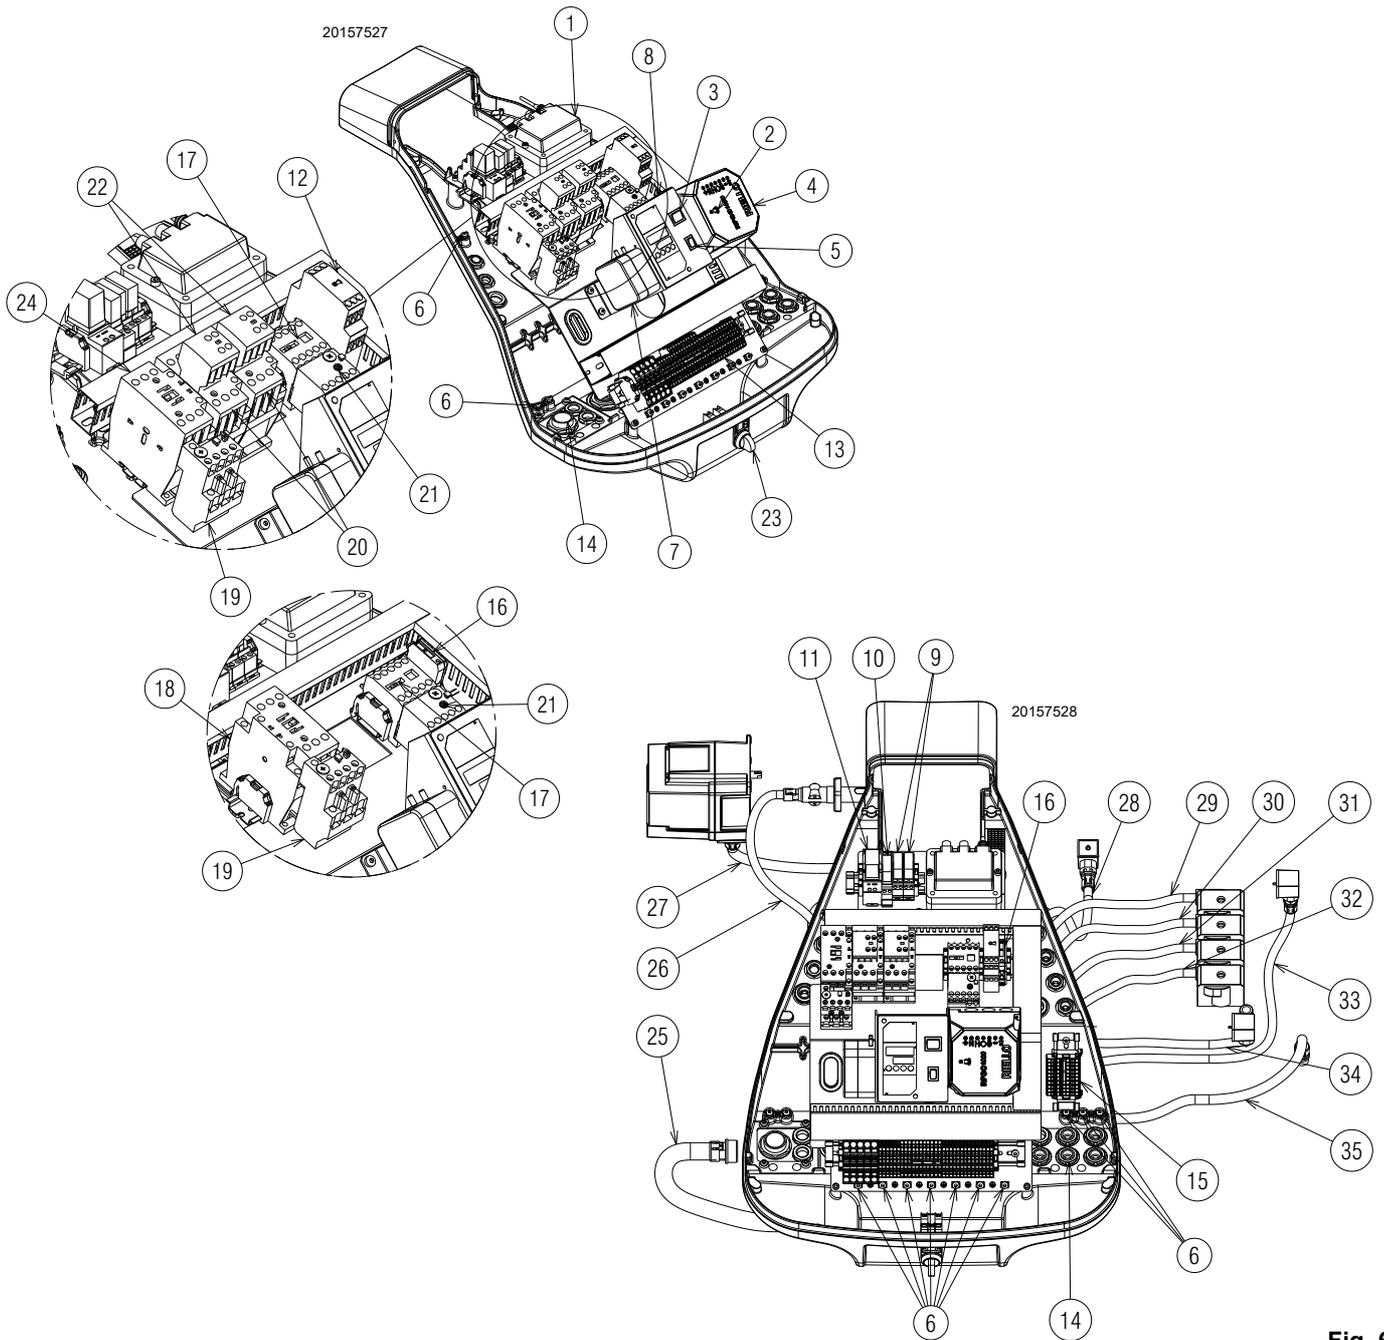


Fig. 6

- | | |
|---|--|
| 1 Ignition transformer | 18 Direct start up line contactor |
| 2 Burner state indicator light and reset button. | 19 Fan motor thermal relay (with reset button) |
| 3 OFF-automatic-manual selector | 20 Triangle contactor (Star/triangle start up) |
| 4 Electrical control box | 21 Pump motor thermal relay |
| 5 Power increase - power reduction selector | 22 Auxiliary contacts (Star/triangle start up) |
| 6 Earth terminal | 23 Fuel selector |
| 7 Air pressure switch | 24 Star/triangle start-up line contactor |
| 8 Bracket for applying the kits | 25 Fan motor cables sheath |
| 9 Relay with clean contacts for signalling the burner is in lock-out and that the burner is operating | 26 Flame sensor sheath |
| 10 Oil enable relay | 27 Servomotor sheath |
| 11 Oil enable relay | 28 Maximum gas pressure switch sheath |
| 12 Timer for star/triangle start up | 29 Safety valve sheath (VS1) |
| 13 Main terminal supply board | 30 Return line valve sheath (VF) |
| 14 Supply cables and external connections passage. See section "Electrical wiring" on page 29 | 31 Working valve sheath (VS) |
| 15 Valve group terminal board | 32 Safety valve sheath (VS) |
| 16 Auxiliary circuits fuse (includes a spare fuse) | 33 Maximum oil pressure switch sheath |
| 17 Pump motor contact maker | 34 Minimum oil pressure switch sheath |
| | 35 Pump motor cables sheath |

4.13 RFGO-A22 control box

Warnings



To avoid accidents, material or environmental damage, observe the following instructions!

The control box is a safety device! Avoid opening or modifying it, or forcing its operation. Riello S.p.A. cannot assume any responsibility for damage resulting from unauthorised interventions!

- All interventions (assembly and installation operations, assistance, etc.) must be carried out by qualified personnel.
- Before modifying the wiring in the control box connection area, fully disconnect the system from the power supply (omnipolar separation). Check the system is not powered and cannot be accidentally reconnected. Failure to do this will lead to the risk of electrocution.
- Protection against electrocution from the control box and all connected electric components is obtained with the correct assembly.
- Before any intervention (assembly and installation operations, assistance, etc.), ensure the wiring is in order and that the parameters are correctly set, then make the safety checks.
- Falls and collisions can negatively affect the safety functions.
In this case, the control box must not be operated, even if it displays no evident damage.

For the safety and reliability of the control box, comply with the following instructions:

- avoid conditions that can favour the development of condensate and humidity. Otherwise, before switching on again, make sure that the entire control box is perfectly dry!
- Static charges must be avoided since they can damage the control box's electronic components when touched.



Fig. 7

Technical data

Mains voltage	AC 230 V -15 % / +10 %
Mains frequency	50 / 60 Hz
Primary fuse (external)	Refer to the electrical wiring
Weight	approx. 1.1 kg
Power absorption	approx. AC 7 VA
Protection level	IP40
Safety class	II
Environmental conditions:	
Operation	DIN EN 60721-3-1
Mechanical conditions	Class 1K2
Temperature range	Class 1M2
Humidity	-40...+60 °C < 95 % r.h. (without condensing)

Tab. H

Mechanical structure

The control box is made of plastic to resist knocks, heat and flame propagation.

The electronic flame signal amplifier is integrated into the control box.

4.14 Servomotor SQM40 ...

Warnings



To avoid accidents, material or environmental damage, observe the following instructions!

Avoid opening, modifying or forcing the servomotor.

- All interventions (assembly and installation operations, assistance, etc.) must be carried out by qualified personnel.
- Falls and collisions can negatively affect the safety functions. In this case, the servomotor must not be operated, even if it displays no evident damage.
- Fully disconnect the burner from the mains when working near terminals and servomotor connections.
- Condensation and exposure to water are not allowed.
- For safety reasons, the servomotor must be checked after long periods of non-use.



Fig. 8

Technical data

Mains voltage	230 V -15% +10%
Mains frequency	50 / 60 Hz
Power absorption	7 ... 15 VA
Motor	Synchronous
Drive angle	Varying between 0° and 135°
	 Never adjust the red cam No. 1 more than 135° to prevent serious or irreversible damage to the mechanical adjustment parts.
Protection level	Max. IP 66, with appropriate cable entry
Cable entry	2 x M16
Cable connection	terminal board for 0.5mm ² (min.) and 2.5mm ² (max.)
Rotation direction	Anticlockwise
Rated torque (max.)	10 Nm
Holding torque	5 Nm
Operation time	30 s. at 90°
Weight	approx. 2 kg
Environmental conditions:	
Operation	-20...+60° C
Transport and storage	-20...+60°C

Tab. I

4.15 Calibration of the thermal relay

The thermal relay serves to avoid damage to the motor due to an excessive absorption increase or if a phase is missing.


For calibration **2)**, see the table in the wiring diagram.

To reset, in case of an intervention of the thermal relay, press the "RESET" button **1)** of Fig. 9.

The red "TEST" button **3)** opens the NC (95-96) contact and stops the motor.



The automatic reset can be dangerous. This operation is not foreseen in the burner operation. **Therefore do not position the "RESET" button 1) on "A".**

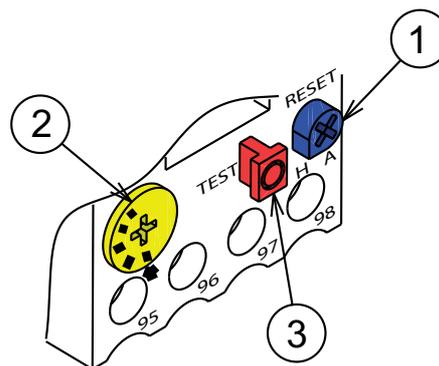

20073932

Fig. 9

4.16 Motor rotation

As soon as the burner starts up, go in front of the cooling fan of the fan motor and check it is rotating anticlockwise (Fig. 10).

If this is not the case:

- set the burner switch to "0" (off) and wait for the control box to carry out the switch-off phase.



Disconnect the electrical supply from the burner by means of the main system switch.

- Invert the phases on the three-phase motor power supply.

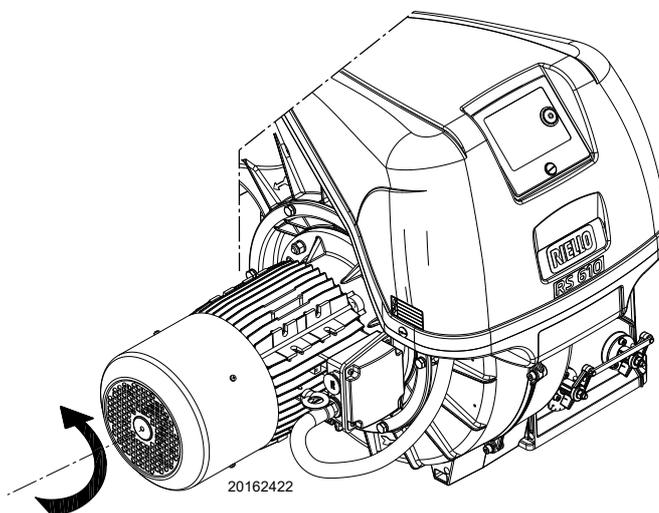


Fig. 10

5 Installation

5.1 Notes on safety for the installation

After carefully cleaning all around the area where the burner will be installed, and arranging the correct lighting of the environment, proceed with the installation operations.



All the installation, maintenance and disassembly operations must be carried out with the electricity supply disconnected.



The installation of the burner must be carried out by qualified personnel, as indicated in this manual and in compliance with the standards and regulations of the laws in force.



Combustion air inside the boiler must be free from hazardous mixes (e.g.: chloride, fluoride, halogen); if present, it is highly recommended to carry out cleaning and maintenance more frequently.

5.2 Handling

The burner packaging includes a wooden platform, it is therefore possible to move the burner (still packaged) with a transpallet truck or fork lift truck.



The handling operations for the burner can be highly dangerous if not carried out with the greatest attention: keep any unauthorised people at a distance; check the integrity and suitability of the available means of handling. Check also that the area in which you are working is empty and that there is an adequate escape area (i.e. a free, safe area to which you can quickly move if the burner should fall). When handling, keep the load at not more than 20-25 cm from the ground.



After positioning the burner near the installation point, correctly dispose of all residual packaging, separating the various types of material.



Before proceeding with the installation operations, carefully clean all around the area where the burner will be installed.

5.3 Preliminary checks

Checking the consignment



After removing all the packaging, check the integrity of the contents. In the event of doubt, do not use the burner; contact the supplier.



The packaging elements (wooden cage or cardboard box, nails, clips, plastic bags, etc.) must not be abandoned as they are potential sources of danger and pollution; they should be collected and disposed of in the appropriate places.

RBL	A	B	C
D	E		F
GAS-KAASU	<input checked="" type="checkbox"/>	G	H
GAZ-AERIO		G	H
I			RIELLO SpA I-37045 Legnago (VR)
			CE

D10411

Fig. 11

Checking the characteristics of the burner

Check the identification label of the burner, showing:

- the model (A)(Fig. 11) and type of burner (B);
- the year of manufacture, in cryptographic form (C);
- the serial number (D);
- the data for electrical supply and the protection level (E);
- the absorbed electrical power (F);
- the types of gas used and the relative supply pressures (G);
- the data of the burner's minimum and maximum output possibilities (H) (see Firing rate)

Warning. The burner output must be within the boiler's firing rate;

- the category of the appliance/countries of destination (I).



A burner label, or any other component, that has been tampered with, removed or is missing, prevents the definite identification of the burner and makes any installation or maintenance work difficult.

5.4 Operating position



- The burner is designed to operate only in positions 1, 2, 3 and 4 (Fig. 12).
- Installation 1 is preferable, as it is the only one that allows the maintenance operations as described in this manual.
- Installations 2, 3 and 4 permit operation but make maintenance and inspection of the combustion head more difficult.



- Any other position could compromise the correct operation of the appliance.
- Installation 5 is prohibited for safety reasons.

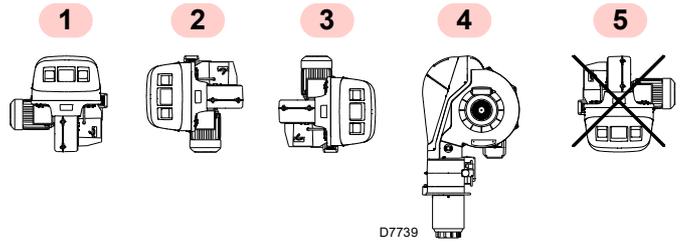


Fig. 12

5.5 Preparing the boiler

5.5.1 Boring the boiler plate

Pierce the closing plate of the combustion chamber, as in Fig. 13. The position of the threaded holes can be marked using the thermal insulation screen supplied with the burner.

5.5.2 Blast tube length

The length of the blast tube must be selected according to the indications provided by the manufacturer of the boiler, and in any case it must be greater than the thickness of the boiler door complete with its fettling.

The refractory can have a conical shape (minimum 60°).

For boilers with front flue passes 1) (Fig. 14) or flame inversion chamber, a protection in refractory material 5) must be inserted between the boiler fettling 2) and the flame funnel 4).

This protective fettling must not compromise the extraction of the blast tube.

For boilers with a water-cooled front piece, a refractory lining 2)-5)(Fig. 14) is not necessary, unless expressly requested by the boiler manufacturer.

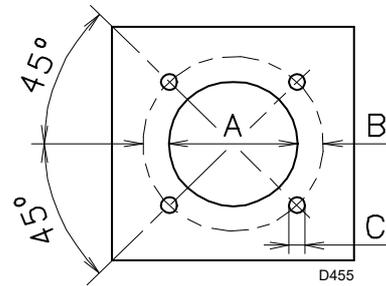


Fig. 13

mm	A	B	C
RLS 310/M MX	335	452	M18
RLS 410/M MX	335	452	M18
RLS 510/M MX	335	452	M18
RLS 610/M MX	350	452	M18

Tab. J

5.6 Securing the burner to the boiler



Prepare a suitable lifting system using rings 3)(Fig. 14).

- Fit the heat insulation supplied onto the blast tube 4)(Fig. 14).
- Fit the entire burner onto the boiler hole prepared previously (Fig. 13), and fasten with the screws supplied.



The seal between burner and boiler must be airtight.

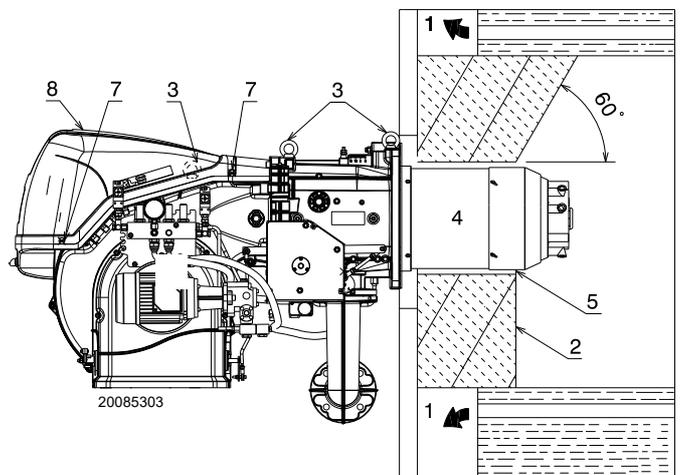


Fig. 14

5.7 Access to head internal part

The burner leaves the factory set for opening to the right, therefore maintaining the pin 1)(Fig. 15) in its housing.

To open the burner towards the right, proceed as follows:

- A** remove the screw 6) releasing the tie-rod 7)(Fig. 15);
- B** remove the screws 2);
- C** open the burner to a maximum of 100-150 mm by rotating around the hinge and release the cables of the electrodes 5);
- D** fully open the burner as in Fig. 15;
- E** undo the screw 4) with pressure test point;
- F** disconnect the light oil pipes by unscrewing the two swivel fittings 8);
- G** release the head by lifting it from its housing 3), then take out the combustion head.



WARNING

To open the burner from the opposite side, before removing the pin 1)(Fig. 15), make sure that the 4 screws 2) are tight. Then shift the pin 1) to the opposite side, only then is it possible to remove the screws 2); then proceed as described in point C.

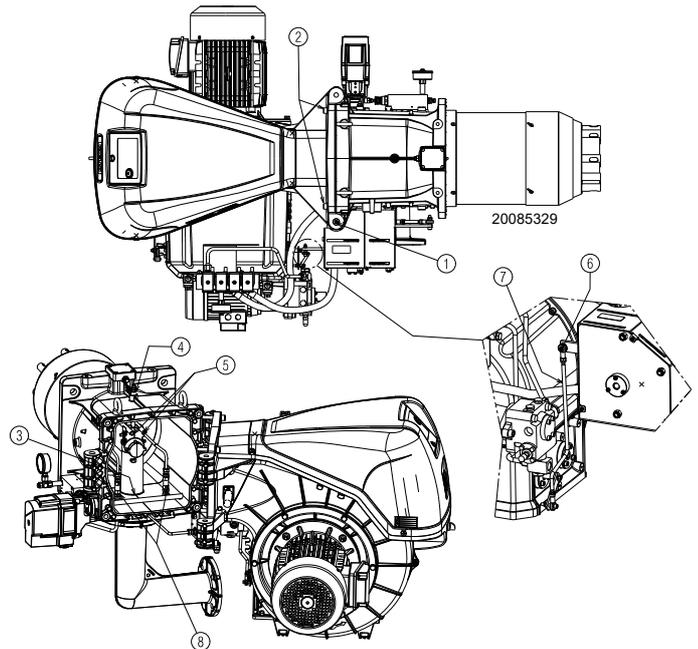


Fig. 15

5.8 Position of the electrodes and central gas nozzles



WARNING

Check that the electrodes are positioned correctly, as in Fig. 16, complying with the dimensions indicated.

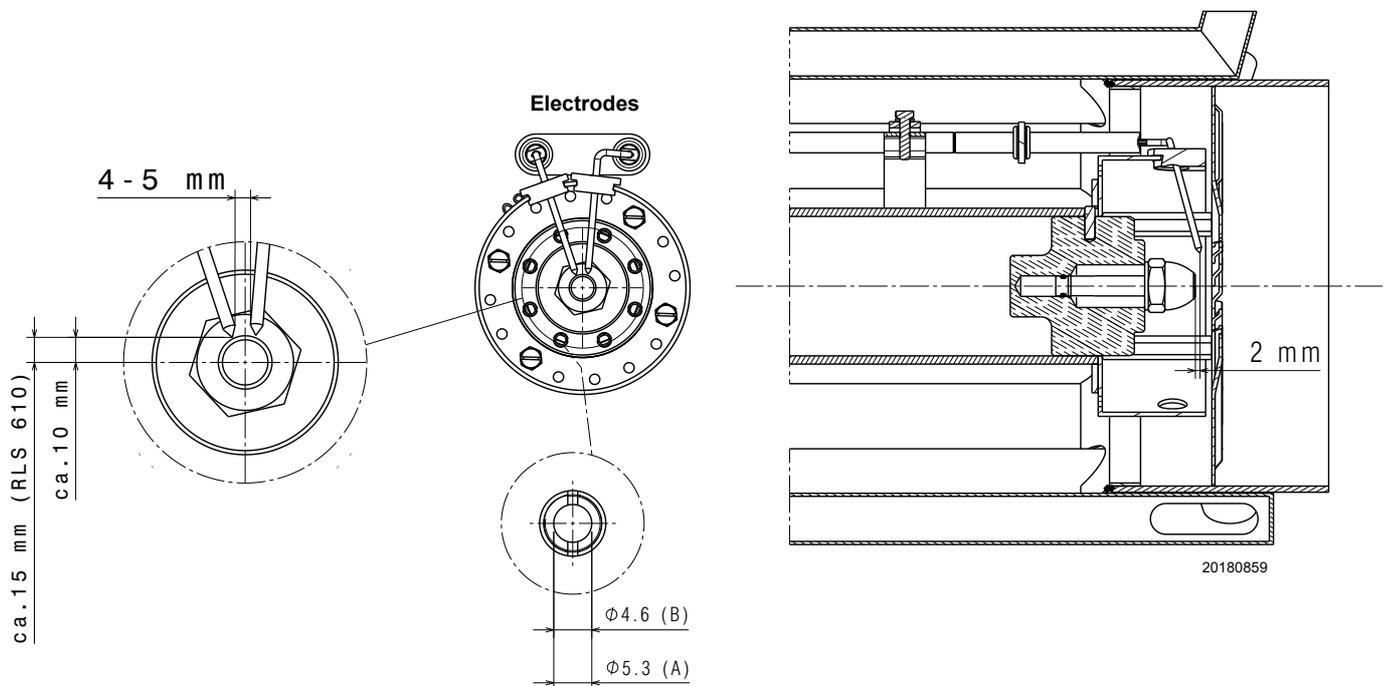


Fig. 16

5.9 Gas butterfly valve

If necessary, replace the gas butterfly valve. The correct position is shown in Fig. 17.

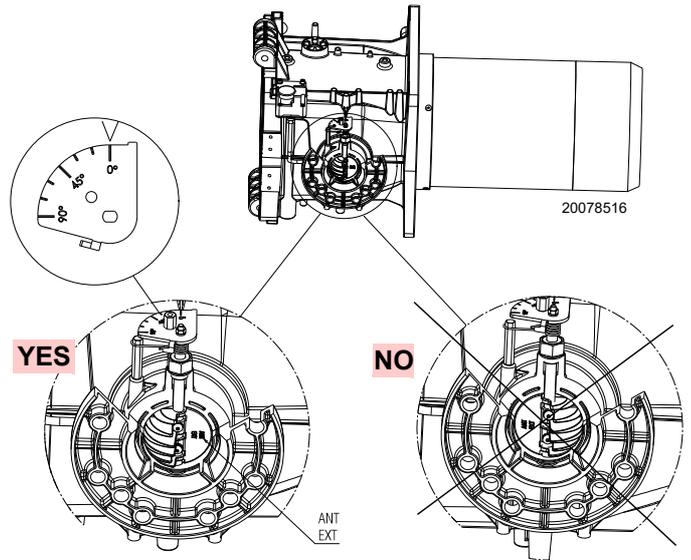


Fig. 17

5.10 Combustion head adjustment

Rotate the screw 1) until the notch you have found corresponds with the front surface of the screw itself. The combustion head is opened by turning the screw 1) anticlockwise.

The combustion head is closed by turning the screw 1) clockwise (Fig. 19).



The burner leaves the factory with the combustion head adjusted to notch 0 (Fig. 19).

This adjustment allows you to secure the moving parts when the burner is being transported.

Before starting the burner, carry out the adjustments for the output required and which is indicated in the diagram (Fig. 18).

NOTE:

Depending on the specific application, the adjustment can be modified.

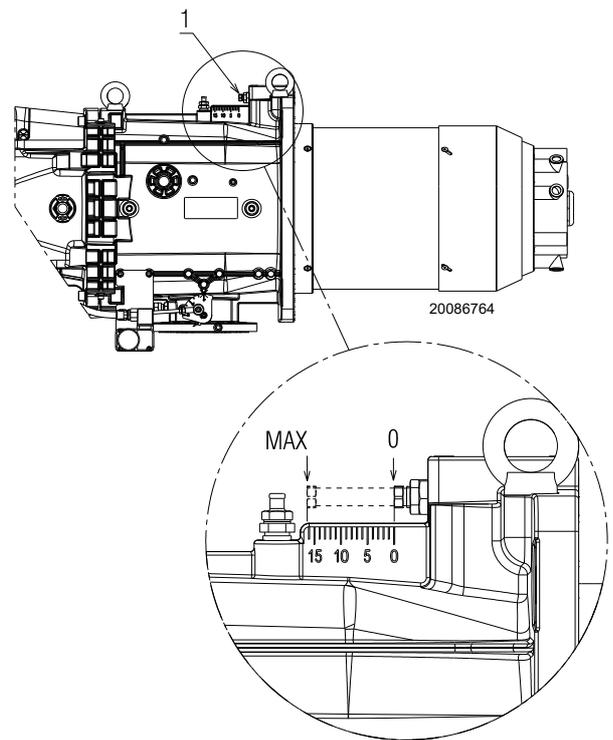


Fig. 19

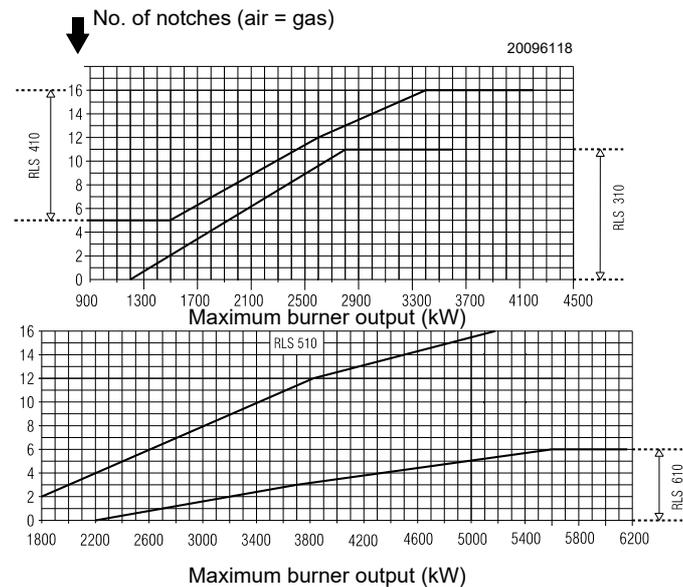


Fig. 18



The combustion head can be adjusted within the following fields:

- RLS 310/M MX: 0 - 11;
- RLS 410/M MX: 5 - 16;
- RLS 510/M MX: 2 - 16;
- RLS 610/M MX: 0 - 6.

No adjustment can be made outside these intervals.

5.11 Nozzle installation

The burner complies with the emission requirements of the EN 267 standard.

In order to guarantee that emissions do not vary, recommended and/or alternative nozzles specified by the Manufacturer in the Instruction and warning booklet should be used.



It is advisable to replace nozzles every year during regular maintenance operations.



The use of nozzles other than those specified by the Manufacturer and inadequate regular maintenance may result into emission limits non-conforming to the values set forth by the regulations in force, and in extremely serious cases, into potential hazards to people and objects.

The manufacturing company shall not be liable for any such damage arising from non-observance of the requirements contained in this manual.

Fit the nozzle with a pipe wrench (24 mm), passing through the central opening of the flame stability disc (Fig. 20).

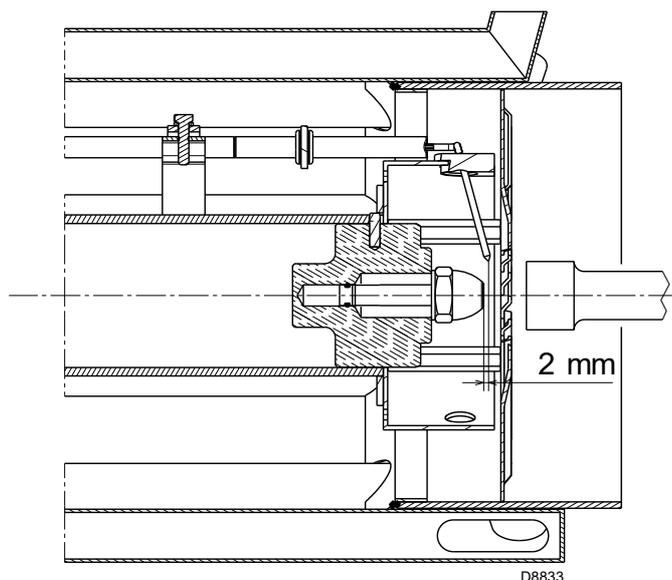


Fig. 20

Fit the nozzles on the nozzle holder without the fuel interception rod.

To calibrate the flow rate range within which the nozzle should operate, adjust the fuel pressure on the nozzle return line, according to and Tab. K.



- Do not use any sealing products such as gaskets, sealing compound, or tape.
- Be careful to avoid damaging the nozzle sealing seat.
- The nozzle must be screwed into place tightly but not to the maximum torque value provided by the wrench.

5.11.1 Recommended nozzle

- **Fluidics type N2 45°**

Alternatively:

- **Bergonzo type B5 45° SA**

Complete range of nozzles:

- **Bergonzo type B5 45°**
150 - 200 - 225 - 250 - 275 - 300 - 325 - 350 - 375 - 400 - 425 - 450 - 475 - 500 - 525 - 550 - 575 - 600.
- **Fluidics type N1 45°**
160 - 180 - 200 - 225 - 250 - 275 - 300 - 330 - 360 - 400 - 450 - 500 - 550 - 600.
- **Fluidics type N2 45°**
160 - 180 - 200 - 225 - 250 - 275 - 300 - 330 - 360 - 400 - 450 - 500 - 550 - 600.

	kg/h	Delivery pressure bar	Return pressure bar	kg/h	kW
RLS 310 - 410/M MX	150	21	13	51	600
		21	19	106	1250
	200	22	8.5	67	800
		22	17.5	150	1800
	300	20	7	100	1200
		20	17.5	257	3000
	375	20	6.5	148	1750
		20	15.5	305	3600
	425	20	7.5	68	1950
		20	17	344	4100
RLS 510/M MX	250	24	9	94	1120
		25	15.5	210	2500
	360	24	7.5	116	1380
		25	14	260	3090
	400	24	8.5	153	1820
		25	15	355	4220
	450	24	8	164	1950
25.5		16	425	5050	
RLS 610/M MX	300	20	9.5	125	1500
		20	14	250	3000
	450	20	8	134	1600
		20	14	380	4550
	575	20	9.5	193	2300
		20	17	510	6070

Tab. K

5.12 Light oil supply

5.12.1 Double-pipe circuit

The burner is equipped with a self-priming pump which is capable of feeding itself within the limits listed in the table at the side.

Tank higher than burner A (Fig. 21)

Distance P must not exceed 10 meters in order to avoid straining the pump's seal; distance V must not exceed 4 meters in order to allow the self-priming of the pump even when the tank is almost empty.

Tank lower than burner B (Fig. 21)

Pump depression values higher than 0.45 bar (35 cm Hg) must not be exceeded. because at higher levels gas is released from the fuel, the pump starts making noise and its working life-span decreases.

It is good practice to ensure that the return and suction lines enter the burner from the same height; in this way it will be less probable that the suction line fails to prime or stops priming.

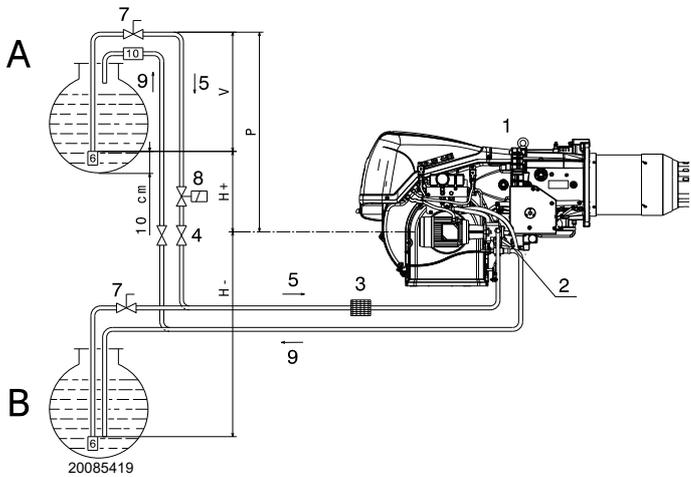


Fig. 21

Key (Fig. 21)

- H = Pump/Foot valve height difference
- L = Piping length
- Ø = Inside pipe diameter
- 1 = Burner
- 2 = Pump
- 3 = Filter
- 4 = Manual on/off valve
- 5 = Suction line
- 6 = Foot valve
- 7 = Quick closing manual valve with remote control (Italy only)
- 8 = On/off solenoid valve (Italy only). See electrical layout. Connections to be carried out by the installer (SV).
- 9 = Return line
- 10 = Check valve (only Italy)

5.12.2 The loop circuit

A loop circuit consists of a loop of piping departing from and returning to the tank with an auxiliary pump that circulates the fuel under pressure.

A branch connection from the loop feeds the burner.

This circuit is extremely useful whenever the burner pump does not succeed in self-priming because the tank distance and/or height difference are higher than the values listed in the table.

H (m)	L (m)			
	Ø (mm)			
	10	12	14	16
4	14	30	55	95
3.5	13	28	52	89
3	12	26	48	82
2.5	11	24	44	76
2	10	22	41	70
1.5	9	20	37	63
1	8	18	33	57
0.5	7	16	29	51
0	6	14	26	44
-0.5	5	12	22	38
-1	4	10	18	32
-1.5	3	8	15	25
-2		6	11	19
-2.5		4	7	13
-3			4	7

5.12.3 Hydraulic connections

The pumps are equipped with a by-pass that connects return line with suction line.

They are installed on the burner with the by-pass closed by screw 6)(Fig. 23).

It is therefore necessary to connect both hoses to the pump.

The pump will break down immediately if it is run with the return line closed and the by-pass screw inserted.

Remove the plugs from the suction and return connections of the pump.


Insert the hose connections with the supplied seals into the connections and screw them down.

Take care that the hoses are not stretched or twisted during installation.

Place the pipes so that they are not crushed or are in contact with hot parts of the boiler and so it is possible to open the burner.

Connect, finally, the other end of the flexible hoses to the suction and return lines using nipples supplied with the equipment.

5.12.4 Hydraulic circuit diagram

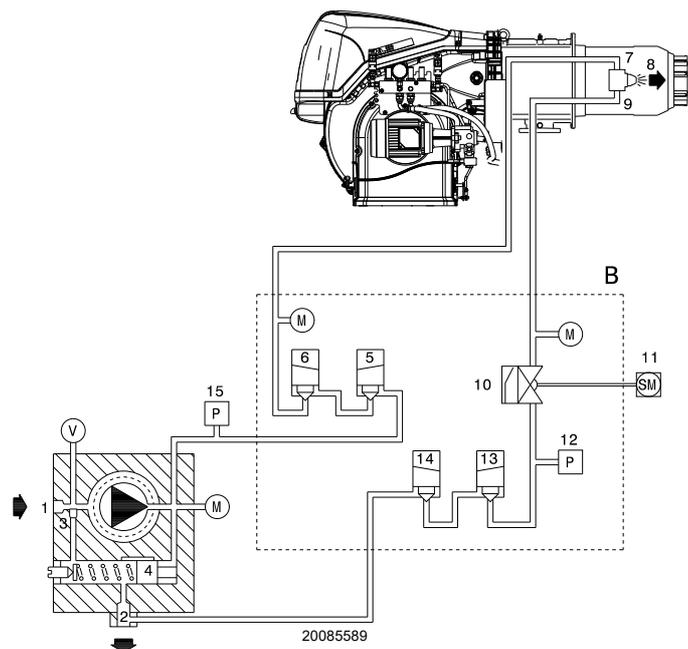

Key (Fig. 22)

- 1 Pump suction
- 2 Pump return line and nozzle return line
- 3 Pump by-pass screw
- 4 Pump pressure regulator
- 5 Safety valve
- 6 Safety valve
- 7 Nozzle delivery line
- 8 Nozzle without interception rod
- 9 Nozzle return line
- 10 Pressure adjuster on nozzle return line
- 11 Servomotor
- 12 Pressure switch on nozzle return line
- 13 Safety valve on nozzle return line
- 14 Safety valve on nozzle return line
- 15 Pressure switch on pump delivery line
- B Oil valve group and pressure variator
- M Pressure gauges
- V Vacuometer connection

OPERATION

Pre-purging phase:
valves 5), 6), 13) and 14) closed.

Ignition and operation phase:
valves 5), 6), 13) and 14) open.

Stop: All valves closed.

5.12.5 Priming pump



Before starting the burner, make sure that the tank return line is not clogged.

Obstructions in the line could cause the sealing organ located on the pump shaft to break.

- In order for the pump (Fig. 23) to self-prime, it is vital that the screw 4) of the pump be loosened to vent the air contained in the suction line.
- Start the burner by closing the remote controls. As soon as the burner starts, check the direction of rotation of the fan blade.

- The pump can be considered to be primed when the light oil starts coming out of the screw 4). Close the burner and undo the screws 4).

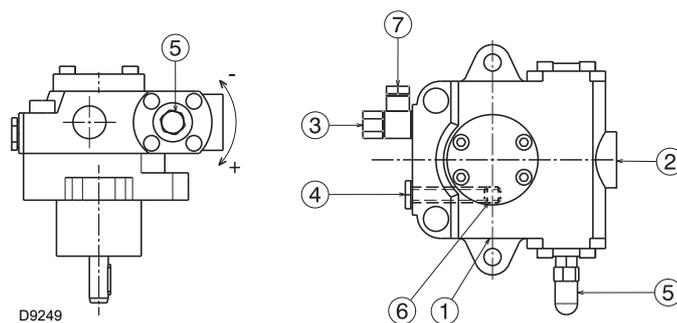


Fig. 23

Key (Fig. 23)

- 1 Suction line G 1/2"
- 2 Return line G 1/2"
- 3 Pressure switch connection G 1/4"
- 4 Vacuometer connection G 1/4"
- 5 Pressure adjuster G 1/4"
- 6 By-pass screws G 1/4"
- 7 Gauge connection G 1/4"

Fig. 22

MODELS		RLS 310	RLS 410	RLS 510 RLS 610
		TA 3	TA 4	TA 5
Min. delivery rate at 16.5 bar pressure	Kg/h	700	930	1270
Pressure range in outlet line	bar	7 - 40		7 - 30
Max depression in suction line	bar	0,45		0,45
Viscosity range	cSt	2 - 75		2 - 75
Maximum oil temperature	°C	150		150
Max pressure in suction and return lines	bar	5		5
Pressure calibration in factory	bar	22 - 20		22 - 20

Tab. L

The time required for this operation depends upon the diameter and length of the suction tubing.

If the pump fails to prime at first start-up and the burner locks out, wait approx. 15 seconds, reset the burner, and then repeat the start-up operation.

And so on. After 5 or 6 starting operations allow 2 or 3 minutes for the transformer to cool.

Obscure the flame sensor, the burner should lock out anyway about 10 seconds after it starts.



The a.m. operation is possible because the pump is already full of fuel when it leaves the factory. If the pump has been drained, fill it with fuel through the opening on the vacuometer 4)(Fig. 23) prior to starting; otherwise, the pump will seize.

Whenever the length of the suction piping exceeds 20-30 meters, the supply line must be filled using a separate pump.

5.13 Gas feeding



Explosion danger due to fuel leaks in the presence of a flammable source.

Precautions: avoid knocking, attrition, sparks and heat.

Make sure the fuel interception tap is closed before performing any operation on the burner.



WARNING

The fuel supply line must be installed by qualified personnel, in compliance with current standards and laws.

5.13.1 Gas feeding line

Key (Fig. 24 - Fig. 25 - Fig. 26 - Fig. 27)

- 1 Gas input pipe
- 2 Manual valve
- 3 Vibration damping joint
- 4 Pressure gauge with push-button cock
- 5 Filter
- 6A Includes:
 - filter
 - working valve
 - safety valve
 - pressure adjuster
- 6B Includes
 - working valve
 - safety valve
 - pressure adjuster
- 6C Includes
 - safety valve
 - working valve
- 6D Includes:
 - safety valve
 - working valve
- 7 Minimum gas pressure switch
- 8 Leak detection control, provided as an accessory or integrated, based on the gas train code (see manual "Burner - gas train combination" supplied as standard). In compliance with the EN 676 standard, the leak detection control is compulsory for burners with maximum outputs over 1200 kW.
- 9 Gasket, for "flanged" versions only
- 10 Pressure adjuster
- 11 Train-Burner adaptor, supplied separately
- P2 Upstream pressure of valves/adjuster
- P3 Upstream pressure of the filter
- L Gas train, supplied separately
- L1 The responsibility of the installer

MBC "threaded"

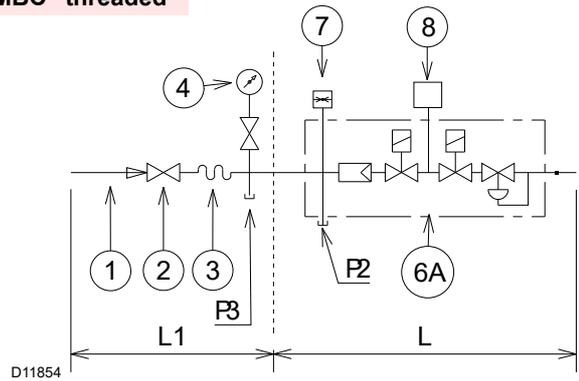


Fig. 24

MBC "flanged"-VGD

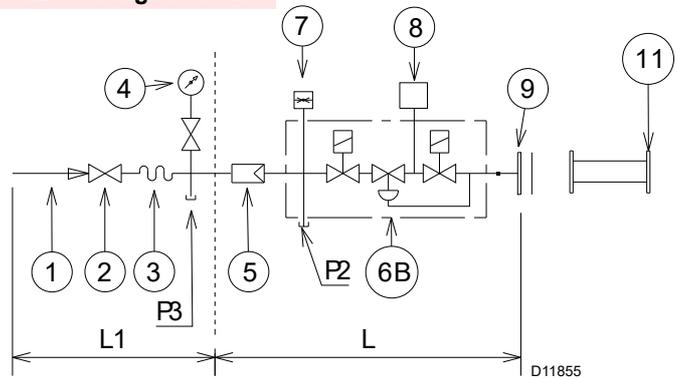


Fig. 25

DMV "flanged or threaded"

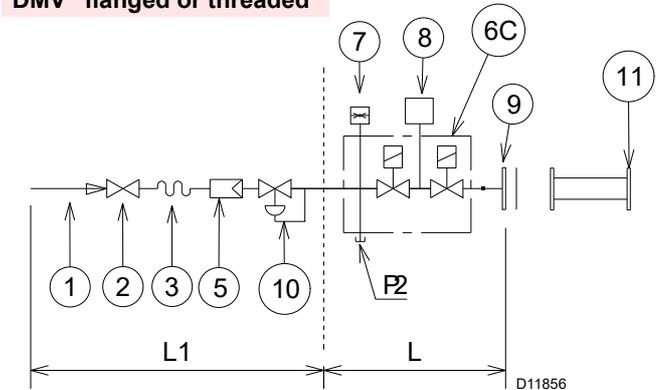


Fig. 26

CB "flanged or threaded"

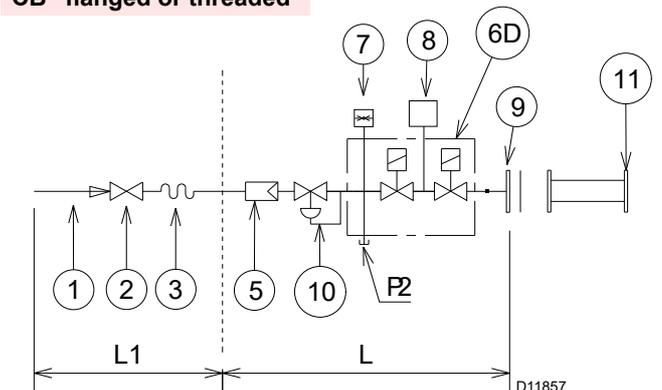


Fig. 27

5.13.2 Gas train

Approved according to standard EN 676 and provided separately from the burner.



Make sure that the gas train is properly installed by checking for any fuel leaks.

5.13.3 Gas train installation



DANGER

Disconnect the electrical power using the main switch.



Check that there are no gas leaks.



Pay attention when handling the train: danger of crushing of limbs.



The operator must use the required equipment during installation.

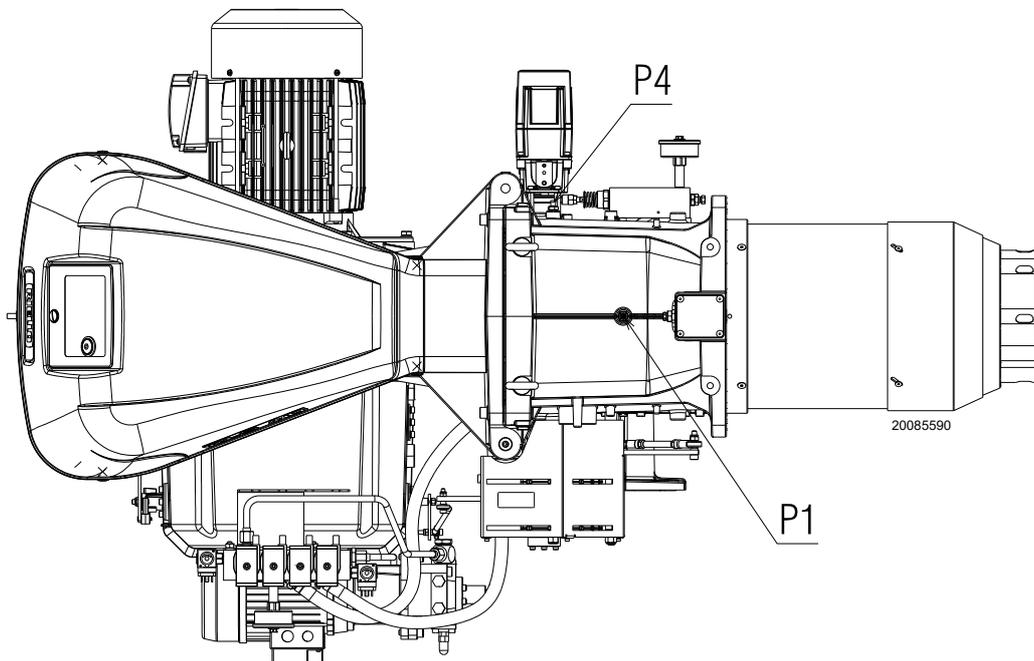


Fig. 28

5.13.4 Gas pressure

Tab. M indicates the minimum pressure drops along the gas supply line, depending on the maximum burner output.

The values shown in Tab. M refer to:

- Natural gas G 20 NCV 9.45 kWh/Sm³ (8.2 Mcal/Sm³)
- Natural gas G 25 NCV 8.13 kWh/Sm³ (7.0 Mcal/Sm³)

Column 1

Combustion head pressure drop.

Gas pressure measured at the test point P1)(Fig. 28), with:

- Combustion chamber at 0 mbar;
- Burner working at maximum output;
- Combustion head adjusted as in page 22.

Column 2

Pressure loss at gas butterfly valve 14)(Fig. 5 on page 14) with maximum opening: 90°.

Calculate the approximate maximum output of the burner in this way:

- subtract the combustion chamber pressure from the gas pressure measured at test point P1)(Fig. 28).
- Find, in the table Tab. M related to the burner concerned, the pressure value closest to the result of the subtraction.
- Read the corresponding output on the left.

Example RLS 410/M MX with natural gas G20:

Maximum output operation

Gas pressure at test point P1)(Fig. 28) = 29,4 mbar
 Pressure in combustion chamber = 5 mbar
 29.4 - 5 = 24.4 mbar

A pressure of 24.4 mbar, column 1, corresponds in the table Tab. M to an output of 3000 kW.

This value serves as a rough guide; the effective output must be measured at the gas meter.

To calculate the required gas pressure at test point P1)(Fig. 28), set the MAX output required from the burner operation:

- find the nearest output value in the table Tab. M for the burner in question.
- Read, on the right (column 1), the pressure at the test point P1)(Fig. 28).
- Add this value to the estimated pressure in the combustion chamber.

Example RLS 410/M MX with natural gas G20:

Required burner maximum output operation: 3000 kW

Gas pressure at an output of 3000 kW = 24.4 mbar
 Pressure in combustion chamber = 5 mbar
 24.4 + 5 = 29.4 mbar

Pressure required at test point P1)(Fig. 28).

	kW	1 Δp (mbar)		2 Δp (mbar)	
		G 20	G 25	G 20	G 25
RLS 310/M MX	1200	3.6	5.4	0.1	0.1
	1467	5.4	8.1	0.2	0.3
	1733	7.5	11.2	0.4	0.6
	2000	9.9	14.8	0.7	1.0
	2267	12.7	18.9	1.0	1.5
	2533	15.8	23.6	1.3	1.9
	2800	19.3	28.8	1.7	2.5
	3067	23.1	34.5	2.1	3.1
	3333	27.3	40.7	2.6	3.9
	3600	31.8	47.4	3.1	4.6
RLS 410/M MX	1500	6.4	9.5	0	0
	1800	9.0	13.4	0.2	0.3
	2100	12.2	18.2	0.5	0.7
	2400	15.8	23.6	0.8	1.2
	2700	19.9	29.7	1.2	1.8
	3000	24.4	36.4	1.7	2.5
	3300	29.4	43.9	2.3	3.4
	3600	34.9	52.1	2.9	4.3
	3900	40.9	61.0	3.6	5.4
	4200	47.3	70.6	4.4	6.6
RLS 510/M MX	1800	7.0	10.4	1.5	2.2
	2174	9.8	14.6	2.0	3.0
	2549	13.0	19.4	2.6	3.9
	2923	16.6	24.8	3.3	4.9
	3298	20.7	30.9	4.1	6.1
	3672	25.2	37.6	4.9	7.3
	4047	30.2	45.1	5.8	8.7
	4421	35.6	53.1	6.8	10.1
	4796	41.5	61.9	7.8	11.6
	5170	47.8	71.3	9.0	13.4
RLS 610/M MX	2200	8.7	13.0	2.7	4.0
	2639	12.5	18.6	3.9	5.8
	3079	17.1	25.5	5.3	7.9
	3518	22.3	33.3	6.9	10.3
	3958	28.2	42.1	8.7	13.0
	4397	34.8	51.9	10.7	16.0
	4837	42.1	62.8	13.0	19.4
	5276	50.1	74.7	15.4	23.0
	5716	58.8	87.7	18.1	27.0
	6155	68.2	101.8	21.0	31.3

Tab. M



The heat output and gas pressure data in the head refer to operation with gas butterfly valve fully open (90°).

5.14 Electrical wiring

Notes on safety for the electrical wiring



- The electrical wiring must be carried out with the electrical supply disconnected.
- Electrical wiring must be made in accordance with the regulations currently in force in the country of destination and by qualified personnel. Refer to the wiring diagrams.
- The manufacturer declines all responsibility for modifications or connections different from those shown in the wiring diagrams.
- Check that the electrical supply of the burner corresponds to that shown on the identification label and in this manual.
- The burner has been set for intermittent operation (FS1), however with the only use of the electrode for the flame detection (ionization), the burner can also operate FS2.
- The RFGO safety device features two built-in flame amplifiers which allow using it for applications with UV sensor only, FR sensor only or with both sensors (UV+FR). The FR amplifier circuit is subject to constant auto-control, which allows to use it for applications requiring a burner operating cycle longer than 24 hours. When it is used as a UV control, the system is considered as non-permanent, requiring one burner recycle every 24 hours. Normally, burner stopping is guaranteed by the boiler's thermostat/pressure switch. If this is not the case, you must apply a time switch to L-N in series, to stop the burner at least once every 24 hours. Refer to the wiring diagrams.
- The electrical safety of the device is obtained only when it is correctly connected to an efficient earthing system, made according to current standards. It is necessary to check this fundamental safety requirement. In the event of doubt, have the electrical system checked by qualified personnel. Do not use the gas tubes as an earthing system for electrical devices.
- The electrical system must be suitable for the maximum input power of the device, as indicated on the label and in the manual, checking in particular that the section of the cables is suitable for the input power of the device.
- For the main power supply of the device from the electricity mains:
 - do not use adapters, multiple sockets or extensions;
 - use an omnipolar switch, in compliance with the current safety standards.
- Do not touch the device with wet or damp body parts and/or in bare feet.
- Do not pull the electric cables.

Before carrying out any maintenance, cleaning or checking operations:



Turn off the burner's power supply using the main system switch.



Turn off the fuel interception tap.



Avoid condensate, ice and water leaks from forming.

If the cover is still present, remove it and proceed with the electrical wiring according to the wiring diagrams. Use flexible cables in compliance with the EN 60 335-1 standard.

5.14.1 Supply cables and external connections passage


All the cables to be connected to the burner must be threaded through cable grommets. The use of the cable grommets can take various forms; by way of example see Fig. 29.

Key (Fig. 29)

- | | |
|--|--------------|
| 1 Electrical supply | Bore for M32 |
| 2 Consents / Safety devices | Bore for M20 |
| 3 Minimum gas pressure switch | Bore for M20 |
| 4 VPS gas valve leak detection control kit | Bore for M20 |
| 5 Gas train | Bore for M20 |
| 6 Available | Bore for M20 |
| 7 Available | Bore for M16 |

Cable grommets used in the factory:

- A Fan motor
- B Maximum gas pressure switch
- C Air/gas servomotor
- D Flame sensor
- E Oil valve
- F Pump motor
- G Oil pressure switches

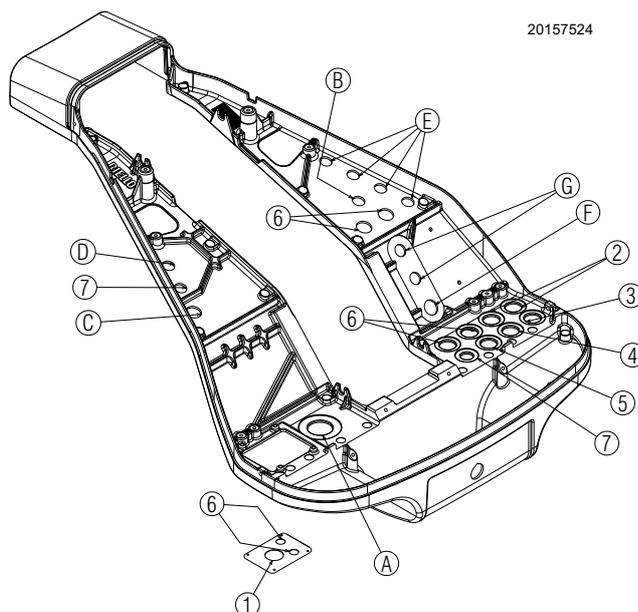

20157524

Fig. 29



After carrying out maintenance, cleaning or checking operations, reassemble the cover and all the safety and protection devices of the burner.

6 Start-up, calibration and operation of the burner

6.1 Notes on safety for the first start-up



➤ The first start-up of the burner must be carried out by qualified personnel, as indicated in this manual and in compliance with the standards and regulations of the laws in force.



➤ Check the correct working of the adjustment, command and safety devices.



Before igniting the burner, see the paragraph “Safety test - with gas feeding closed” on page 42.

6.2 Servomotor adjustment

The servomotor (Fig. 30) provides simultaneous adjustment of the eccentric of the oil modulator, and by means of the adjustable profile cam the gas butterfly valve, and the air damper. Completes a rotation of 90° in 30 s. After the adjustment made in the factory to its 6 cams to allow an initial ignition.

Check that they are as shown below.

In the event of a modification, follow what is described below for each cam:

Cam I (RED): 135° (The same for all models)
Limits the rotation towards the maximum.



Do not make any adjustments.

Cam II (BLUE): 0° (The same for all models)
Limits the rotation towards the minimum.
With the burner off the air damper and the gas butterfly valve should be closed: 0°



It is recommended that no adjustments are made.

Cam III (ORANGE): 50° (The same for all models)
Adjusts the start up position and the minimum output with gas operation.

- Cam IV (YELLOW): 130°** (The same for all models)
Adjusts the position of the maximum output with gas operation.
- Cam V (BLACK): 60°** (The same for all models)
Adjusts the minimum output and ignition position with light oil operation.
- Cam VI (GREEN): 130°** (The same for all models)
adjusts the Max. output position with light oil operation.

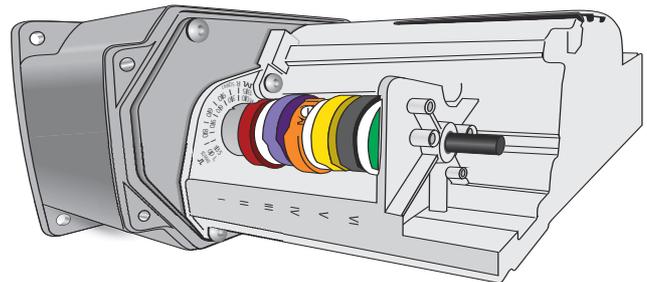


Fig. 30

6.3 Adjustments prior to ignition (light oil)



It is recommended to adjust first the light oil burner and then the gas burner.
Carry out the fuel change with burner off.

The optimum calibration of the burner requires an analysis of the flue gases at the boiler outlet and interventions on the following points.

6.3.1 Nozzle

See information on page 23.

6.3.2 Combustion head

The adjustment of the combustion head already carried out on page 22 does not require any modifications unless the burner output is changed.

6.3.3 Pump pressure

In order to change pump pressure, act on screw 5) (Fig. 23). See information on page 23.

6.3.4 Fan damper

Refer to the adjustment of the servomotor on page 30.

6.4 Burner start-up (light oil)

Electrically power the burner using the disconnecting switch on the boiler panel.
Position the selector 23)(Fig. 6 on page 15) on "OIL" to select light oil as fuel.

Close the thermostats/pressure switches and set the switch 1)(Fig. 31) to **MAN**.

Start of the fan motor. As the burner is not fitted with a device to check the sequence of the phases, the motor rotation may be incorrect.

As soon as the burner starts to position itself in front of the cooling fan of the fan motor, check that this turns anti-clockwise or else in the direction of the arrow 25)(Fig. 5).

If this is not the case:

- place the switch 1)(Fig. 31) to "OFF" and wait for the control box to carry out the switching off phase;



disconnect the burner's electrical supply, since this operation should be carried out when there is no electrical supply;

- invert the phases on the three-phase power supply;

- repeat the start-up procedure.



Make sure that the lights or testers connected to the solenoids, or the pilot lights on the solenoids themselves, indicate that no voltage is present. If voltage is present, stop the burner **immediately** and check the electrical wiring.

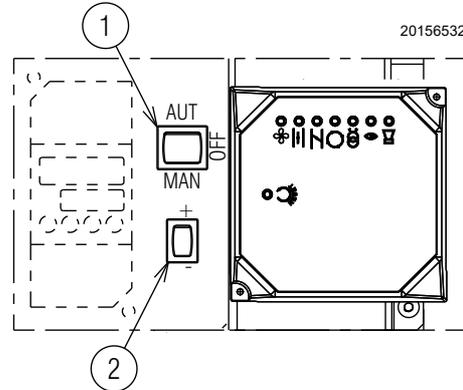


Fig. 31

6.5 Burner ignition (light oil)

Position the selector 1)(Fig. 31) on "MAN".

Position the selector 23)(Fig. 6 on page 15) on "OIL" to select light oil as fuel.

At the closing of the limit thermostat (TL), you must start the burner.

At first ignition, there is a momentary drop in fuel pressure due to the filling of the nozzle piping. This lowering of the fuel pressure can cause the burner to lockout and can sometimes give rise to pulsations.

If the burner locks out again, see the chapter "LED lamps: burner operating status" on page 47.

Once the following adjustments have been made, the ignition of the burner must generate a noise similar to the noise generated during operation.

6.6 Pressure variator

Calibration pressure on return line

With the servomotor in the minimum output position, the nut and the corresponding lock nut 2)(Fig. 32), should be secured against the eccentric 3).

With the servomotor at its maximum opening, the eccentric will press the modulator spindle bringing the pressure, which can be read on the pressure gauge 1)(Fig. 32), to the desired value (maximum output).

With the servomotors in the position of maximum output, it is possible to reduce the pressure on the return line by using the screw 4.

By turning the screw clockwise the pressure on the return line drops (the pressure at the nozzle increases), turning it the other way the pressure on the return line increases (the pressure at the nozzle drops).

Once the calibration is finished lock the lock nut 5)(Fig. 32).

Calibration pressure on delivery line

To adjust the delivery pressure, operate on the pump as described on page 25.

Example:

if you use a 450 kg/h nozzle and you want to obtain an output of 4550 kW, the pressure on the pressure gauge 1)(Fig. 32) (maximum pressure on the return circuit) must be about 14 bar.

The relative delivery pressure on the pressure gauge 1), must be 20 bar (see Tab. K on page 23).

IMPORTANT

- For a correct calibration, the eccentric 3) must operate along the entire range of travel of the servomotor (20 - 130°): a pressure variation must correspond to every variation of the servomotor.
- Never take the piston of the variator to the end.
- If at the maximum delivery of the nozzle (maximum pressure on the return line) pressure oscillations can be seen on the pressure gauge 3), slightly reduce the pressure until they disappear.

NOTE:

The burner is factory set with maximum pressure on the return line of approximately 14 bar and delivery pressure of approximately 25 bar.

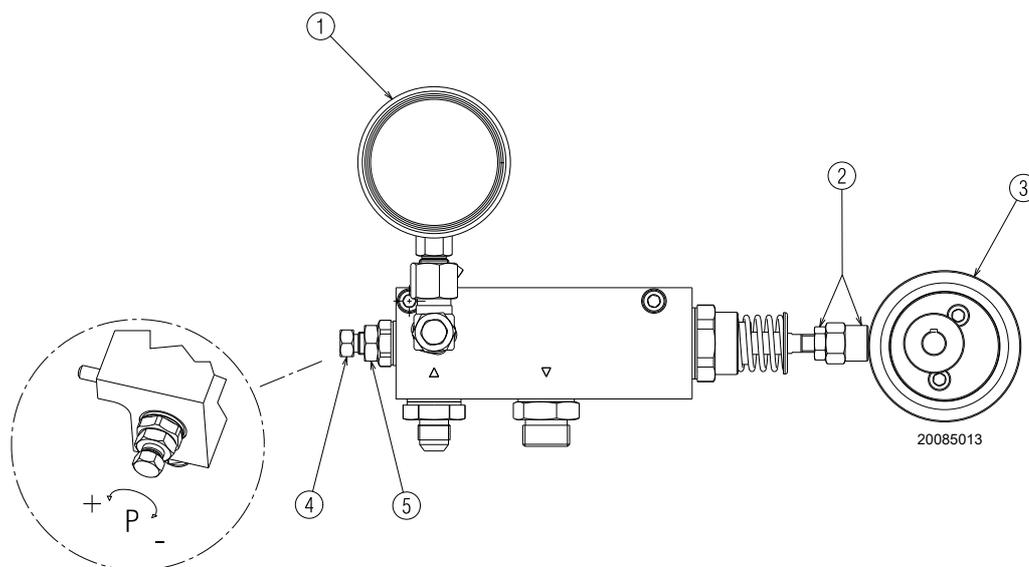


Fig. 32

Key (Fig. 32)

- 1 Return pressure gauge
- 2 Piston calibration nut and lock nut
- 3 Fixed eccentric
- 4 Adjustment screw (maximum output)
- 5 Locking screws (maximum output)

6.6.1 Light oil burner calibration procedure

- Switch on the burner, with the selector on the control panel on manual 1)(Fig. 31).
At this point, after the pre-purge operation, the servomotor stops at the ignition position.
- Adjust the minimum return pressure to approx. 6 bar.
To do this, the length of the spindle acting needs to be changed by using the nut 2)(Fig. 32).
- Proceed with calibrating the air output by adjusting the variable profile cam, using the screws 2)(Fig. 33)(cam 1 Fig. 35).
- Having performed this first adjustment, increase the output by means of automatic return selector 2)(Fig. 31) on the control panel. Pause after a 15° rotation of the servomotor and carry out another adjustment using the variable profile cam of the air (cam 1 Fig. 35).
It is recommended that a calibration be carried out that is sufficient not to create a smoky flame and that attains the maximum output as quickly as possible; using the screw 4)(Fig. 32) adjust the pressure on the return line to obtain the desired output required by the nozzle, then go back and calibrate the intermediate points.
- Then recheck the values of the combustion parameters at the various modulation outputs and if necessary make the necessary adjustments.
- With the optimal adjustment achieved, remember to lock the adjustment screws of the cam profiles by means of screws 3)(Fig. 33).



WARNING

When calibrating the cams, never go beyond the travel limits of the servomotor 0° - 130° to avoid any breakages. Carrying out a manual travel 0 - 90° of the cams, check that there are no mechanical stops before the micro-switches of the servomotor are activated.

6.6.2 Maximum output (light oil)

Adjust the servomotor to the maximum opening so that the air damper is fully open.
To regulate the light oil, use the screw 4)(Fig. 32) until the required output is obtained.

6.6.3 Minimum output (light oil)

Min output must be selected within the firing rate range shown on page 12.

6.6.4 Intermediate outputs

After adjusting the maximum and minimum output of the burner, carry out air adjustment on higher intermediate positions of the servomotor.

The passage from one position to the next one is obtained by pressing the selector 2)(Fig. 31) on the symbol (+) or (-).

For better adjustment repeatability, take care to stop the rotation of the cam unit when the upper bearing that slides on the profile 4)(Fig. 33) is aligned with one of the adjustment screws 2)(Fig. 33).

Screw in or unscrew the pre-set screw 2)(Fig. 33) to increase or decrease the air output so that it comes into line with the corresponding light oil output.

After the output adjustments (maximum, minimum and intermediate), it is important to lock all the air adjustment screws 2)(Fig. 33) using the locking screws 3)(Fig. 33) so as to avoid possible movements from the of air - light oil calibration positions.

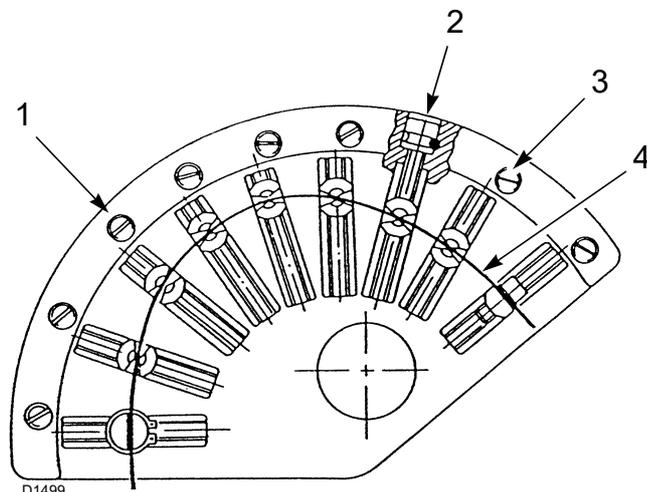


Fig. 33

Key (Fig. 33)

- 1 Cam
- 2 Adjustment screws
- 3 Locking screws
- 4 Adjustable profile

6.7 Change of fuel

There are two change of fuel options:

- 1 with selector 23)(Fig. 6 on page 15);
- 2 with a remote selector connected to the main terminal board. Positioning the selector 23)(Fig. 6 on page 15) to "EXT" activates the remote selection of the fuel.



WARNING

Change the fuel only when the burner is off.



WARNING

For the remote switching of the fuel, use the relative kit.

6.8 Adjustments prior to ignition (gas)

Combustion head adjustment is already described on page 22.

In addition, the following adjustments must also be made:

- Open manual valves upstream from the gas train.
- Adjust the minimum gas pressure switch to the start of the scale.
- Adjust the maximum gas pressure switch to the end of the scale.
- If necessary, adjust the air pressure switch (previously adjusted when operating with light oil).
- Purge the air from the gas line.
We recommend using a plastic tube routed outside the building and to purge air until gas is smelt.
- Fit a U-type pressure gauge or a differential pressure gauge (Fig. 34), with socket (+) on the gas pressure of the pipe coupling and (-) in the combustion chamber.
The manometer readings are used to calculate MAX burner output using the Tab. M.
- Connect two lamps or testers to the two gas line solenoids to check the exact moment in which voltage is supplied. This operation is unnecessary if each of the two solenoids is equipped with a pilot light that signals voltage passing through.



Before starting up the burner, it is good practice to adjust the gas train so that ignition takes place in conditions of maximum safety, i.e. with gas delivery at the minimum.

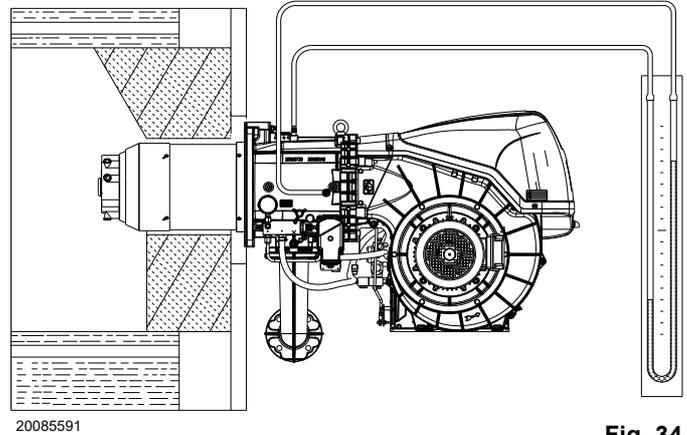


Fig. 34

6.9 Burner ignition (gas)

Electrically power the burner using the disconnecting switch on the boiler panel.

Put the selector Fig. 6) on “GAS” to select gas as the fuel.

The burner should light after having performed the above steps.

If the motor starts up, but the flame does not appear and the control box goes into lockout, reset it and wait for a new ignition attempt.

Two types of burner failure may occur:

- **Control box lockout:** when the control box button comes on (light signal) 2)(Fig. 6 on page 15) it warns you that the burner is in lockout. See “LED lamps: burner operating status” on page 47 for the causes of the lockout. release by pressing the push-button 2)(Fig. 6 on page 15). See control box reset.
- **Motor lockout because of thermal relay intervention:** because of an erroneous calibration of the thermal relay or problems with the motor or the main power supply. Release by pressing the button on thermal relay, see section 4.15 on page 18.

If ignition is still not achieved, it may be that gas is not reaching the combustion head within the safety time period of 3 seconds. In this case increase gas ignition delivery.

The arrival of gas at the pipe coupling is indicated by the U-type pressure gauge (Fig. 34).

Once the burner has fired, now proceed with global calibration operations.

6.10 Proceed with the calibration (gas)

The fuel/combustion synchronisation is done by means of a servomotor connected to two variable profile cams, which act on the air dampers 1)(Fig. 35) and gas dampers 2)(Fig. 35). It is advisable, to reduce the loss and for a wide calibration field, to adjust the servomotor to the maximum of the output used, the nearest possible to the maximum opening (130°). On the gas butterfly valve, the choking of the fuel according to the required output, is carried out using the cam 2)(Fig. 35).

The values in the table can be useful as reference for good fuel calibration.

EN 676		Air excess		
		Max. output. $\lambda \leq 1.2$		Min. output $\lambda \leq 1.3$
GAS	Theoretical max CO ₂ 0 % O ₂	CO ₂ % Calibration		CO mg/kWh
		$\lambda = 1.2$	$\lambda = 1.3$	
G 20	11.7	9.7	9.0	≤ 100
G 25	11.5	9.5	8.8	≤ 100
G 30	14.0	11.6	10.7	≤ 100
G 31	13.7	11.4	10.5	≤ 100

EN 267		Air excess		
		Max. output. $\lambda \leq 1.2$		Min. output $\lambda \leq 1.3$
Theoretical max CO ₂ 0 % O ₂		CO ₂ % Calibration		CO mg/kWh
		$\lambda = 1.2$	$\lambda = 1.3$	
15.2		12.6	11.5	≤ 100

6.10.1 Burner adjustment

The optimum adjustment of the burner requires an analysis of flue gases at the boiler outlet.

Adjust in sequence:

- 1 - Output upon ignition
- 2 - MAX output
- 3 - MIN output
- 4 - Intermediate outputs between Min. and Max.
- 5 - Air pressure switch
- 6 - Maximum gas pressure switch
- 7 - Minimum gas pressure switch

6.10.2 Output upon ignition

Ignition must occur at a lower output than the max. operation output. Regulations provide that the ignition output of this burner must be equal to or less than 1/3 of the MAX operation output.

Example: MAX operation output of 600 kW.

Ignition output must be equal to or lower than:

200 kW with $t_s = 3$ s.

In order to measure the ignition output:

- Obscure the flame sensor (the burner starts and goes into lockout after the safety time).
- Perform 10 ignitions with consecutive lockouts.
- Read the quantity of gas burned on the meter.
- This quantity must be equal to or lower than the quantity given by the formula:

$$\frac{\text{Sm}^3/\text{h (max. burner delivery)}}{360}$$

Example for G 20 gas (9.45 kWh/Sm³):

Max. operation output: 600 kW corresponding to 63.5 Sm³/h.

After 10 ignitions with their lockouts, the delivery indicated on the meter must be equal to or less than: $63.5 : 360 = 0.176 \text{ Sm}^3$

Air adjustment

The air adjustment has already been carried out on the basis of the light oil side calibration.

There could be variations to correct the gas combustion but this involves a further check of the light oil operation.

6.10.3 Maximum output

The MAX output must be set within the firing rate indicated in Fig. 3 on page 12.

In the above instructions we left the burner running at the MIN output. Now press the "increase output" button 2)(Fig. 31 on page 31), and keep it pressed until the servomotor has opened the air damper and the gas butterfly valve.

Adjustment of gas delivery

Measure the gas delivery on the gas meter.

A rough indication can be obtained from Tab. M on page 28, just read the gas pressure on the "U" pressure gauge (see Fig. 34 on page 34) and follow the indications.

- If delivery needs to be reduced, diminish outlet gas pressure; if it is already very low, slightly close the VR adjustment valve.
- If delivery needs to be increased, increase the adjuster outlet gas pressure.
- Screw or unscrew the screw 2) of the mechanical cam (Fig. 35 on page 35) to increase or decrease the gas output so as to adjust it to the corresponding air output, to obtain optimal combustion.
- Proceed in the same way with the other screws.

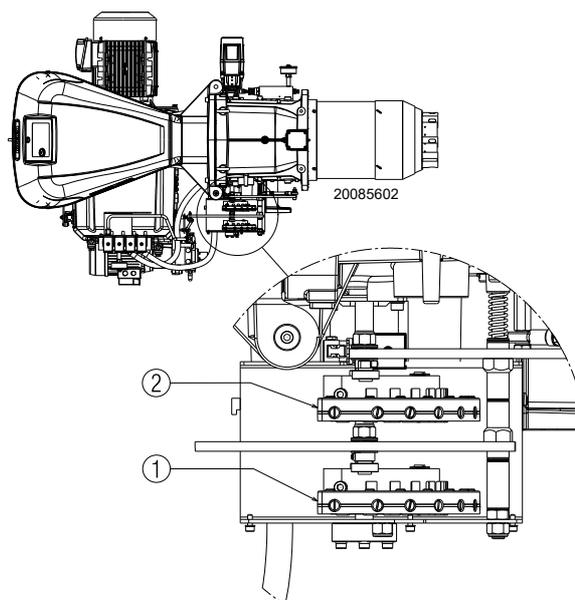


Fig. 35

Key (Fig. 35)

- 1 Air adjustment cam
- 2 Gas adjustment cam

Air adjustment

The regulation of the air is carried out by changing the angle of the cam I) and IV) of the servomotor Fig. 30 and using the selector 2)(Fig. 31 on page 31).

To adjust the cam of the servomotor, see Fig. 36 A).

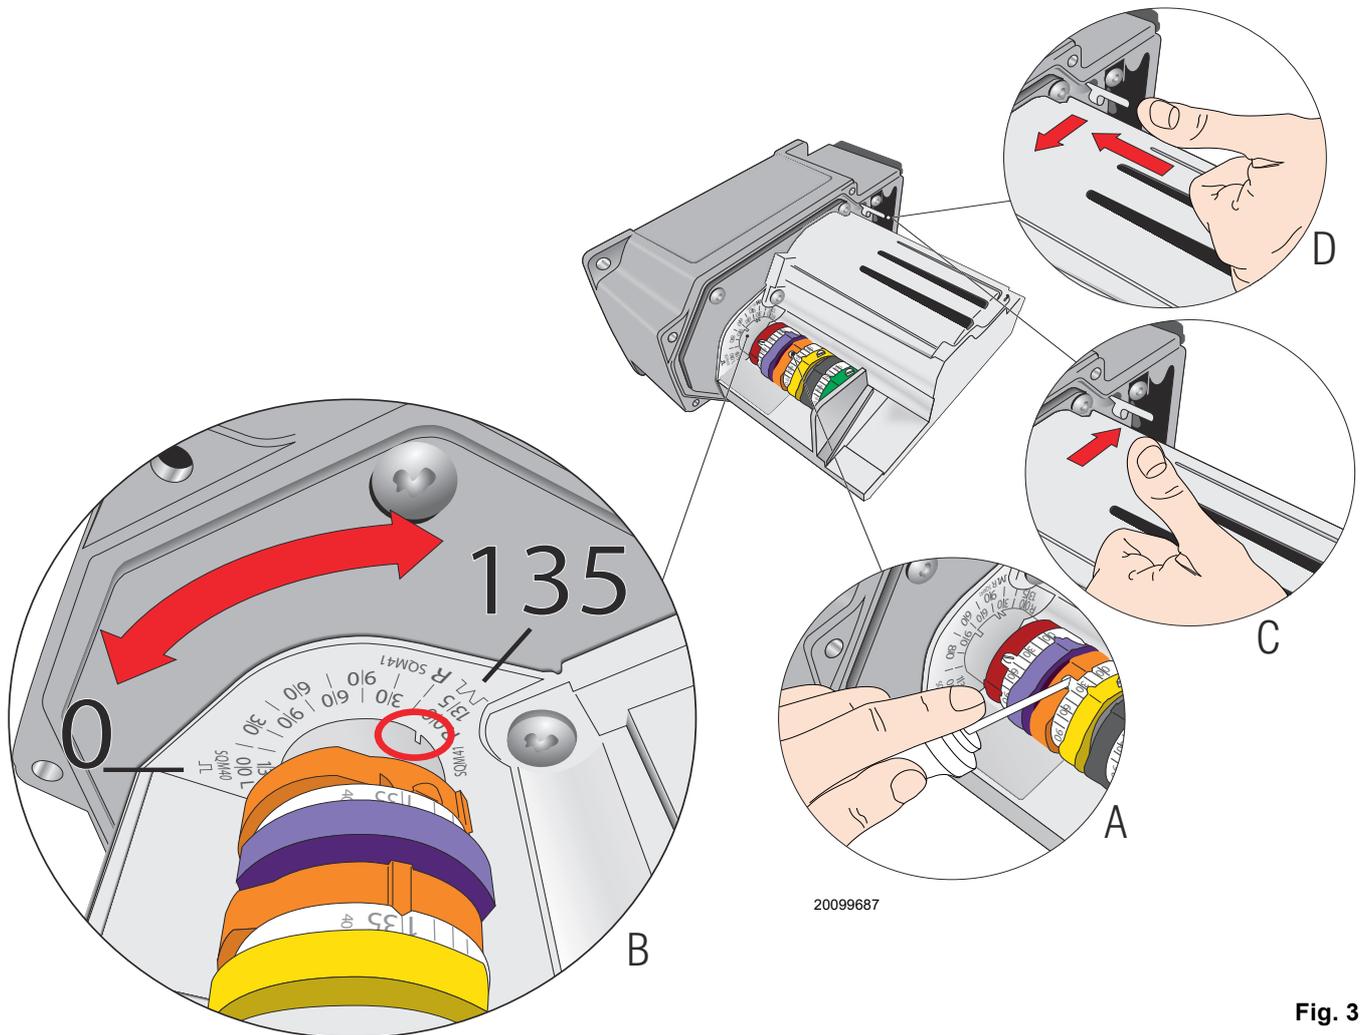


Fig. 36

6.10.4 Minimum output

Min output must be selected within the firing rate range shown on Fig. 3 on page 12.

Press the button 2)(Fig. 31) “Decreasing output” and keep it pressed until the servomotor comes to the minimum position.

Adjustment of gas delivery

Progressively adjust the initial profile of the mechanical cam 2) Fig. 35, using the screws 2) Fig. 35.

For example, calibrate the minimum output to 800 kW, check the emissions and if necessary increase or decrease the opening of the air damper (“Proceed with the calibration (gas)” on page 35). Bring the output to 800 kW using the screws 2) of the mechanical cam (Fig. 33 on page 33) and check the emissions.

Air adjustment

The regulation of the air is carried out by varying the angle of the cam III) of the servomotor Fig. 30 and by using the selector 2)(Fig. 31 on page 31). To adjust the cam of the servomotor, see Fig. 36 A).

NOTE:

The servomotor follows the adjustment of cam III) only when the angle of the cam is reduced. If it is necessary to increase the angle of the cam, you must first increase the angle of the servomotor by means of the “output increase” key, then increase the angle of cam III), and finally bring the servomotor to the position of MIN output, with the “Output reduction” key.

To adjust the cam III) Fig. 30, see Fig. 36 A) and B).

6.10.5 Intermediate outputs

Adjustment of gas delivery

After adjusting the maximum and minimum output of the burner, carry out air adjustment on higher intermediate positions of the servomotor. The passage from one position to the next one is obtained by pressing the button 2) on the symbol (+) or (-) (Fig. 31 on page 31). Lightly push the button 2)(Fig. 31 on page 31) "Increasing the output" so that the servomotor turns by about 20°.

Screw or unscrew the screw 2) of the mechanical cam (Fig. 33 on page 33) to increase or decrease the gas output so as to adjust it to the corresponding air output, to obtain optimal combustion.

Proceed in the same way with the other screws.



Take care that the cam profile variation is progressive.

Switch off the burner using the switch 1)(Fig. 31), OFF position, release the mechanical cam I) and II)(Fig. 33)(Fig. 35) to separate the gears of the servomotor, pressing and shifting downwards the button 3)(Fig. 36 D) and by manually turning several times the mechanical cam I)(Fig. 33) backwards and forwards check that the movement is smooth and without any hindrance.



We recommend binding the mechanical cams I) and II) again (Fig. 33)(Fig. 35) to the servomotor by shifting upwards the button 3)(Fig. 36 C).

As far as is possible, try not to move those screws at the ends of the mechanical cam that were previously adjusted for the opening of the gas butterfly valve to MAX and MIN output.

6.11 Pressure switch adjustment

6.11.1 Air pressure switch - check CO

Adjust the air pressure switch after performing all other burner adjustments with the air pressure switch set to the start of the scale (Fig. 37).



Fig. 37

With the burner operating at min. output, increase adjustment pressure by slowly turning the relative knob clockwise until the burner locks out.

Then turn the knob anti-clockwise by about 20% of the set point and repeat burner starting to ensure it is correct.

If the burner locks out again, turn the knob anticlockwise a little bit more.



In conformity with the standard, the air pressure switch must prevent the air pressure falling below 80% of the adjusted value and the CO in the flue gases exceeding 1% (10,000 ppm).

To check this, insert a combustion analyser into the chimney, slowly close the fan suction inlet (for example with cardboard) and check that the burner locks out before the CO in the fumes exceeds 1%.

The air pressure switch is installed in the "absolute" position, that is connected only to the pressure test point "+" 22)(Fig. 5).

6.11.2 Maximum gas pressure switch

Adjust the maximum gas pressure switch (Fig. 38) after making all other burner adjustments with the maximum gas pressure switch set to the end of the scale.

To calibrate the maximum gas pressure switch, open the tap and then connect a pressure gauge to its pressure test point.

The maximum gas pressure switch must be regulated to a value no higher than 30% of the measurement read on the gauge when the burner is working at maximum output.

After making the adjustment, remove the pressure gauge and close the tap.

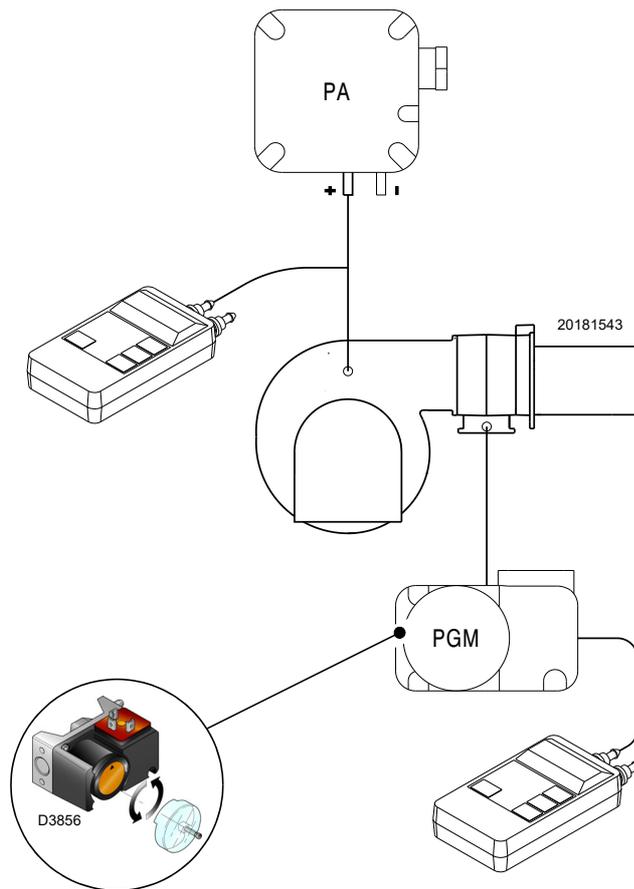


Fig. 38

6.11.3 Minimum gas pressure switch

The purpose of the minimum gas pressure switch is to prevent the burner from operating in an unsuitable way due to too low gas pressure.

Adjust the minimum gas pressure switch (Fig. 39) after having adjusted the burner, the gas valves and the gas train stabiliser. With the burner operating at maximum output:

- install a pressure gauge downstream of the gas train stabiliser (for example at the gas pressure test point on the burner combustion head);
- choke slowly the manual gas cock until the pressure gauge detects a decrease in the pressure read of about 0.1 kPa (1 mbar). In this phase, verify the CO value which must always be less than 100 mg/kWh (93 ppm).
- Increase the adjustment of the gas pressure switch until it intervenes, causing the burner shutdown;
- remove the pressure gauge and close the cock of the gas pressure test point used for the measurement;
- open completely the manual gas cock.



1 kPa = 10 mbar

WARNING

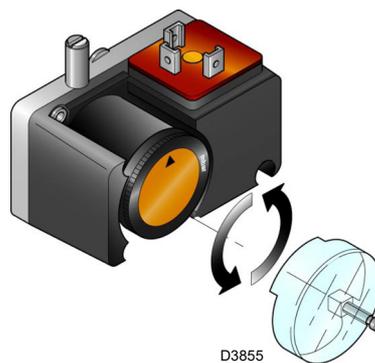


Fig. 39

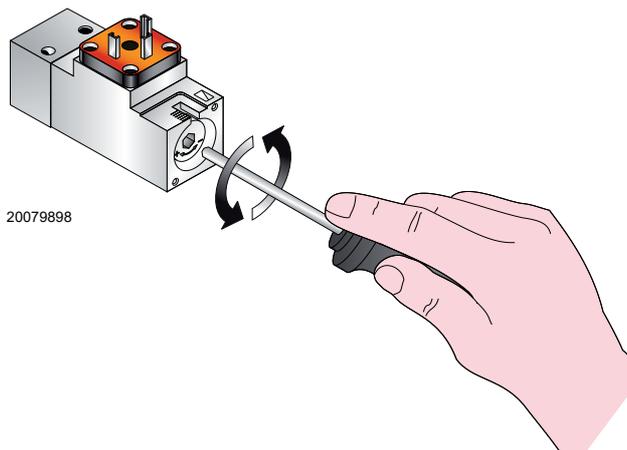


Fig. 40

6.11.4 Minimum oil pressure switch

The minimum oil pressure switch (Fig. 40) is calibrated in the factory at 18 bar. If the oil pressure falls below this value in the delivery line, the pressure switch stops the burner.

The burner restarts automatically if the pressure goes above bar value set after the burner starts.

6.11.5 Maximum oil pressure switch

The maximum oil pressure switch (Fig. 40) is calibrated in the factory at 3 bar. If the oil pressure in the return line goes above this value, the pressure switch stops the burner in a lockout.

To adjust the pressure switches, use a tool to operate the adjustment screw, see (Fig. 40).

6.12 Operation sequence of the burner (gas)

6.12.1 Burner start-up

- 0s** TL thermostat/pressure switch closure.
- 6s** Fan motor start. Servomotor starts: turn to the right until the intervention of the contact on the cam 4)
- 38s** The air damper is positioned to MAX output.
- 38s** Pre-purging phase with air delivery of the MAX output. Duration 32 seconds.
- 70s** The servomotor rotates left up to the angle set on the cam 3).
- 102s** The air damper and the gas butterfly valve set to MIN output (with cam 3).
- 103s** Ignition electrode strikes a spark.
- 109s** The VS safety valve and the VR adjustment valve open (rapid opening). The flame is ignited at a low output level, point A (Fig. 41). There follows a progressive increase of the input, slow opening of the valve, up to the MIN output, point B (Fig. 41).
- 112s** The spark goes out.
- 133s** The starting cycle ends.

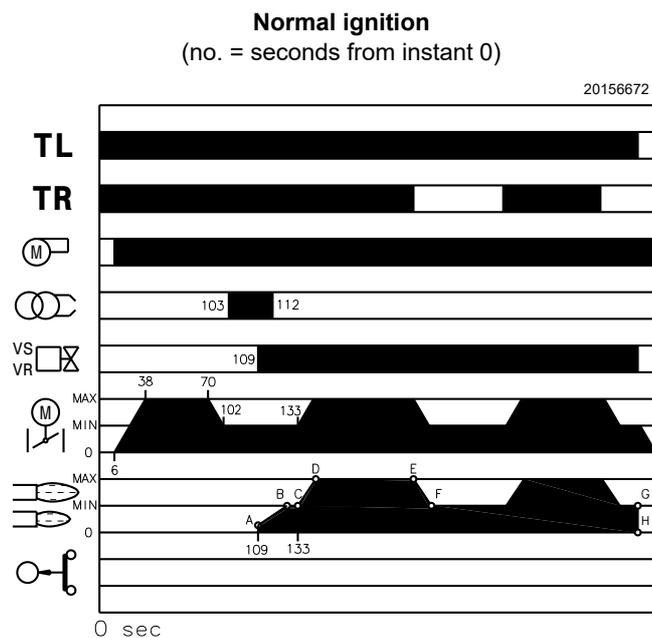


Fig. 41

6.12.2 Operation

Burner without the RWF ... output power regulator

Once the starting cycle is completed, the servomotor command moves on to the TR thermostat/pressure switch that controls the pressure or the temperature in the boiler, point C (Fig. 41). (The electrical control box continues to check the presence of the flame and the correct position of the air and gas maximum pressure switches).

- If the temperature or the pressure is low so the thermostat/pressure switch TR is closed, the burner progressively increases the output up to the MAX value (section C-D).
- If subsequently the temperature or pressure increases until TR opens, the burner progressively decreases its output to the MIN value (section E-F). The sequence repeats endlessly.
- The burner locks out when the heat request is less than the heat supplied by the burner at MIN output, (section G-H). The TL thermostat/pressure switch opens, and the servomotor returns to angle 0° limited by the contact of cam 2). The air damper closes completely to reduce heat losses to a minimum.

With each change of output, the servomotor automatically modifies the gas output (butterfly valve) and the air flow rate (fan damper).

Burner with the RWF ... output power regulator

See manual enclosed with the adjuster.

6.12.3 Burner flame goes out during operation

If the flame should accidentally go out during operation, the burner will lock out within 1s.

Ignition failure

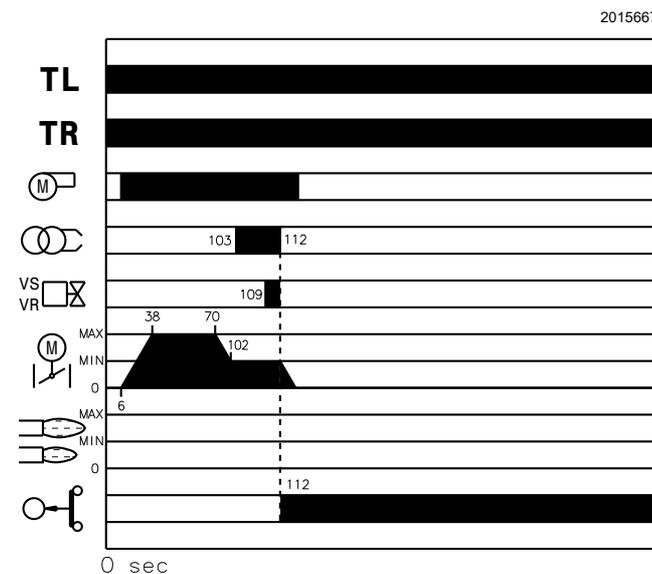


Fig. 42

6.12.4 Ignition failure

If the burner does not fire (Fig. 42), it goes into lockout within 3 sec. after the gas valve opens, 112 seconds after the control device TL closes and the pre-purging phase starts and lasts 17 seconds.

6.12.5 Control box reset

To carry out the control box reset, proceed as follows:

- Press the reset button 2)(Fig. 5 on page 14).

6.13 Operation sequence of the burner (light oil)

6.13.1 Burner start-up

- 0s** TL thermostat/pressure switch closure.
- 6s** Fan motor start. Pump motor start.
Servomotor starts: rotates 90° towards the right, i.e. until the intervention of the contact on the cam 6)
- 38s** The air damper is positioned to MAX output.
- 38s** Pre-purging phase with air delivery of the MAX output. Duration 32 seconds.
- 70s** The servomotor rotates left up to the angle set on the cam 4).
- 102s** The air damper and the light oil eccentric set to MIN output (with cam 4).
- 103s** Ignition electrode strikes a spark.
- 109s** The oil valves open.
The flame is ignited at a low output level, to the MIN output, point A (Fig. 43).
- 112s** The spark goes out.
- 133s** The starting cycle ends.

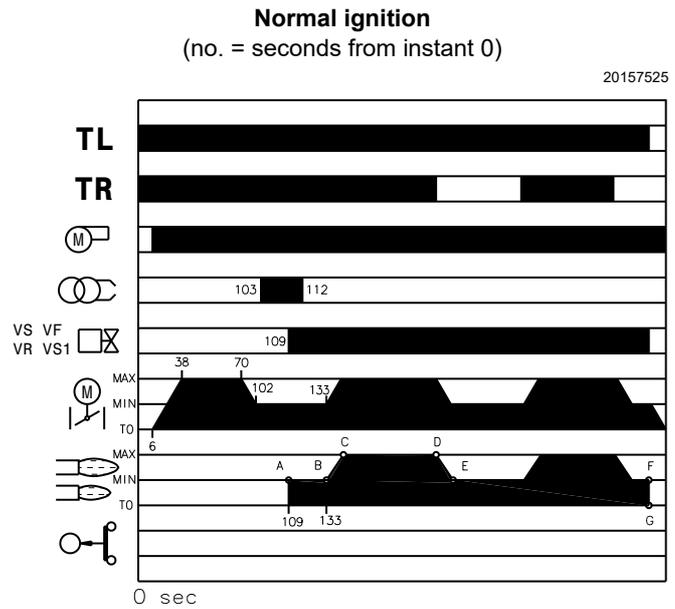


Fig. 43

6.13.2 Operation

Burner without the RWF ... output power regulator

Once the starting cycle is completed, the servomotor command moves on to the TR thermostat/pressure switch that controls the pressure or the temperature in the boiler, point B (Fig. 43). (The electrical control box continues to check the presence of the flame and the correct position of the air and gas maximum pressure switches).

- If the temperature or the pressure is low so the thermostat/pressure switch TR is closed, the burner progressively increases the output up to the MAX value (section B-C).
- If subsequently the temperature or pressure increases until TR opens, the burner progressively decreases its output to the MIN value (section D-E). The sequence repeats endlessly.
- The burner locks out when the heat request is less than the heat supplied by the burner at MIN output, (section F-G). The TL thermostat/pressure switch opens, and the servomotor returns to angle 0° limited by the contact of cam 2). The air damper closes completely to reduce heat losses to a minimum.

With each change of output, the servomotor automatically modifies the light oil output (using the eccentric) and the air flow rate (fan damper).

Burner with the RWF ... output power regulator

See manual enclosed with the adjuster.

6.13.3 Burner flame goes out during operation

If the flame should accidentally go out during operation, the burner will lock out within 1s.

Ignition failure

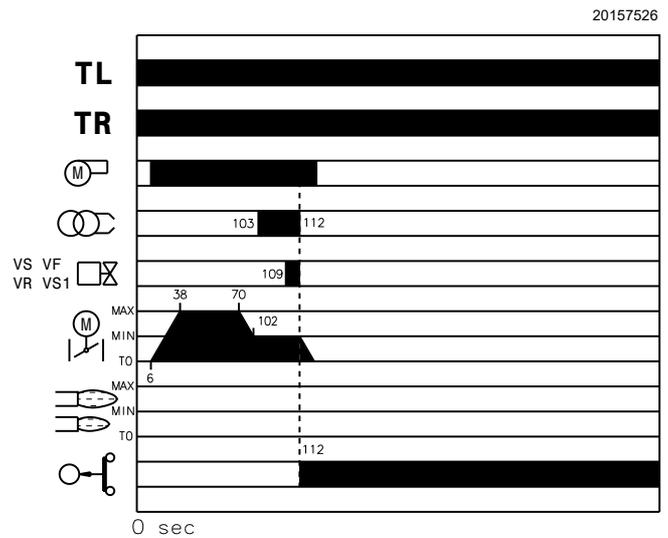


Fig. 44

6.13.4 Ignition failure

If the burner does not fire (Fig. 44), it goes into lockout within 3 sec. after the gas valve opens, 112 seconds after the control device TL closes and the pre-purging phase starts and lasts 17 seconds.

6.13.5 Control box reset

To carry out the control box reset, proceed as follows:

- Press the reset button 2) (Fig. 5 on page 14).

6.14 Final checks (with burner operating)

<ul style="list-style-type: none"> ➤ Open the thermostat/pressure switch TL ➤ Open the thermostat/pressure switch TS 		The burner must stop
<ul style="list-style-type: none"> ➤ Turn the knob of the gas maximum pressure switch to the minimum end of scale position ➤ Turn the air pressure switch to the maximum end of scale position 		The burner must stop in lockout
<ul style="list-style-type: none"> ➤ Turn off the burner and cut off the power ➤ Disconnect the minimum gas pressure switch connector 		The burner must not start
<ul style="list-style-type: none"> ➤ Disconnect the sensor for the flame detection 		The burner must stop in lockout due to ignition failure
<ul style="list-style-type: none"> ➤ Obscure the flame sensor 		The burner must stop in lockout due to ignition failure
<ul style="list-style-type: none"> ➤ Turn off the burner and cut off the power ➤ Disconnect the maximum gas pressure switch connector 		The burner must not start
<ul style="list-style-type: none"> ➤ Turn off the burner and cut off the power ➤ Disconnect the minimum oil pressure switch connector 		The burner goes into lockout because the oil valves do not open

Tab. N



Make sure that the mechanical locking systems on the various adjustment devices are fully tightened.

7 Maintenance

7.1 Notes on safety for the maintenance

The periodic maintenance is essential for the good operation, safety, yield and duration of the burner.

It allows you to reduce consumption and polluting emissions and to keep the product in a reliable state over time.



The maintenance interventions and the calibration of the burner must only be carried out by qualified, authorised personnel, in accordance with the contents of this manual and in compliance with the standards and regulations of current laws.

Before carrying out any maintenance, cleaning or checking operations:



Turn off the burner's power supply using the main system switch.



Turn off the fuel interception tap.

7.2 Maintenance programme

7.2.1 Maintenance frequency

The gas combustion system should be checked at least once a year by a representative of the manufacturer or another specialised technician.

7.2.2 Safety test - with gas feeding closed

For its safe commissioning it is very important to make sure that the electrical wiring has been carried out correctly between the gas valves and the burner.

To this end, after checking that the connections have been made in conformity with the burner's wiring diagram, a starting cycle should be carried out with the gas tap closed (dry test).

- 1 The manual gas valve should be closed with the locking/releasing device ("lock-out / tag out" procedure).
- 2 Make sure the limit electric contacts of the burner close
- 3 Make sure the contact of the minimum gas pressure switch closes
- 4 Proceed with a tentative start up of the burner.

The starting cycle should occur with the following phases:

- Starting the fan motor for pre-purging
- Carrying out the gas valve leak detection control, if applicable
- Completing the pre-purging
- Reaching the ignition point
- Power supply of the ignition transformer
- Power supply the gas valves.

Since the gas is closed, the burner will not be able to start and its control box will stop or go into a safety lockout.

The effective supplying of the gas valves can be checked with the insertion of a tester; some valves are fitted with light signals (or closure/opening position indicators) that are activated when the electrical supply arrives.



IF THE ELECTRICAL SUPPLY OF THE GAS VALVES OCCURS AT AN UNEXPECTED MOMENT, DO NOT OPEN THE MANUAL VALVE, DISCONNECT THE ELECTRICAL SUPPLY, CHECK THE WIRING; CORRECT THE ERRORS AND CARRY OUT THE ENTIRE TEST AGAIN.

7.2.3 Checking and cleaning



The operator must use the required equipment during maintenance.

Combustion

The optimum calibration of the burner requires an analysis of the flue gases.

Significant differences with respect to the previous measurements indicate the points where most care should be exercised during maintenance.

Combustion head

Open the burner and make sure that all components of the combustion head are in good condition, not deformed by the high temperatures, free of impurities from the surroundings and correctly positioned.

Burner

Check that there is no excess wear or loose screws, especially on cams 1) and 2)(Fig. 35).

Clean the outside of the burner.

Clean and grease the adjustable profile of the cams.

Fan

Check to make sure that no dust has accumulated inside the fan or on its blades, as this condition will cause: a reduction in the air flow rate and provoke polluting combustion.

Boiler

Clean the boiler as indicated in its accompanying instructions in order to maintain all the original combustion characteristics intact, especially: the flue gas temperature and combustion chamber pressure.

Flame presence check

Check the level of the flame detection signal with the “Check mode” function from the flame control: the LEDs from 2 to 6 indicate the flame signal level, respectively. See “LED indicator and special function” on page 46.

Check Mode

With burner flame on:

- hold the reset button on the flame control pressed for at least 3 sec.;
- the button colour will change from green to yellow;
- each operating status signalling LED will be compared to 20% of the maximum brightness;
- press the reset button again (<0.5sec) to reset the standard operation of the signalling LEDs.Boiler

Clean the boiler as indicated in its accompanying instructions in order to maintain all the original combustion characteristics intact, especially the flue gas temperature and combustion chamber pressure.

7.2.4 Safety components

The safety components should be replaced at the end of their life cycle indicated in the following table.



The specified life cycles do not refer to the warranty terms indicated in the delivery or payment conditions.

Safety component	Life cycle
Flame control	10 years or 250,000 operation cycles
Flame sensor	10 years or 250,000 operation cycles
Gas valves (solenoid)	10 years or 250,000 operation cycles
Pressure switches	10 years or 250,000 operation cycles
Pressure adjuster	15 years
Servomotor (electronic cam) (if present)	10 years or 250,000 operation cycles
Oil valve (solenoid) (if present)	10 years or 250,000 operation cycles
Oil regulator (if present)	10 years or 250,000 operation cycles
Oil pipes/ couplings (metallic)(if present)	10 years
Flexible hoses (if present)	5 years or 30,000 pressurised cycles
Fan impeller	10 years or 500,000 start-ups

Tab. O

LIGHT OIL OPERATION

Pump

The delivery pressure must be stable at 20 bar.

The depression must be less than 0.45 bar.

Unusual noise must not be evident during pump operation.

If the pressure is unstable, or the pump runs noisily, the flexible hose must be detached from the line filter and the fuel must be sucked from a tank located near the burner. This measure permits the cause of the anomaly to be traced to either the suction piping or the pump.

If the problem lies in the suction line, check the filter is clean and that air is not entering the piping.

Filters (Fig. 45)

Check the filtering baskets on line 1) and at nozzle 2) present in the system.

Clean or replace if necessary.

If rust or other impurities are observed inside the pump, use a separate pump to lift any water and other impurities that may have deposited on the bottom of the tank.

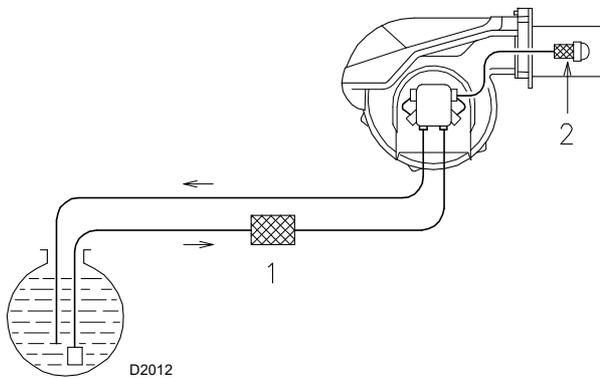


Fig. 45

Nozzles

It is advisable to replace nozzles once a year during periodical maintenance.

Do not clean the nozzle openings.

Hoses

Check that these are in good conditions.

Fuel tank

Approximately every 5 years, suck any water on the bottom of the tank using a separate pump.

Combustion

In case the combustion values found at the beginning of the intervention do not respect the standards in force or, in any case, do not correspond to a proper combustion, contact the Technical Assistance Service in order to carry out the necessary adjustments.

EN 267	Air excess		
	Max. output. $\lambda \leq 1.2$		Min. output $\lambda \leq 1.3$
Theoretical max CO ₂ 0 % O ₂	CO ₂ % Calibration		CO mg/kWh
	$\lambda = 1.2$	$\lambda = 1.3$	
15.2	12.6	11.5	≤ 100

GAS OPERATION

Gas leaks

Make sure that there are no gas leaks on the pipe between the gas meter and the burner.

Gas filter

Change the gas filter when it is dirty.

Combustion

In case the combustion values found at the beginning of the intervention do not respect the standards in force or, in any case, do not correspond to a proper combustion, contact the Technical Assistance Service in order to carry out the necessary adjustments.

EN 676	Theoretical max CO ₂ 0 % O ₂	Air excess		
		Max. output. $\lambda \leq 1.2$		Min. output $\lambda \leq 1.3$
GAS		Calibration CO ₂ %		CO mg/kWh
		$\lambda = 1.2$	$\lambda = 1.3$	
G 20	11.7	9.7	9.0	≤ 100
G 25	11.5	9.5	8.8	≤ 100
G 30	14.0	11.6	10.7	≤ 100
G 31	13.7	11.4	10.5	≤ 100

7.3 Opening the burner



Disconnect the burner from the electrical supply.

The burner leaves the factory set for opening to the right, therefore maintaining the pin 1)(Fig. 15) in its housing.

To open the burner towards the right, proceed as follows:

- A** remove the screw 6) releasing the tie-rod 7)(Fig. 15);
- B** remove the screws 2);
- C** open the burner to a maximum of 100-150 mm by rotating around the hinge and release the cables of the electrodes 5);

- D** fully open the burner as in Fig. 15;
- E** undo the screw 4) with pressure test point;
- F** disconnect the light oil pipes by unscrewing the two swivel fittings 8);
- G** release the head by lifting it from its housing 3), then take out the combustion head.



To open the burner from the opposite side, before removing the pin 1)(Fig. 15), make sure that the 4 screws 2) are tight. Then shift the pin 1) to the opposite side, only then is it possible to remove the screws 2); then proceed as described in point C.

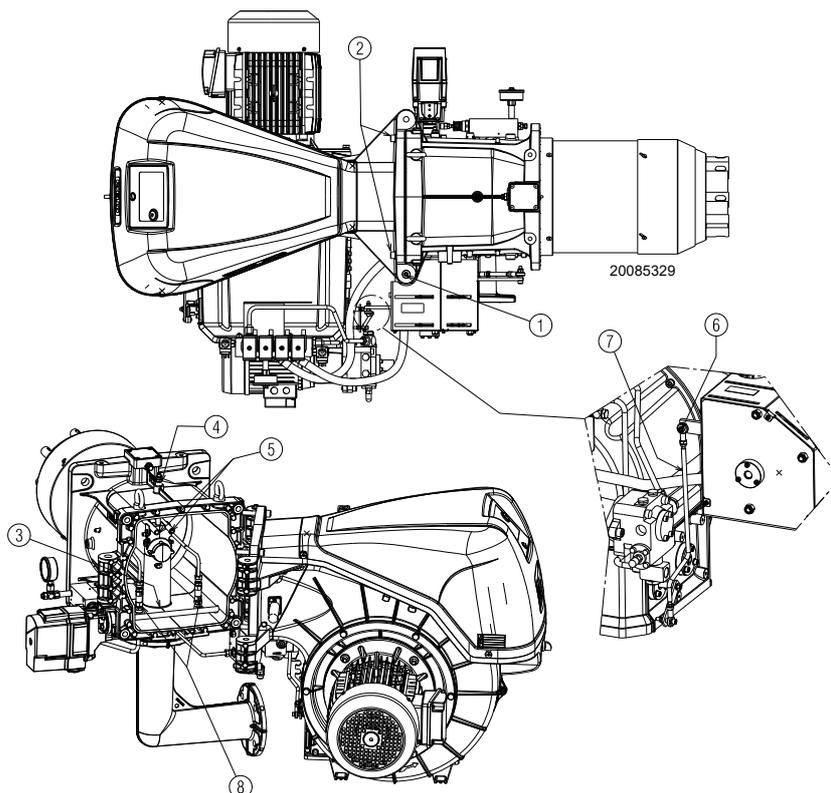


Fig. 46

7.4 Closing the burner




Refit following the steps described but in reverse order; refit all burner components as they were originally assembled.



After carrying out maintenance, cleaning or checking operations, reassemble the cover and all the safety and protection devices of the burner.

8 LED indicator and special function

8.1 Description of LED lamps

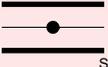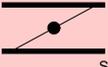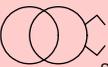 S9740	Fan	It turns on when the fan motor is powered (T6) and blinks when RUN/CHECK switch is set to "CHECK" during damper movement phases, PTFI AND MTFI.
 S9741	Open damper	It blinks when the air damper is moving towards the maximum opening position until the position-reached feedback sent by the servomotor is received, then it stays steadily on for the time set by the flame control.
 S9742	Closed damper	If blinks when the air damper is moving towards the minimum opening position until the position-reached feedback sent by the servomotor is received, then it stays steadily on until the end of the pre-purging time.
 S9743	Auto	It indicates that the burner is ready for the output modulation.
 S9744	Ignition	It blinks during the ignition phase (1st safety time) and stays steadily on during the MTFI.
	Flame	It blinks during the first safety time and stays steadily on if the flame detection has been correctly performed.
 S9746	Alarm	It turns on in red when a lock-out condition occurs. Together with the other indicators, it indicates the type of fault during the lock-out phase. Together with the other LEDs, it indicates the operating status during the normal cycle.

Tab. P

- T = Terminal
- PTFI = Pilot ignition attempt
- MTFI = Ignition attempt with main fuel valve

8.2 Check mode function

By the reset push button on the main panel of the control flame the check mode functions are available (prepurging, ignition, 1st safety time and 2nd safety time).

The CHECK MODE is designed to facilitate the checking of the working phase of the burner.

This function is particularly useful during the burner first commissioning or during maintenance.

To enable the check mode function:

- keep the reset button pressed, see chapter 8 for more details, for at least 3 seconds, the status LED changes from green to yellow to signal that the control device is in check mode;
- the control device locks out during pre-purging, after a timeout of max 30 minutes the flame control will automatically exit the check mode function;




- check mode has a 2 minute timeout during the 2nd safety time. When the time out is expired, the flame control goes back to the normal operating status;
- check mode has a 2 minute timeout during the MTFI status. When the time out is expired, the flame control goes back to the normal operating status;
- during the check mode 1st or 2nd safety time, the flame signal level can be indicated by the 5 central LEDS on the flame control central panel, which turn on proportionally. Each lit LED (starting from the flame LED) represents 20% of the signal power.
To exit the check mode function, press the reset button; the flame control will go back to the normal operating mode.

8.3 Flame control lock-out or emergency stop condition

The RFGO control device can be locked (emergency stop) at any time during the operating cycle and unlocked when already locked (lock-out) by simply pressing the key on the front panel or by means of the terminal T21 on the support base.

8.4 LED lamps: burner operating status

OPERATING STATUSES INDICATED BY LEDS DURING NORMAL OPERATION AND CHECK MODE

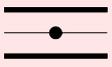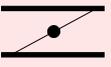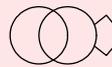Operation LED ● = ON	Fan	Open damper	Closed damper	Modulation	Ignition	Flame	Status
Icon	 S9740	 S9741	 S9742	 S9743	 S9744	 S9745	 S9746
Power OFF/ON							OFF
Not ready/ Diagnostics							Green
Standby			●				Green
Servomotor movement (Note 3)	●	OFF Flashing ↔ Flashing ●	●				Green
Waiting for closing	Green blinking						Green
OPEN (before ignition)	●	●					Green
Minimum (before ignition)	●		●				Green
Ignition	●		●		●		Green
PTFI	●		●		●	Green blinking	Green
MTFI	●		●			●	Green
Active modulation	●			●		●	Green
Minimum output position	●		●			●	Green
With flame present	●	●				●	Green
Economy mode	●		●				Green
Check during maximum opening phase	Flashing	●					Yellow
Check during minimum closing phase	Flashing		●				Yellow
Check during ignition phase with pilot PTFI	Flashing	● Note 1	● Note 1	● Note 1	● Note 1	● Note 1	Yellow
Check during ignition phase with main fuel valve MTFI	Flashing	● Note 1	● Note 1	● Note 1	● Note 1	● Note 1	Yellow
Fault/lock-out	● Note 2	● Note 2	Red				
End of the cycle	●		●	●			Green

Tab. Q

1. LEDs form a progress bar which indicates the Flame Signal Power in order to orientate the sensors during commissioning (LEDs "Grow" upwards, moving away from the Status at 20% intervals of flame power.)
2. LEDs indicate the error or lock-out code for troubleshooting.
- 3°. LEDs change from ON to BLINKING to OFF showing the servomotor movement control until the position-reached feedback is received See "Problems - Causes - Remedies signalled by LED indicators" on page 48."

9 Problems - Causes - Remedies signalled by LED indicators

When an emergency stop occurs, the control device LEDs indicate the cause of the stop.
 The terminal T3 is not powered.
 The device operating status is internally memorised in case of lack of power supply.

The device lock-out condition can be caused by pressing (<1sec.) the reset button on the flame control front side or through the remote reset - terminal T21 on the base.
 The reset button is very sensitive, do not press it strongly during the reset operation.

Unlocking the control device

The RFGO control device can be reset in two ways: reset button and remote reset terminal.

The remote reset must be a normally open connected button between T21 and flame control power supply voltage (see illustrative diagrams):

- the reset is performed when a faulty condition is detected by the flame control.
- Press the reset button to reset the system after a lock-out.
- Pressing the reset button during operation will cause an emergency stop.
- The reset or emergency stop condition can be obtained also by using the remote reset with the same modalities.
- The number of reset attempts is limited to a maximum of 5 within 15 minutes.

Error / RFGO LED lock-out Codes

During an alarm condition, the status LED becomes steady red. The remaining LEDs turn on according to a coded sequence which identifies the lock-out cause.

The following table shows the different LED Lock-out codes.



The device described in this manual can cause material problems, severe injuries or death.

It is the owner or user's responsibility to make sure that the equipment described is installed, used and commissioned in compliance with the requirements provided both by national and local law. The lock-out condition indicates the presence of a fault which occurred during the operating cycle or during stand-by mode.

Before performing an unlock attempt, it is necessary to restore the original optimal operating conditions.



Thermal unit's operation, maintenance and troubleshooting interventions must be carried out by trained personnel.

The persons who solve lock-out problems or reset the control device must observe the error codes to solve the problems described in this product technical data sheet.

It is not admitted to tamper with or act on the system or control in a way that could compromise the product safety or warranty.

Any tests on safety devices or on loads, such as fan motor, valves, igniter, flame sensors, must be performed with the shut-off valves closed and by qualified personnel.

Do not by-pass nor exclude the safety devices connected to the flame control.

Failure to observe these guidelines will exclude any liability.






The regulation prohibits the system from allowing more than 5 remote reset attempts within a 15 minute time window.

If more than 5 attempts are performed without solving the lock-out, the system will prevent the user to perform further remote resets and force him/her to wait for the 15 minutes to elapse.

The remote reset operation will be restored at the end of the waiting time.

It is recommended that qualified personnel evaluate the lock-out condition and implement the solution which is suitable for the fault to be solved.

Error / RFGO LED lock-out codes

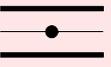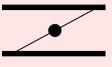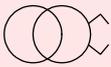No	Faults	LED 1	LED 2	LED 3	LED 4	LED 5	LED 6	LED 7
	Operation LED ● = ON	Fan	Open damper	Closed damper	Auto	Ignition	Flame	Status
	Icon	 S9740	 S9741	 S9742	 S9743	 S9744	 S9745	 S9746
1	Post-diagnostics fault	●						Red
2	Local reset		●					Red
3	Combustion air fan fault	●	●					Red
4	Supervisor processor diagnostics fault			●				Red
5	FR- NO Flame at the end of the 2 nd safety time (MTFI)	●		●				Red
6	FR: internal circuit fault		●	●				Red
7	Internal communication fault	●	●	●				Red
8	Remote reset				●			Red
9	FR: internal fault	●			●			Red
10	Main processor fault		●		●			Red
11	Data memory test fault	●	●		●			Red
12	Data memory test fault			●	●			Red
13	Mains voltage or frequent fault	●		●	●			Red
14	Internal processor fault		●	●	●			Red
15	Internal processor fault	●	●	●	●			Red
o. 16	No flame: 1 st safety time (PTFI)	●				●		Red
17	Wiring fault		●			●		Red
18	Safety relay fault	●	●			●		Red
19	Combustion airflow switch fault in the rest position			●		●		Red
20	UV: no flame at the end of the 2 nd safety time (MTFI)	●		●		●		Red
21	Safety relay fault		●	●		●		Red
22	Supervisor processor fault	●	●	●		●		Red
23	Supervisor memory test fault				●	●		Red
24	Flame loss during the operation (AUTO)	●			●	●		Red
25	Supervisor processor data memory fault		●		●	●		Red
26	Supervisor processor internal fault	●	●		●	●		Red
27	Not used							
28	Not used							
29	Operating temperature out of range		●	●	●	●		Red
30	Code memory fault	●	●	●	●	●		Red
31	FR: external short circuit						●	Red
32	Check mode timeout (manual)	●					●	Red
33	False flame in stand-by mode		●				●	Red
34	Not used							
35	Internal processor timeout			●			●	Red
36	Internal processor timeout	●		●			●	Red
37	Combustion air check timeout		●	●			●	Red
38	Internal processor timeout	●	●	●			●	Red
39	Internal processor timeout				●		●	Red
40	Internal hardware fault	●			●		●	Red
41	Internal hardware fault		●		●		●	Red
42	Main processor fault	●	●		●		●	Red
43	Supervisor processor fault			●	●		●	Red
44	Supervisor processor timeout	●		●	●		●	Red
45	Off-specification mains voltage		●	●	●		●	Red

No	Faults	LED 1	LED 2	LED 3	LED 4	LED 5	LED 6	LED 7
46	Off-specification mains voltage	•	•	•	•		•	Red
47	UV: Internal fault					•	•	Red
48	Supervisor processor fault	•				•	•	Red
49	Main processor fault		•			•	•	Red
50	Ignition feedback fault	•	•			•	•	Red
51	Pilot feedback fault			•		•	•	Red
52	Piloted valve feedback fault	•		•		•	•	Red
53	Actuator feedback waiting time expired		•	•		•	•	Red
54	Direct ignition valve feedback fault	•	•	•		•	•	Red
55	Internal processor fault				•	•	•	Red
56	UV: false flame during operation			•	•	•	•	Red
57	FR: false flame during operation	•		•	•	•	•	Red
58	T8 inlet fault		•	•	•	•	•	Red
59	Internal hardware fault	•			•	•	•	Red
60	Local reset fault	•	•	•	•	•	•	Red
61	Open POC fault		•		•	•	•	Red
62	UV: strong UV flame fault	•	•		•	•	•	Red
63	Internal hardware fault					•		Red

Tab. R

Fault explanation

No	Faults	Cause	Solution
1	Post-diagnostics fault	Initial power diagnostics fault Make sure that the status of inlets and outlets is correct upon ignition	Check T12, T13 and T14
2	Local reset	The user started the manual reset or the reset switch is faulty	Check T21 inlet or reset for normal operation
3	Combustion air fan fault	No Air Check signal (T14) during the bleed cycle or Air Check signal loss during the burner operation	Check the fan or the air pressure switch
4	Supervisor processor diagnostics fault	The system detected the presence of voltage on T16, T17, T18 or T19 at the wrong moment or there is no voltage when necessary	Check the wiring and make sure that the system is operating on a single-phase line (50/60Hz)
5	FR- No flame at the end of the 2 nd safety time (MTFI)	No flame at the end of the second safety time	Inspect the system, check the gas pressure, inspect the flame detection electrode, check the wiring, etc.
6	FR: internal circuit fault	Internal fault	Replace the control device
7	Internal communication fault	Internal fault	Replace the control device
8	Remote reset	The user pressed the remote reset button or the reset switch is discontinuous/dynamic	Check the remote switch
9	FR: internal fault	Internal fault	Replace the control device
10	Main processor fault	Internal fault	Replace the control device
11	Data memory test fault	Internal fault	Replace the control device
12	Data memory test fault	Internal fault	Replace the control device
13	Mains voltage or frequent fault	Off-specification power supply voltage and/or frequency	Check the input power supply
14	Internal processor fault	Internal fault	Replace the control device
15	Internal processor fault	Internal fault	Replace the control device
o. 16	No flame: 1 st safety time (PTFI)	No flame at the end of the first safety time	Inspect the system, check the gas pressure, check the UV scanner, check the wiring, etc.
17	Wiring fault	The system detected the presence of voltage on critical terminals (T16, T17, T18 or T19) at the wrong moment or there is no voltage when necessary	Inspect the wiring and make sure that the system is operating on a single-phase line (50/60Hz)
18	Safety relay fault	Internal fault	Replace the control device
19	Combustion airflow switch fault in the rest position	Open the circuit upon T13 start-up	Check the wiring for the air pressure switch
20	UV: no flame at the end of the 2 nd safety time (MTFI)	No flame at the end of the 2 nd safety time	Inspect the system, check the gas pressure, check the UV scanner, check the wiring, etc.
21	Safety relay fault	Internal fault	Replace the control device
22	Supervisor processor fault	Internal fault	Replace the control device
23	Supervisor memory test fault	Internal fault	Replace the control device
24	Flame loss during the operation (AUTO)	Loss of flame	Check the scanner or the fuel flow line
25	Supervisor processor data memory fault	Internal fault	Replace the control device
26	Supervisor processor internal fault	Internal fault	Replace the control device
27	Not used		
28	Not used		
29	Operating temperature out of range	Operating temperature below -40°C or above 70°C	Bring the control device within the specified temperature nominal values
30	Code memory fault	Internal fault	Replace the control device
31	FR: external short circuit	External short circuit between T24 and EARTH	Inspect the flame detection electrode
32	Check mode timeout (manual)	The interval for the manual mode (30 minutes) to end has elapsed	Exit the manual mode correctly to avoid timeout
33	False flame in stand-by mode	Unexpected flame (false or parasitic flame) detected during the Stand-by status	Check scanner or interference

No	Faults	Cause	Solution
34	Not used		
35	Internal processor timeout	Internal fault	Replace the control device
36	Internal processor timeout	Internal fault	Replace the control device
37	Combustion air check timeout	The system could not perform verification tests of the combustion air during the burner sequence	Check the wiring or the air pressure switch
38	Internal processor timeout	Internal fault	Replace the control device
39	Internal processor timeout	Internal fault	Replace the control device
40	Internal hardware fault	Internal fault	Replace the control device
41	Internal hardware fault	Internal fault	Replace the control device
42	Main processor fault	Internal fault	Replace the control device
43	Supervisor processor fault	Internal fault	Replace the control device
44	Supervisor processor timeout	Internal fault	Replace the control device
45	Off-specification mains voltage	Off-specification mains voltage/frequency	Check the mains voltage level or the frequency. Contact the factory if the problem persists
46	Off-specification mains voltage	Off-specification mains voltage/frequency	Check the mains voltage level or the frequency. Contact the factory if the problem persists
47	UV: Internal fault	Internal fault	Replace the control device
48	Supervisor processor fault	Internal fault	Replace the control device
49	Main processor fault	Internal fault	Replace the control device
50	Ignition feedback fault	The system detected the presence of voltage on T16 at the wrong moment or there is no voltage when necessary	Check the wiring and make sure that the earthing is appropriate If the problem persists, contact the distributor/factory
51	Pilot feedback fault	The system detected the presence of voltage on T17 at the wrong moment or there is no voltage when necessary	Check the wiring and make sure that the earthing is appropriate. If the problem persists, contact the distributor/factory
52	Piloted valve feedback fault	The system detected the presence of voltage on T19 at the wrong moment or there is no voltage when necessary	Check the wiring and make sure that the earthing is appropriate If the problem persists, contact the distributor/factory
53	Actuator feedback waiting time expired	No actuator feedback on T8 for more than 10 minutes	Check the wiring Check the modulation equipment
54	Direct ignition valve feedback fault	The system detected the presence of voltage on T18 at the wrong moment or there is no voltage when necessary	Check the wiring and make sure that the earthing is appropriate. If the problem persists, contact the distributor/factory
55	Internal processor fault	Internal fault	Replace the control device
56	UV: false flame during operation	False flame detected before ignition	Check the scanner
57	FR: false flame during operation	False flame detected before ignition	Check the wiring Check the scanner Make sure that earthing is appropriate
58	T8 inlet fault	The system detected the presence of voltage on T8 at the wrong moment or there is no voltage when necessary	Check the wiring Check the actuator
59	Internal hardware fault	Internal fault	Replace the control device
60	Local reset fault	Local reset button pressed for more than 10 seconds or reset button locked	If the problem persists, replace the control device
61	Open POC fault	The fuel valve is open at the wrong moment	Check the wiring
62	UV: strong UV flame fault	The scanner is too close to the flame	Increase the distance between the scanner and the flame OR use an orifice to reduce the view field
63	Internal hardware fault	Internal fault	Replace the control device

Tab. S

A Appendix - Accessories**Analogue control signal converter kit**

Burner	Type	Code
All models	0/2 - 10V 0/4 - 20mA	20074479

Kit for modulating operation

Burner	Output regulator	Code
All models	RWF 50.2 3-POINT OUTLET	20073595
All models	RWF 55.5 COMPLETE WITH RS-485 INTERFACE	20074441
All models	RWF 55.6 COMPLETE WITH INTERFACE RS-485/PROFIBUS	20074442

Burner	Probe	Adjustment field	Code
All models	PT 100 temperature	- 100...+ 500°C	3010110
All models	4 - 20 mA pressure	0...2.5 bar	3010213
All models	4 - 20 mA pressure	0...16 bar	3010214

Potentiometer kit

Burner	Code
All models	20096322

Continuous purging kit

Burner	Code
All models	20074542

Kit for remote fuel commutation

Burner	
All models	ON DEMAND

Soundproofing box kit

Burner	Type	dB(A)	Code
RLS 310 - 410/M MX	C7	10	3010376
RLS 510 - 610/M MX	C7 PLUS	10	20085111

Spacer kit

Burner	Code
All models	20008903


Gas trains in compliance with EN 676


Please refer to manual.

B Appendix - Electrical panel layout

1	Contents
2	Indication of references
3	Single line output diagram (RLS 310/M MX 230 V - Direct Start Up) Single line output diagram (RLS 310/M MX 400 V - Direct Start Up) Single line output diagram (RLS 410/M MX 230 V - Direct Start Up) Single line output diagram (RLS 410/M MX 400 V - Direct Start Up) Single line output diagram (RLS 310/M MX 400 V - Star/Triangle Start Up) Single line output diagram (RLS 410/M MX 400 V - Star/Triangle Start Up) Single line output diagram (RLS 510/M MX 400 V - Star/Triangle Start Up) Single line output diagram (RLS 610/M MX 400 V - Star/Triangle Start Up)
4	Functional layout (RLS 310-410/M MX 230/400 V - Direct Start Up) Functional layout star/triangle starter (RLS 310-410-510-610/M MX 400 V - Star/Triangle Start Up)
5	Functional layout RFGO-A22 (RLS 310-410/M MX 230/400 V - Direct Start Up) Functional layout RFGO-A22 (RLS 310-410-510-610/M MX 400 V - Star/Triangle Start Up)
6	Functional layout RFGO-A22
7	Functional layout RFGO-A22
8	Functional layout RFGO-A22
9	Electrical wiring Kit RWF50 internal
10	Electrical wirings that are the responsibility of the installer (RLS 310-410/M MX 230V - Direct Start Up) Electrical wirings that are the responsibility of the installer (RLS 310-410/M MX 400V - Direct Start Up) Electrical wirings that are the responsibility of the installer (RLS 310-410-510-610/M MX 400V - Star/triangle Start Up)
11	Electrical wiring that the installer is responsible for
12	Output power regulator inputs/outputs


2 Indication of references

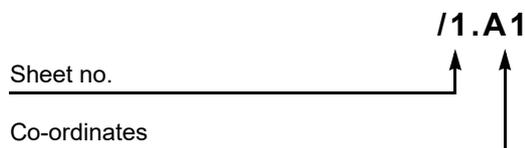


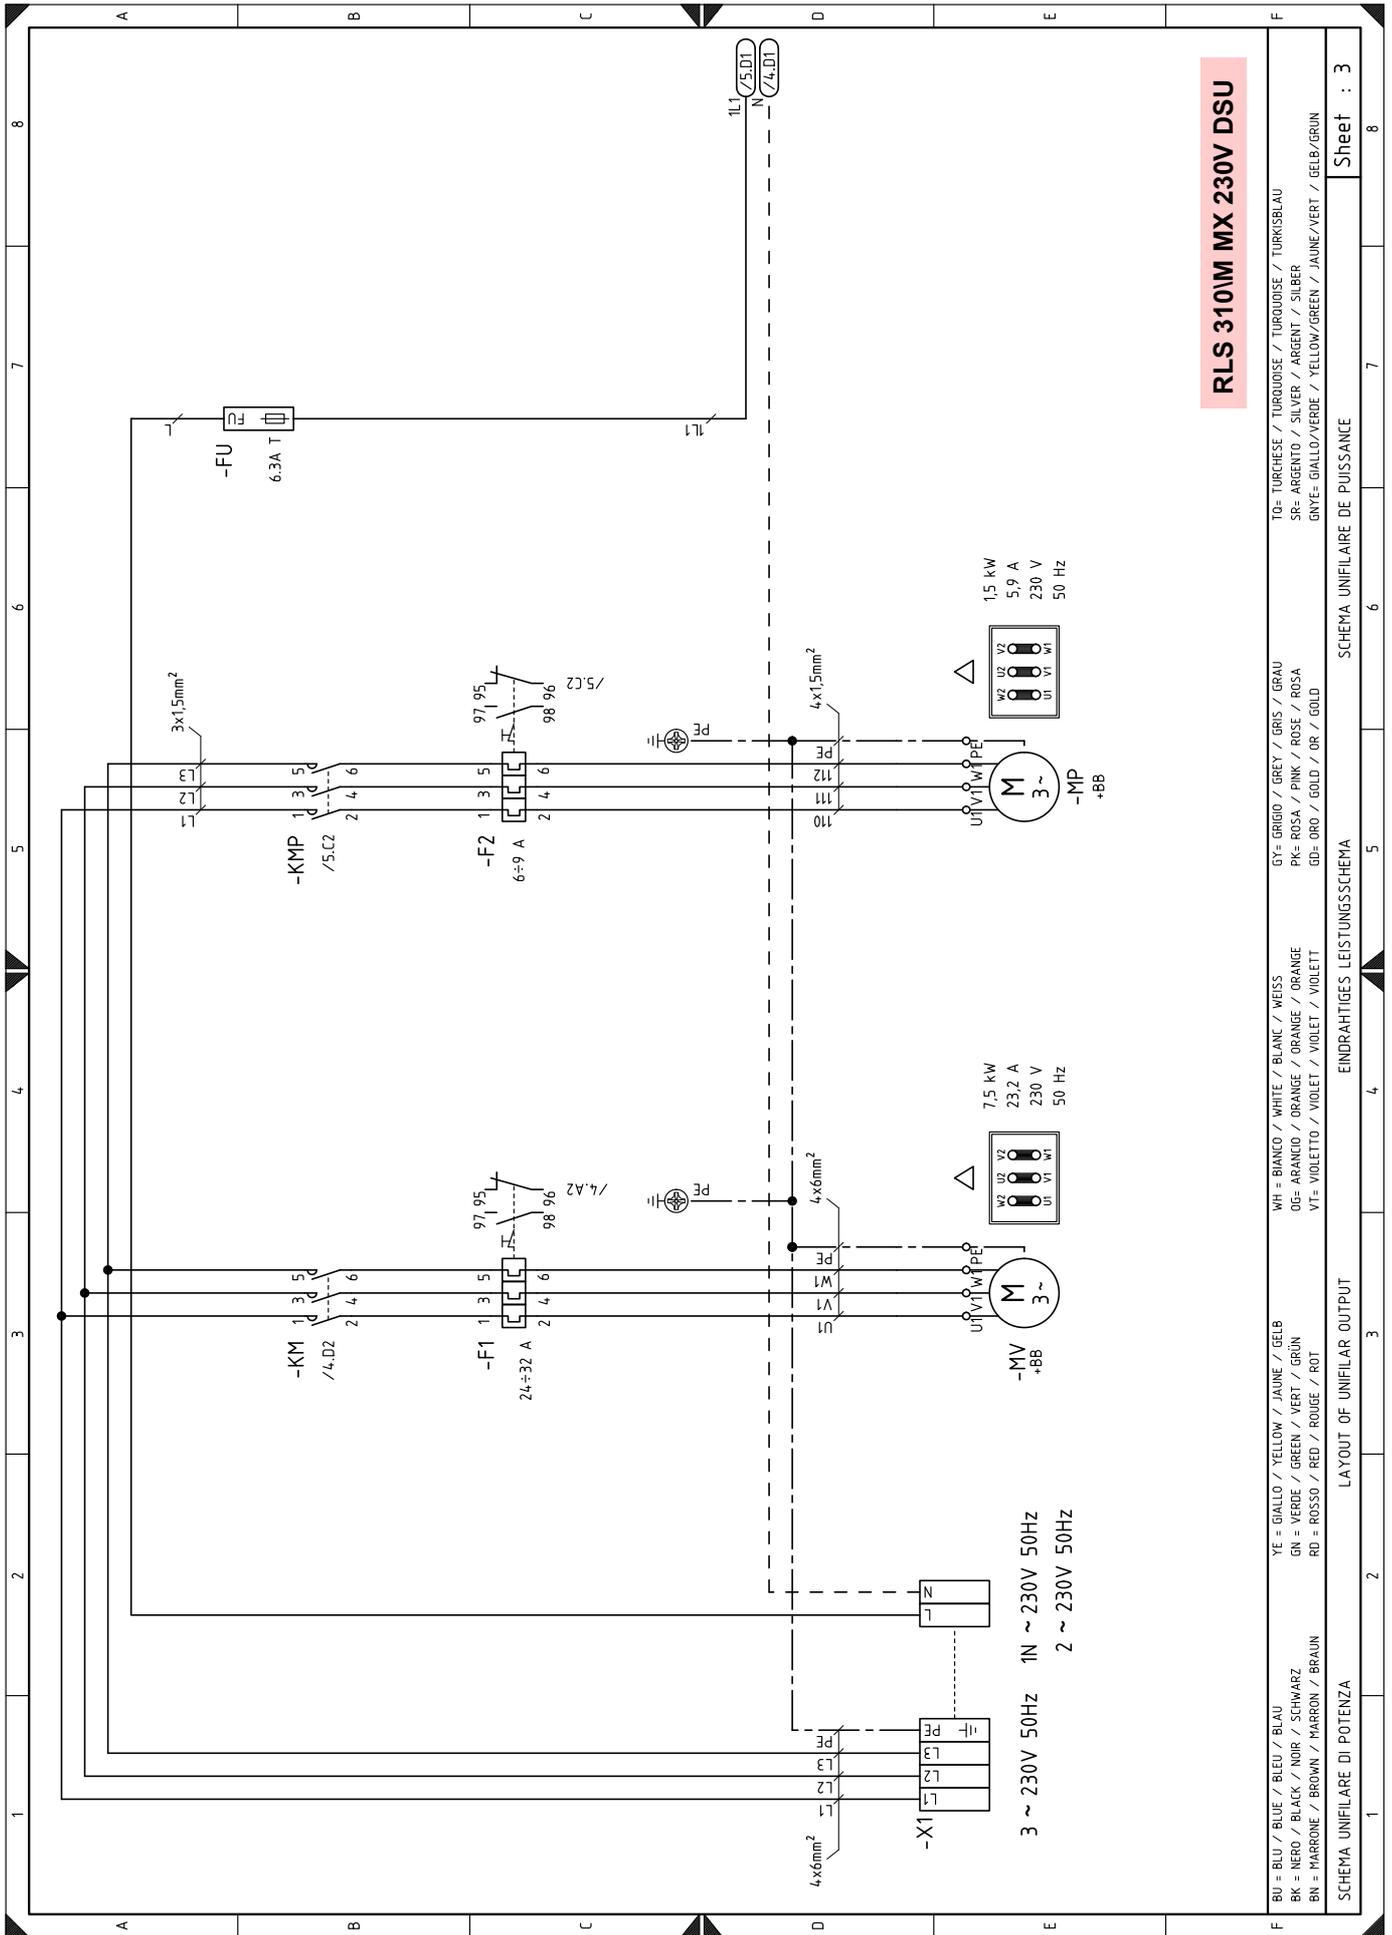



RLS 310IM MX 230V DSU

SCHEMA UNIFILARE DI POTENZA / SCHEMA UNIFILAIRE DE PUISSANCE / EINDRANTIGES LEISTUNGSSCHEMA / LAYOUT OF UNIFILAR OUTPUT

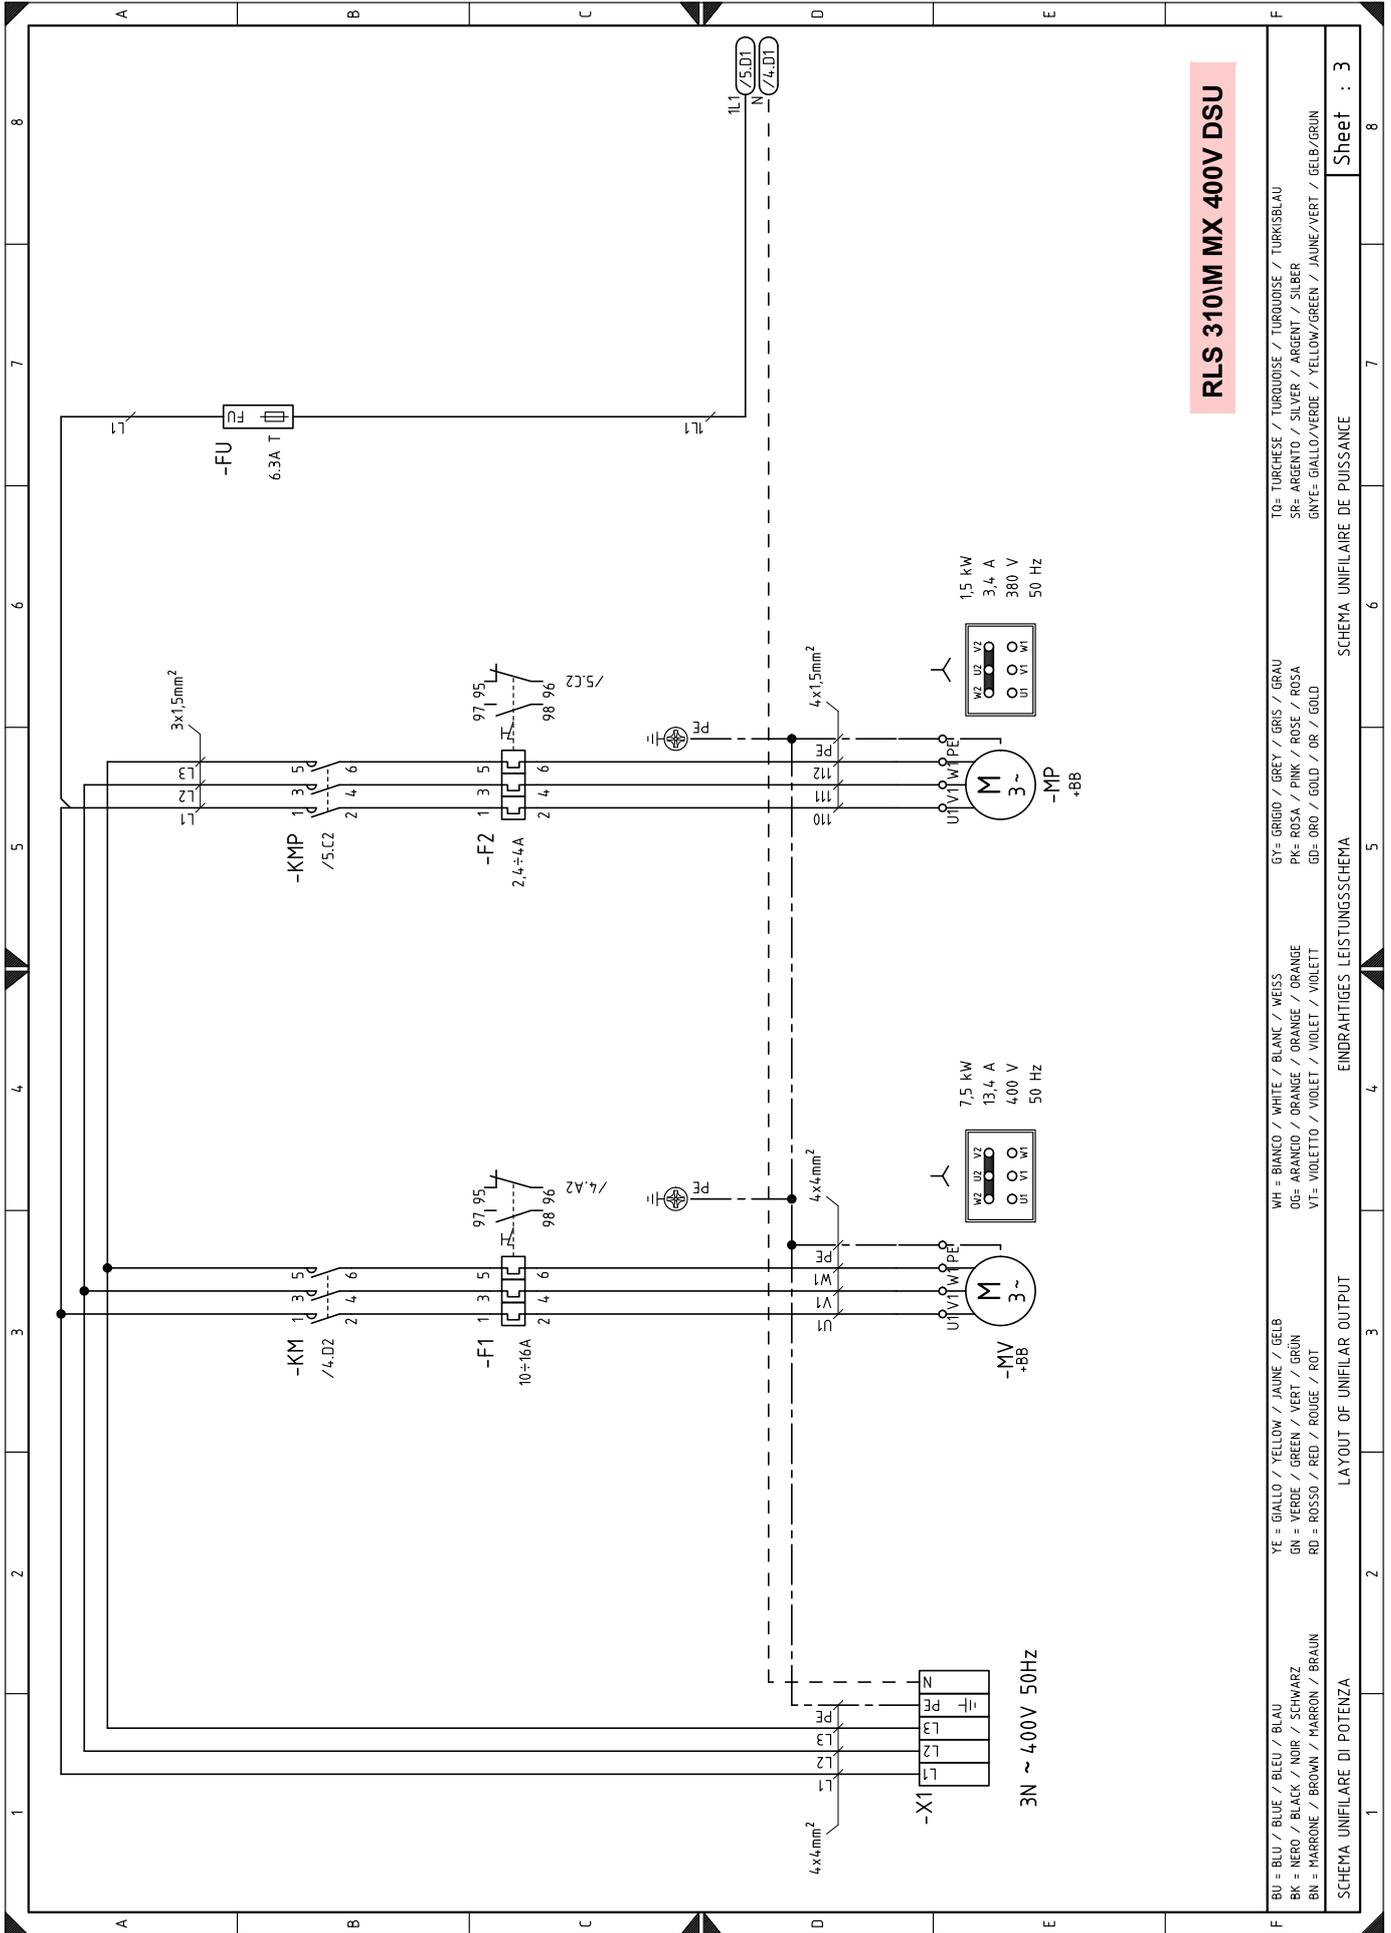

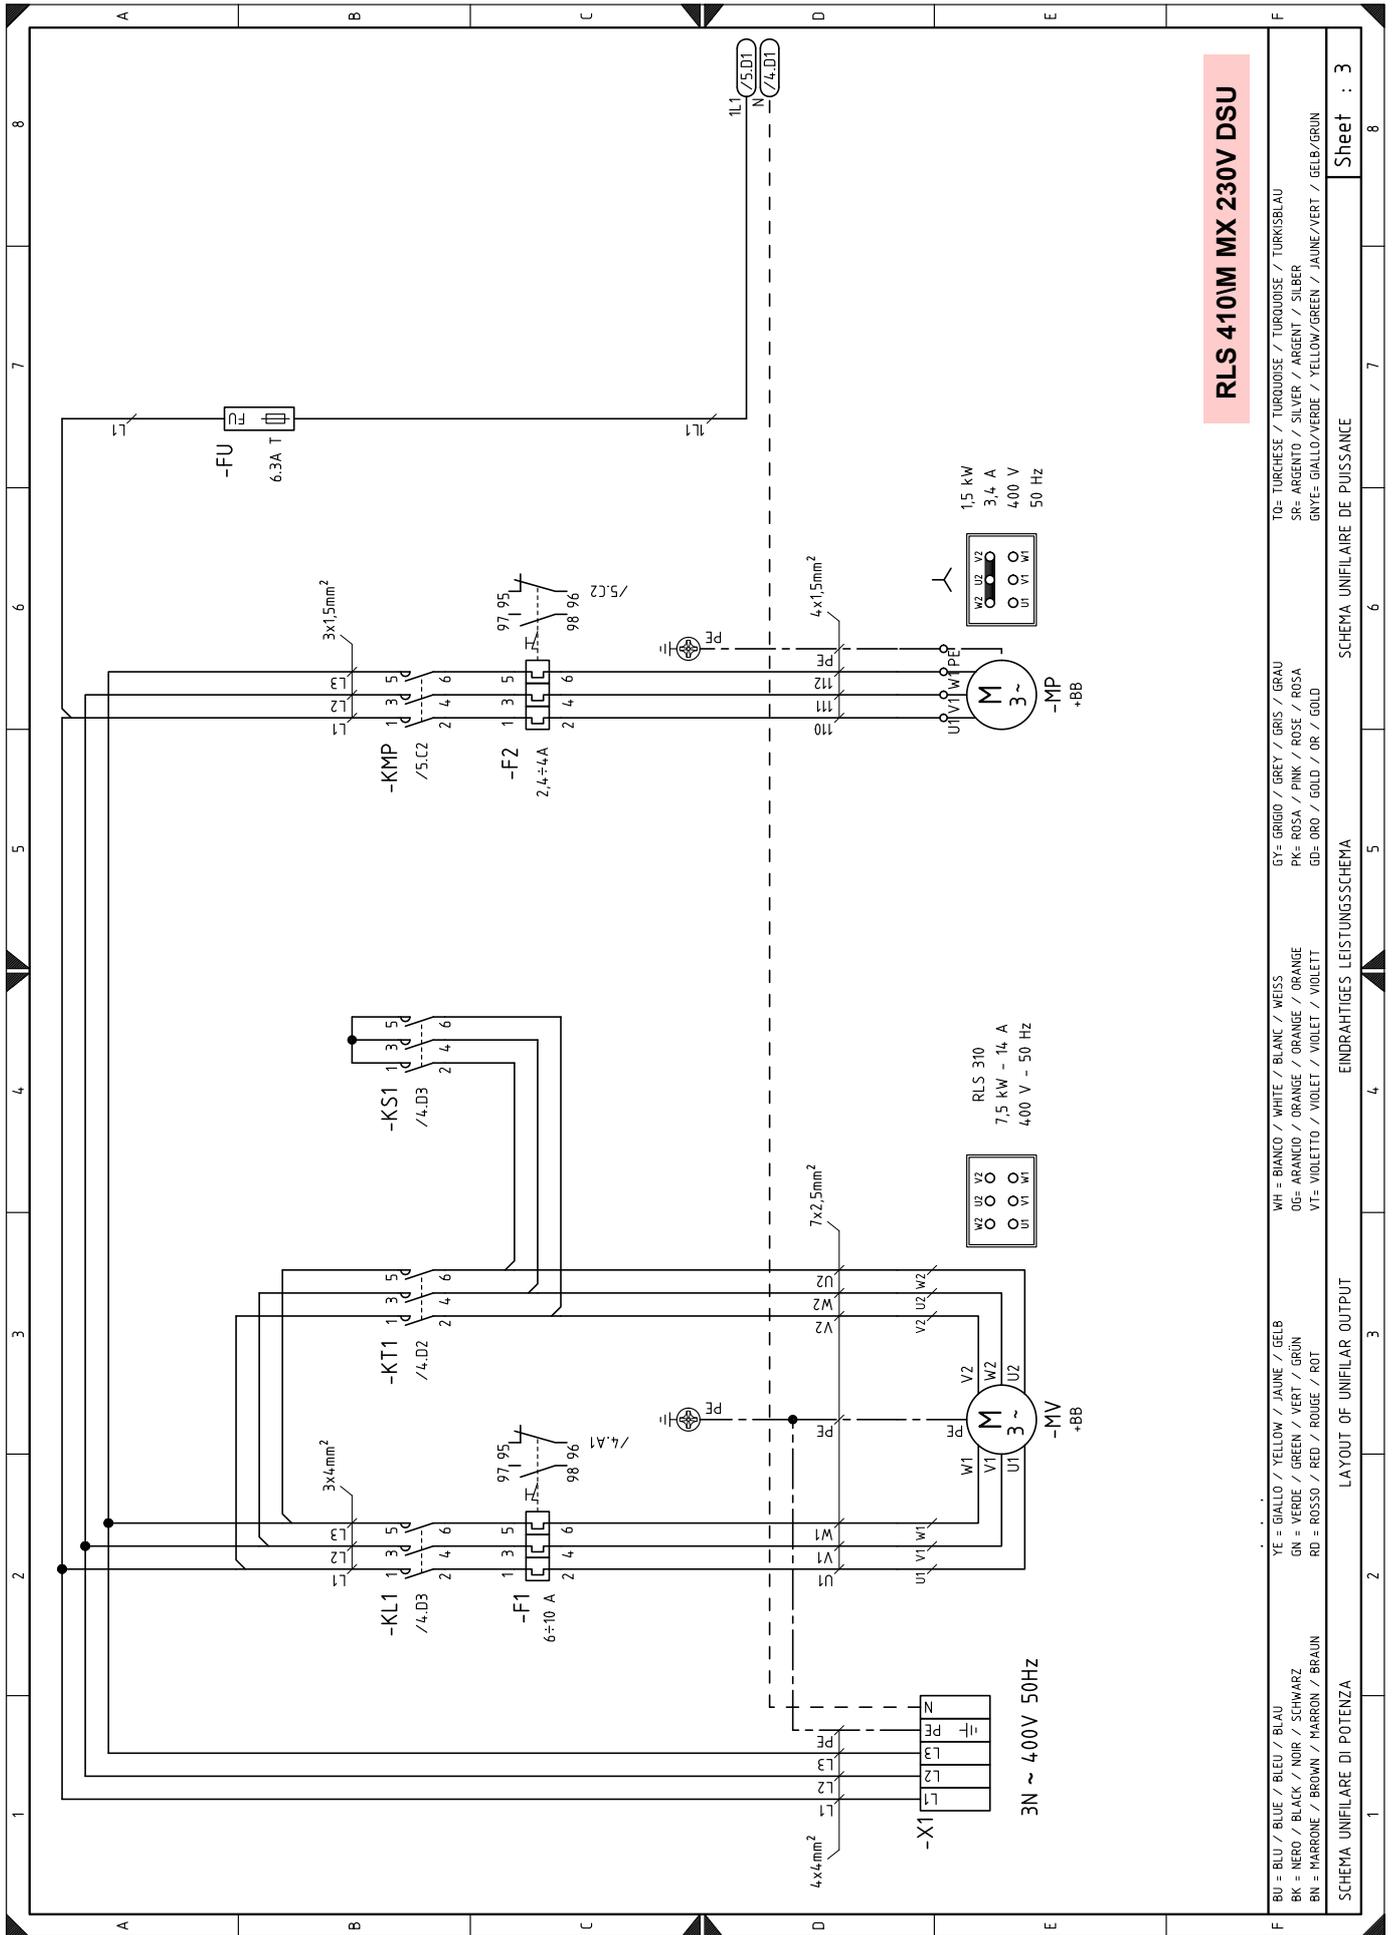

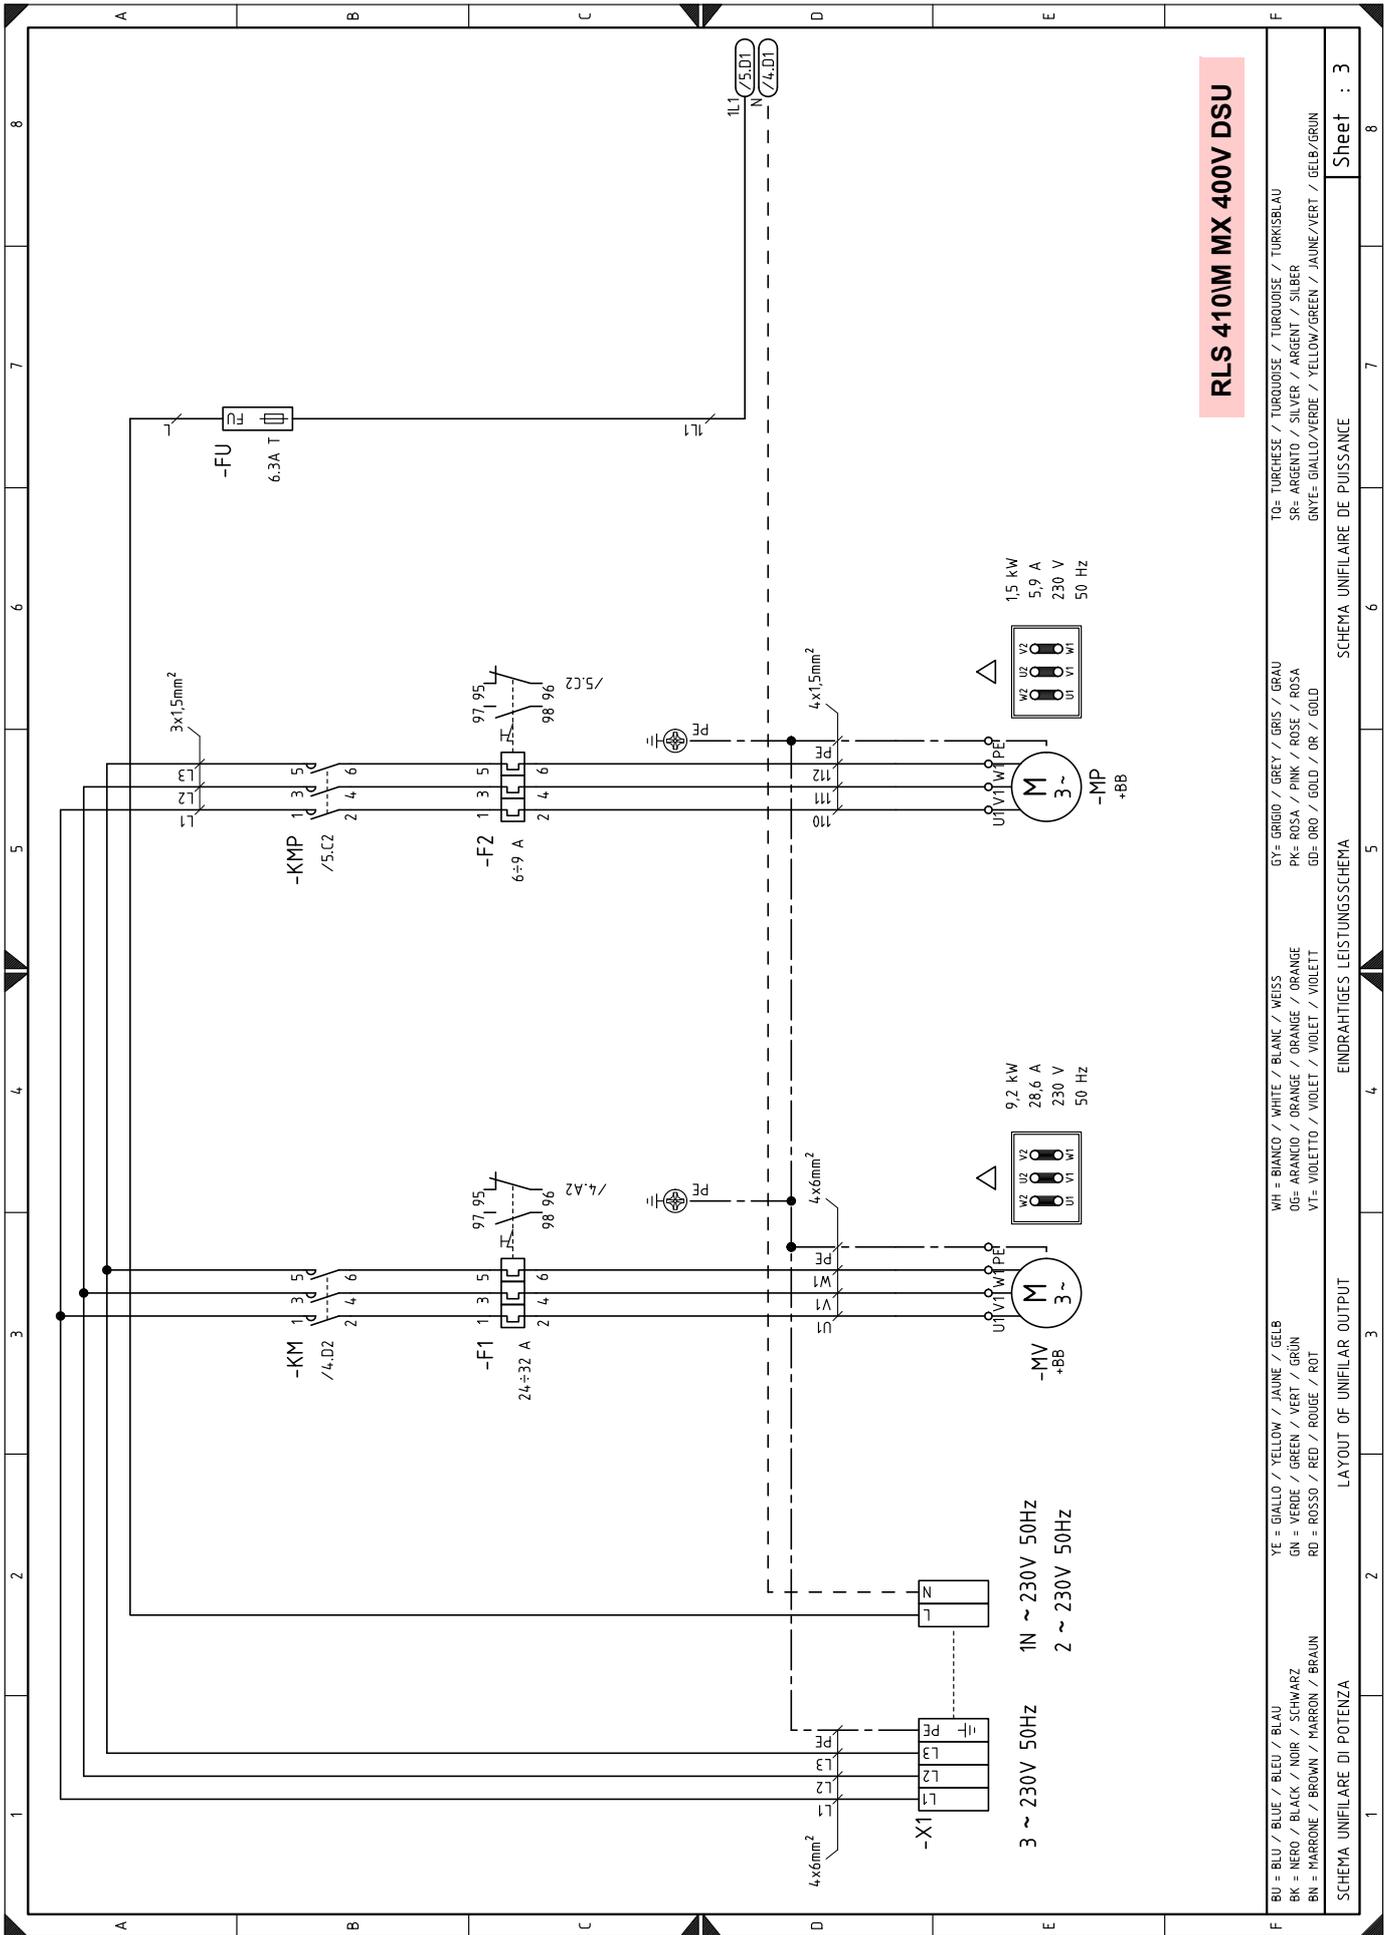

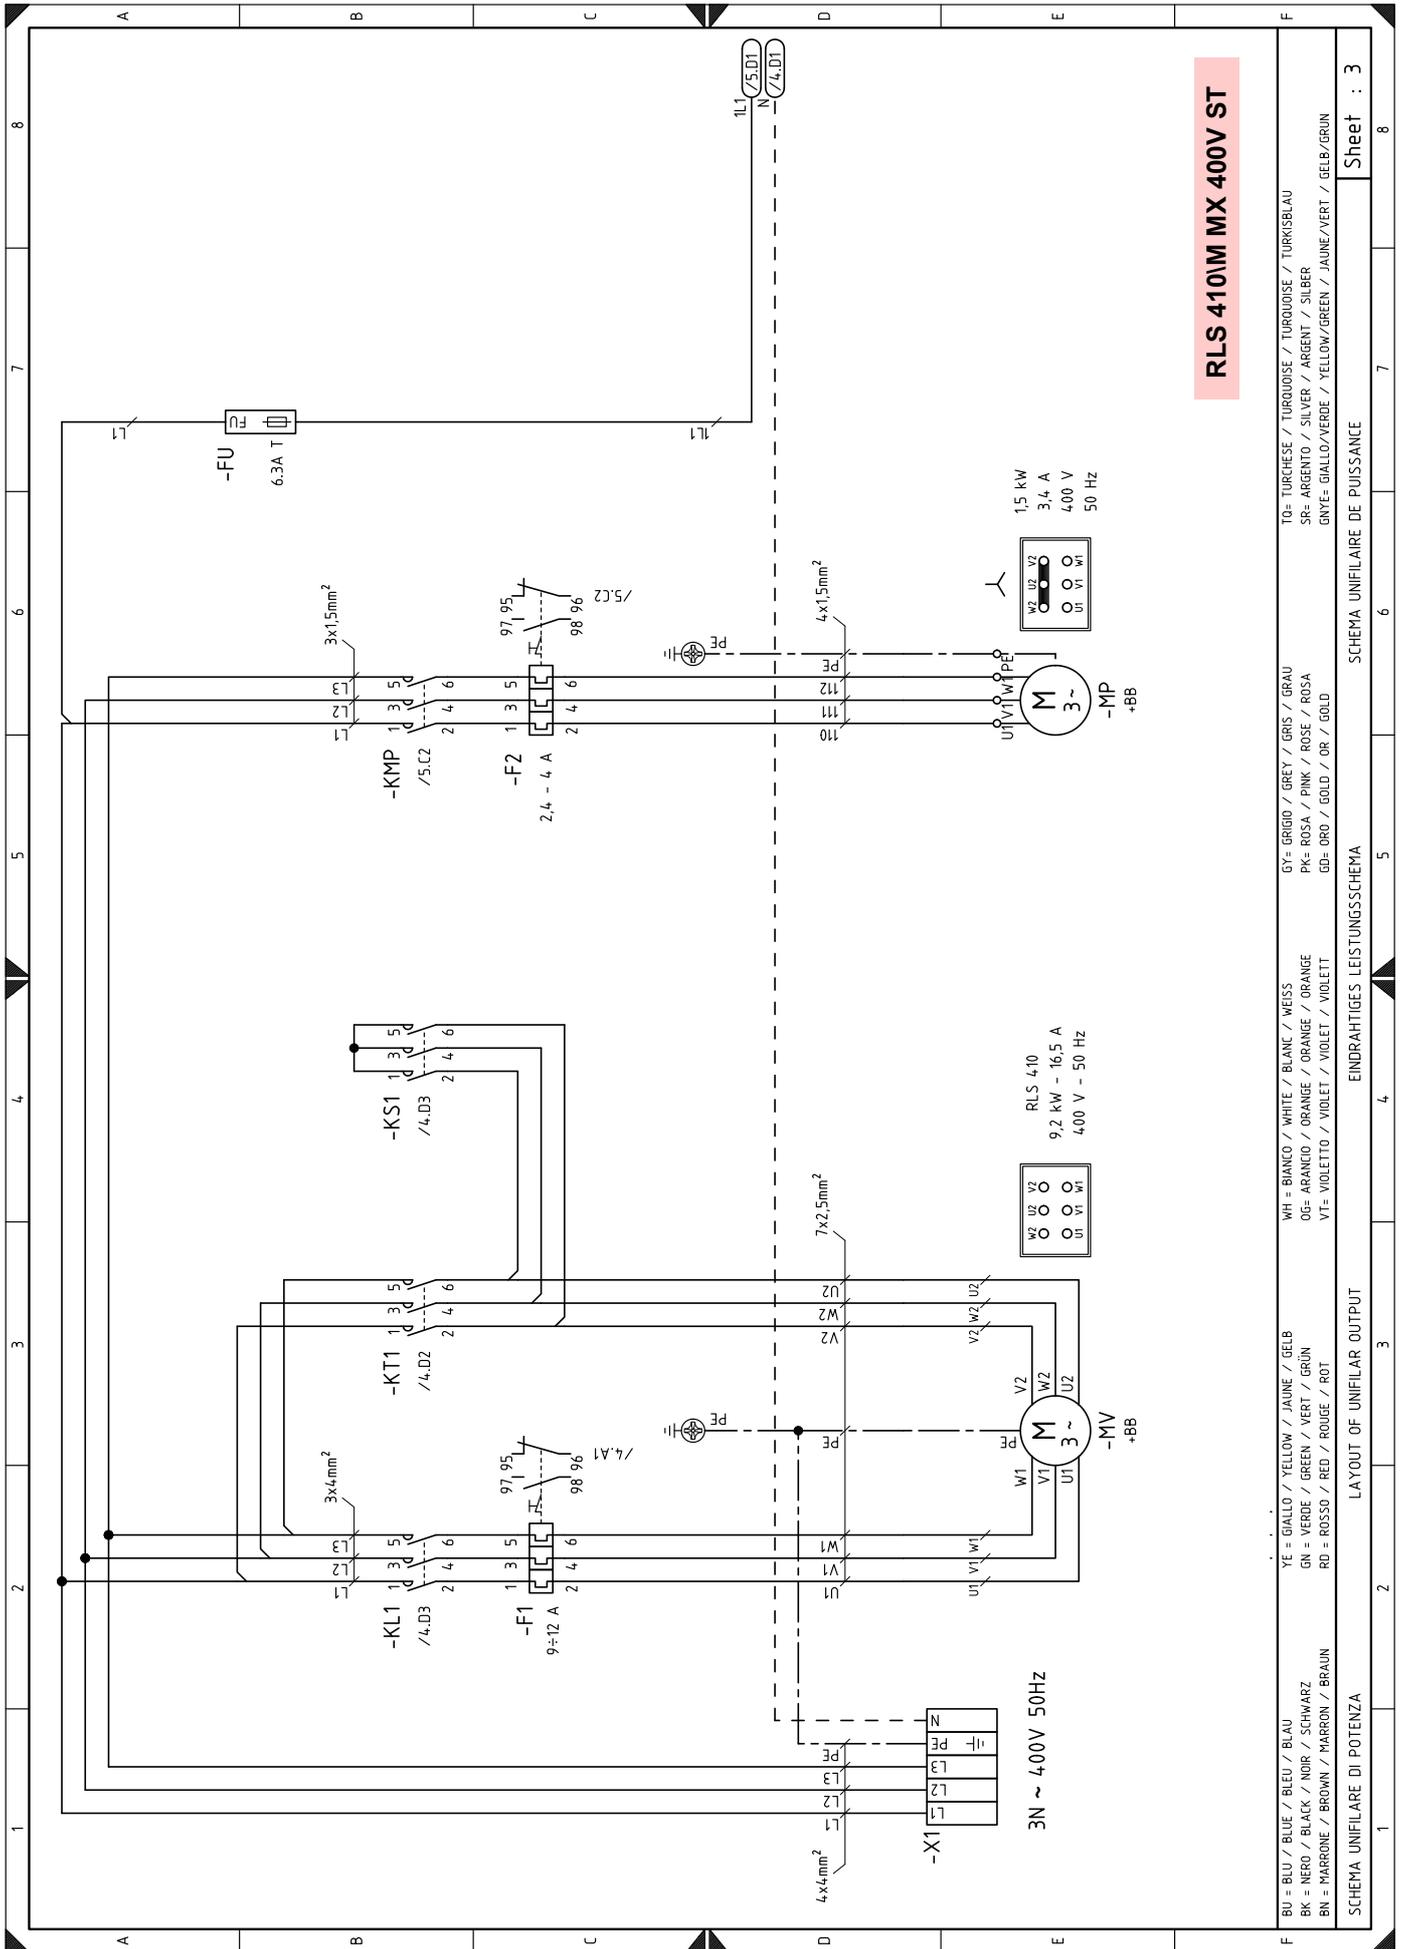

RLS 410M MX 400V ST


Sheet : 3


SCHEMA UNIFILARE DE PUISSANCE


EINDRAHTIGES LEISTUNGSSCHEMA


LAYOUT OF UNIFILAR OUTPUT


SCHEMA UNIFILARE DI POTENZA

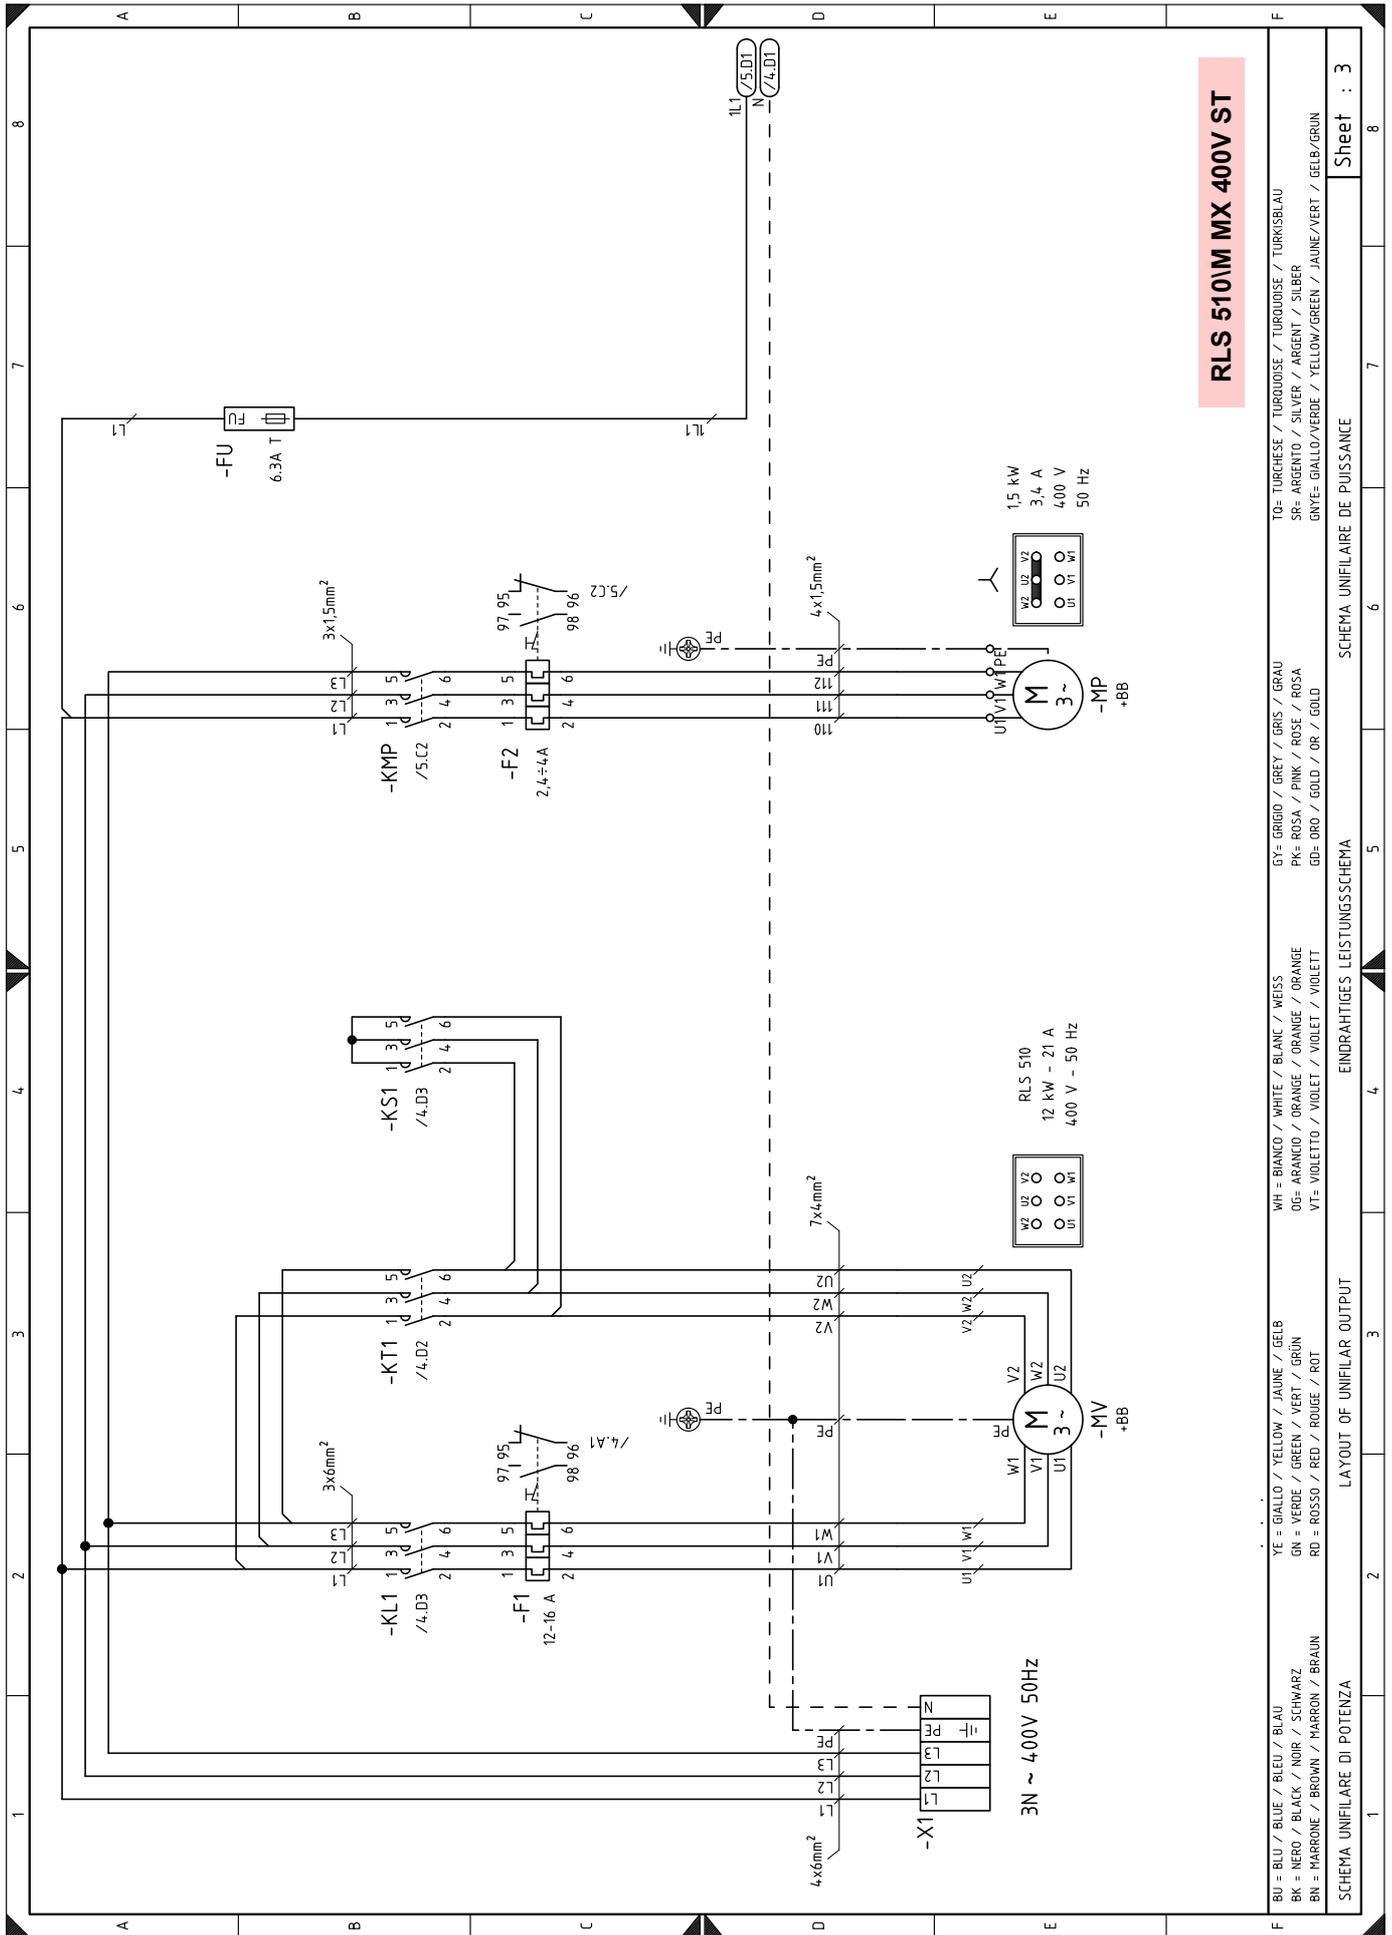

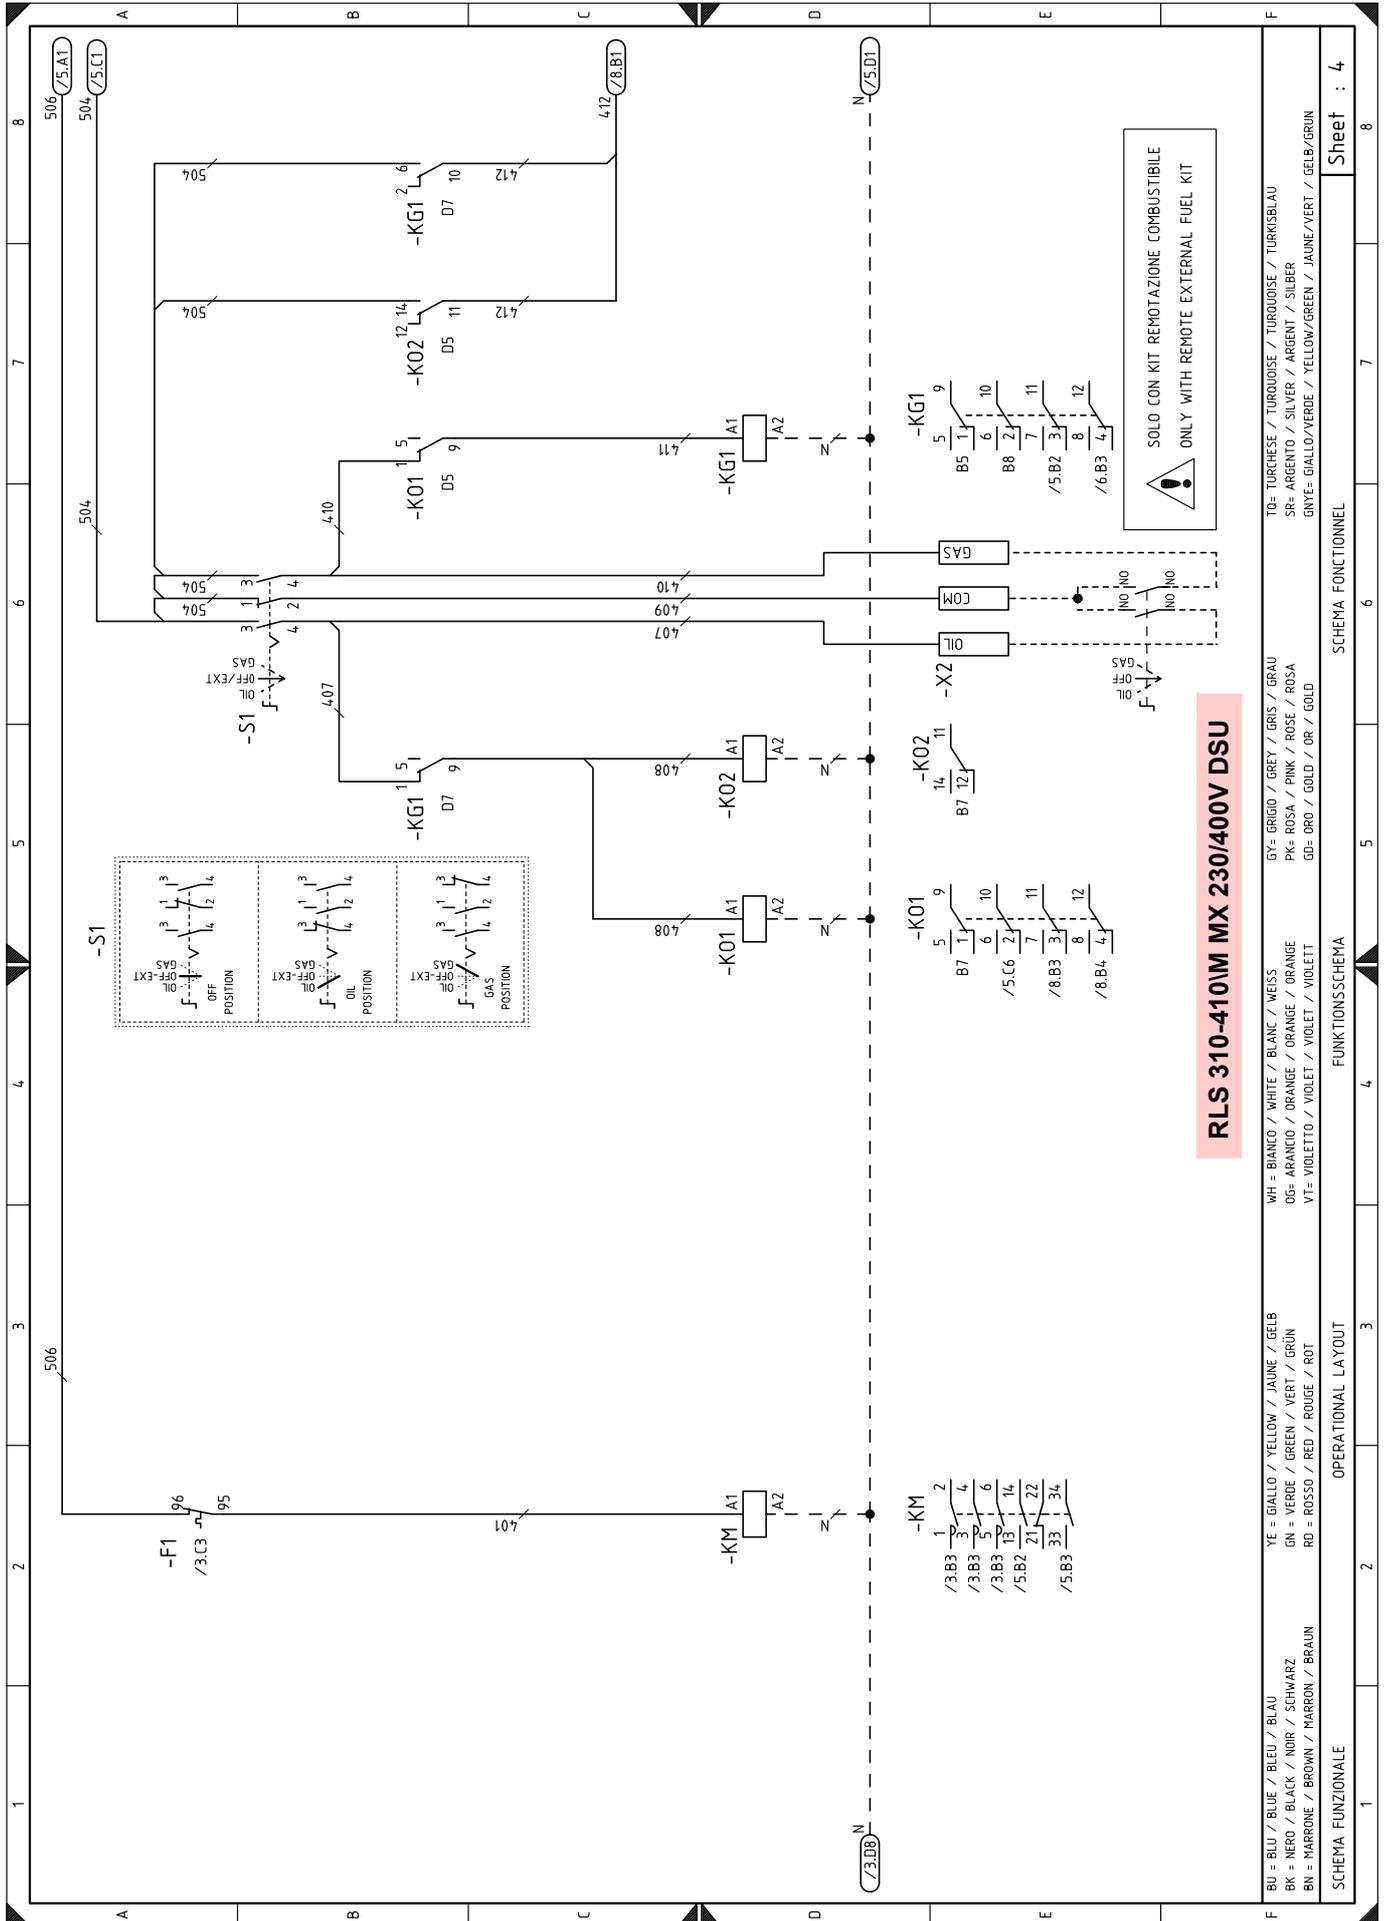

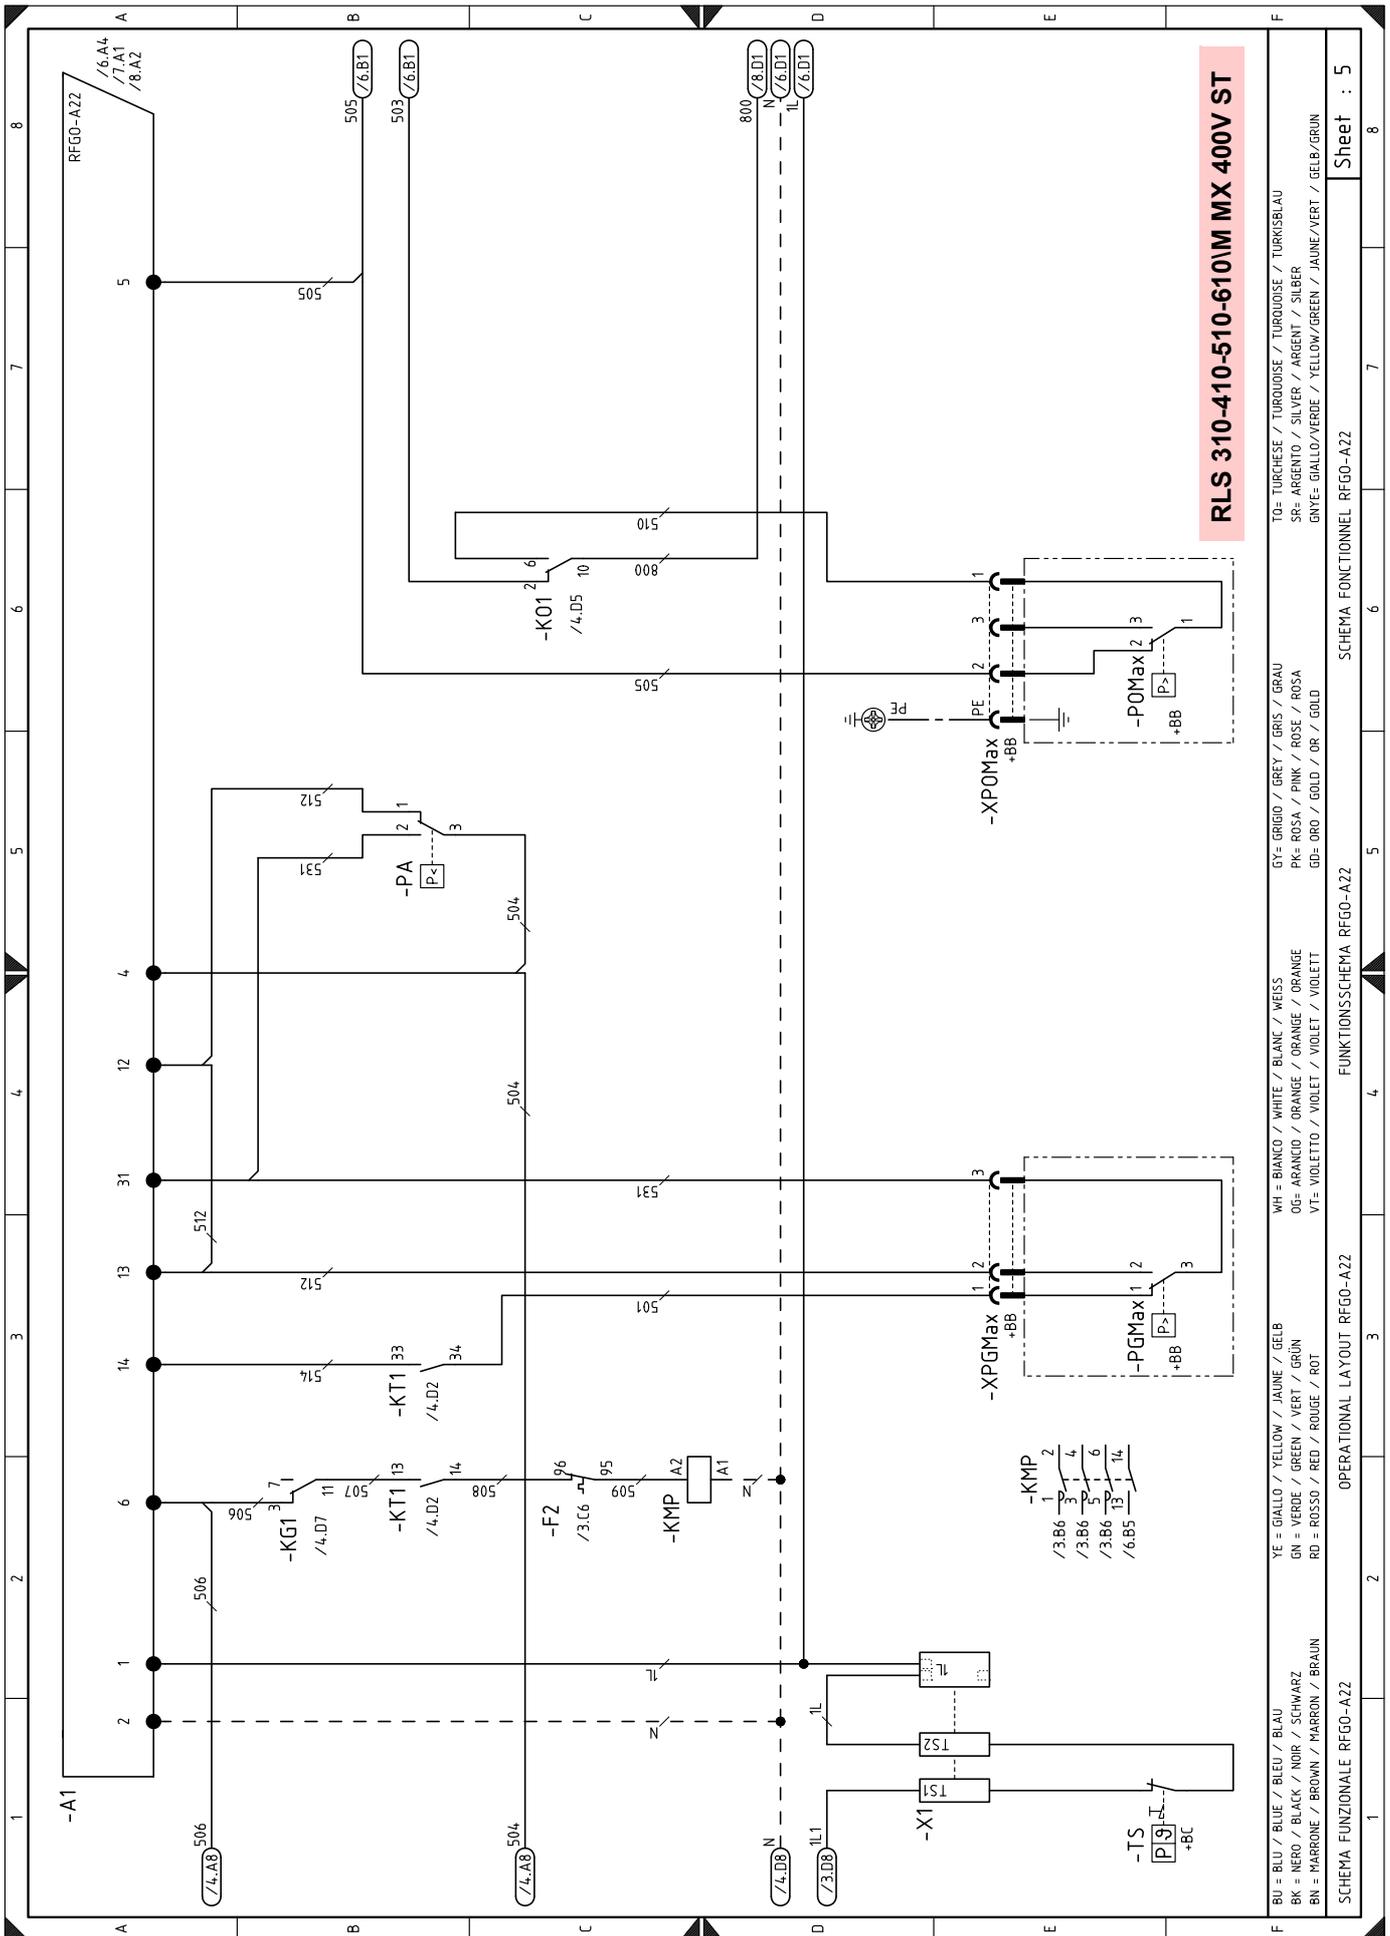

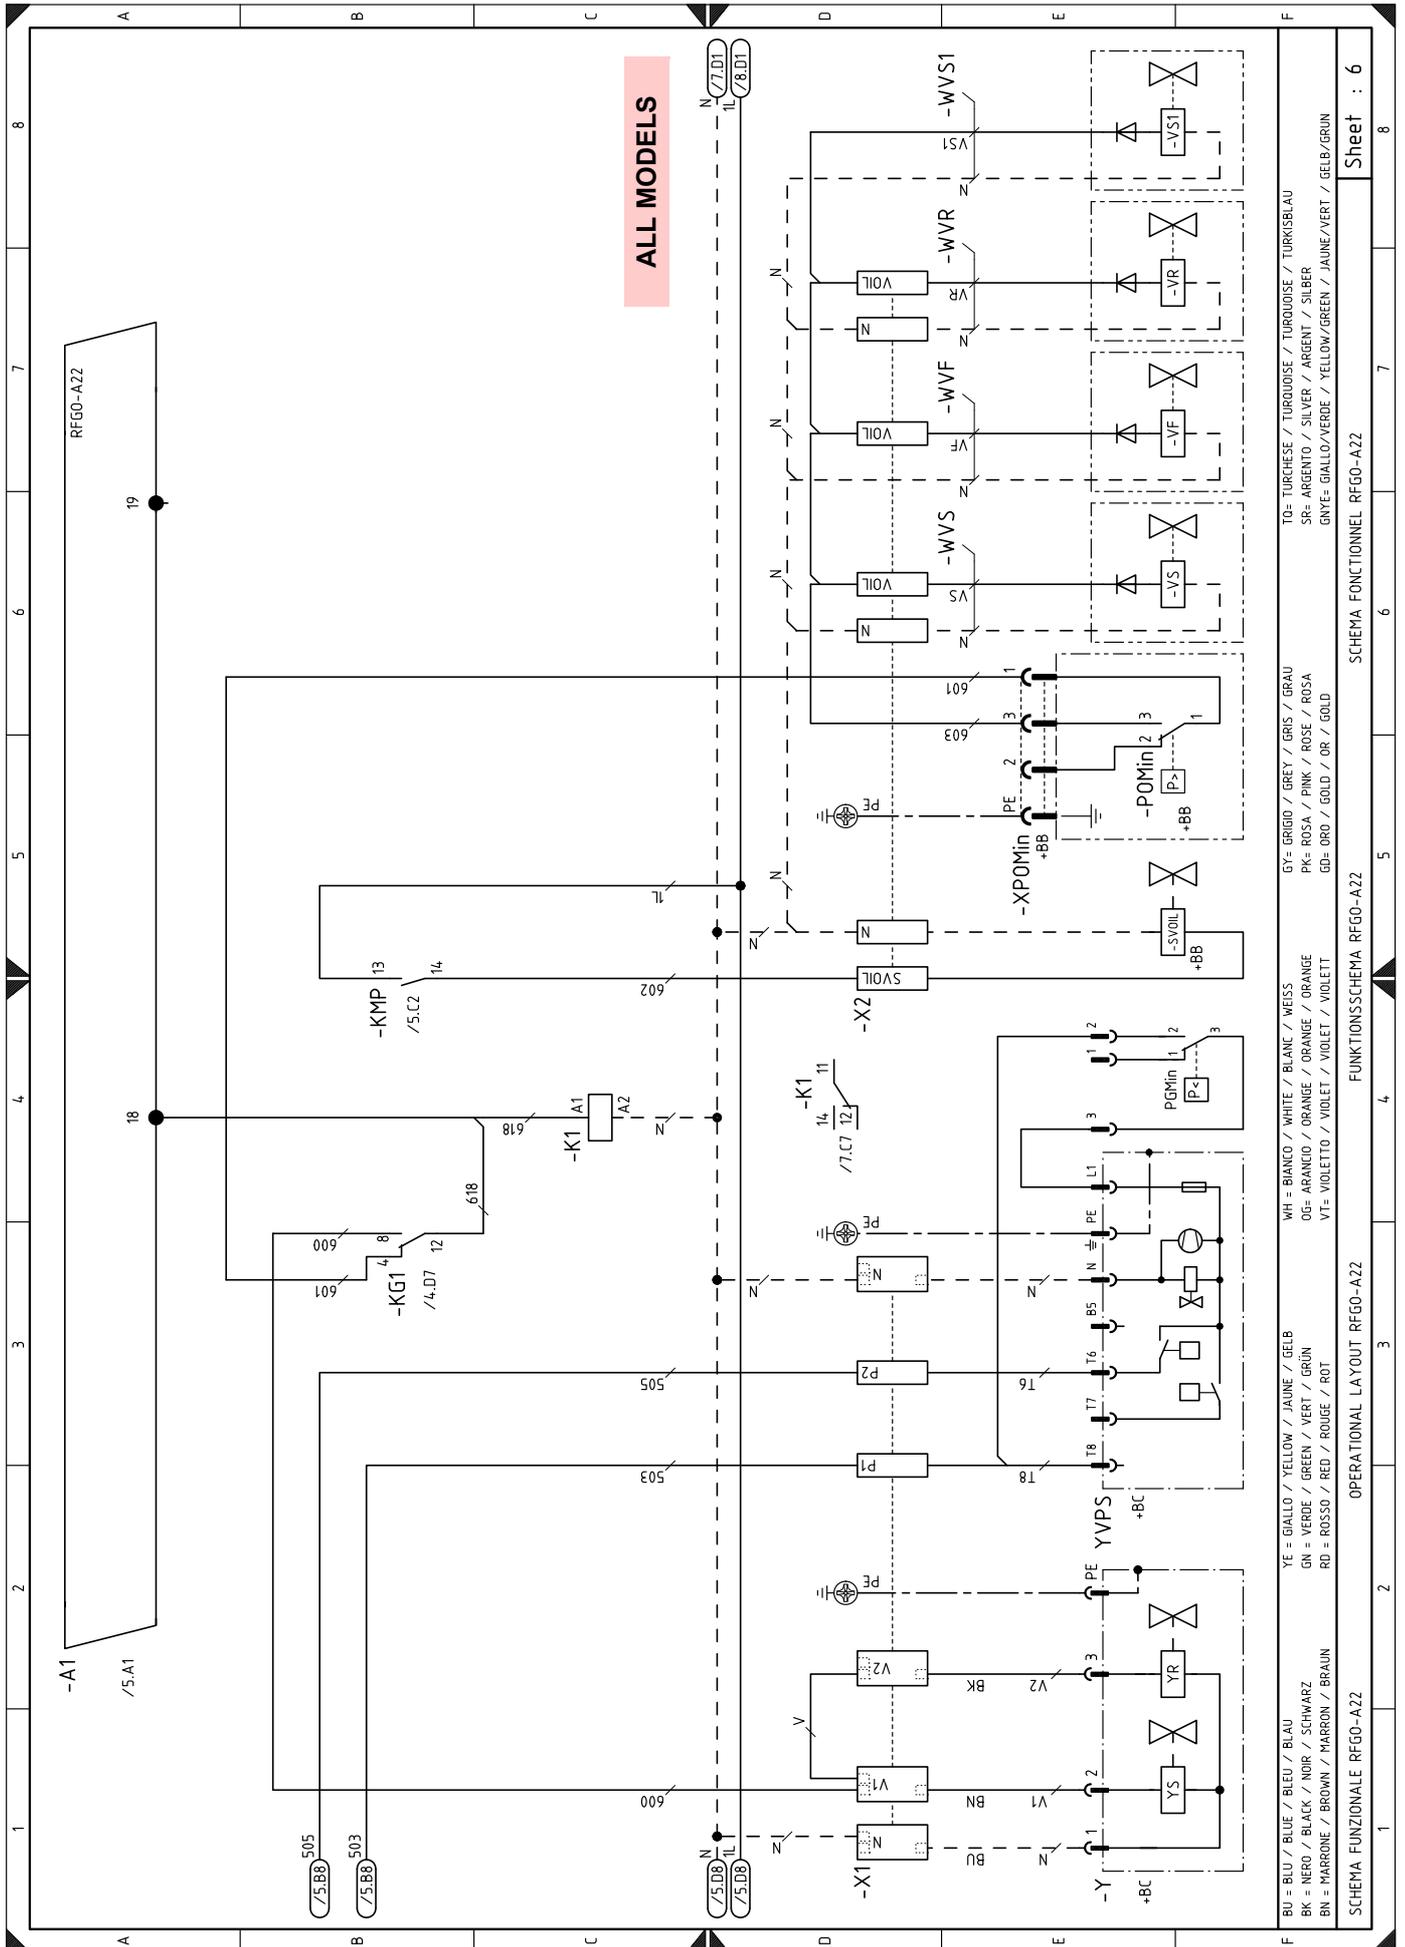


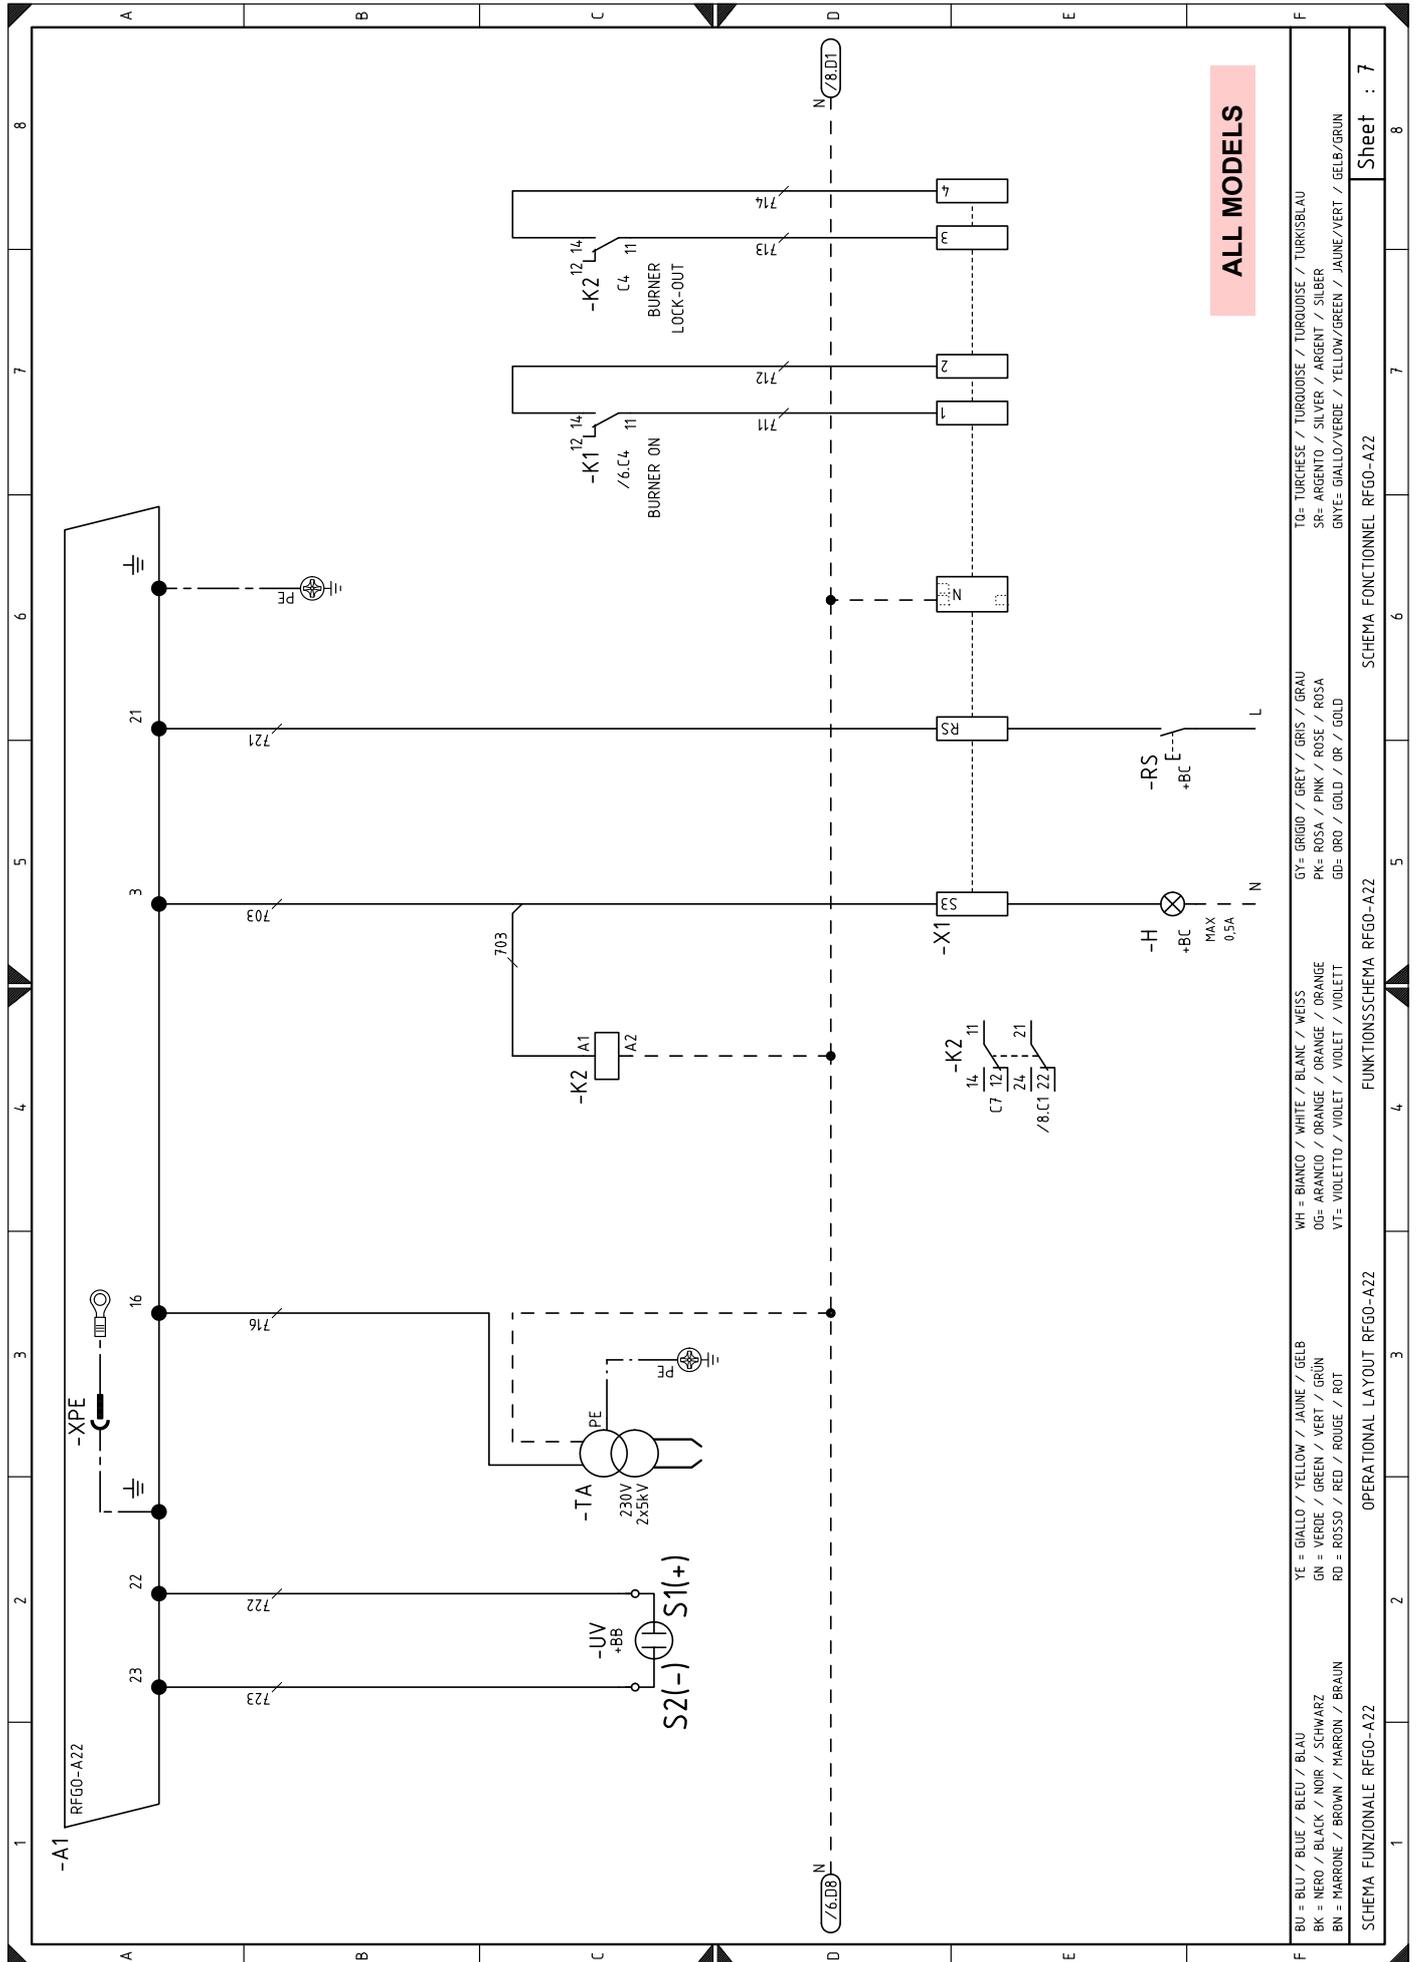


ALL MODELS

BU = BLU / BLUE / BLEU / BLAU	YE = GIALLO / YELLOW / JAUNE / GELB	WH = BIANCO / WHITE / BLANC / WEISS	GY = GRIGIO / GREY / GRIS / GRAU	TO = TURCHESE / TURQUOISE / TURKOISE / TURKSBLAU
BK = NERO / BLACK / NOIR / SCHWARZ	GN = VERDE / GREEN / VERT / GRÜN	OG = ARANCIO / ORANGE / ORANGE / ORANGE	PK = ROSA / PINK / ROSE / ROSA	SR = ARGENTO / SILVER / ARGENT / SILBER
BN = MARRONE / BROWN / MARRON / BRAUN	RD = ROSSO / RED / ROUGE / ROT	VT = VIOLETTA / VIOLET / VIOLET / VIOLETT	GD = ORO / GOLD / OR / GOLD	GNYE = GIALLO/VERDE / YELLOW/GREEN / JAUNE/VERT / GELB/GRÜN


Sheet : 7

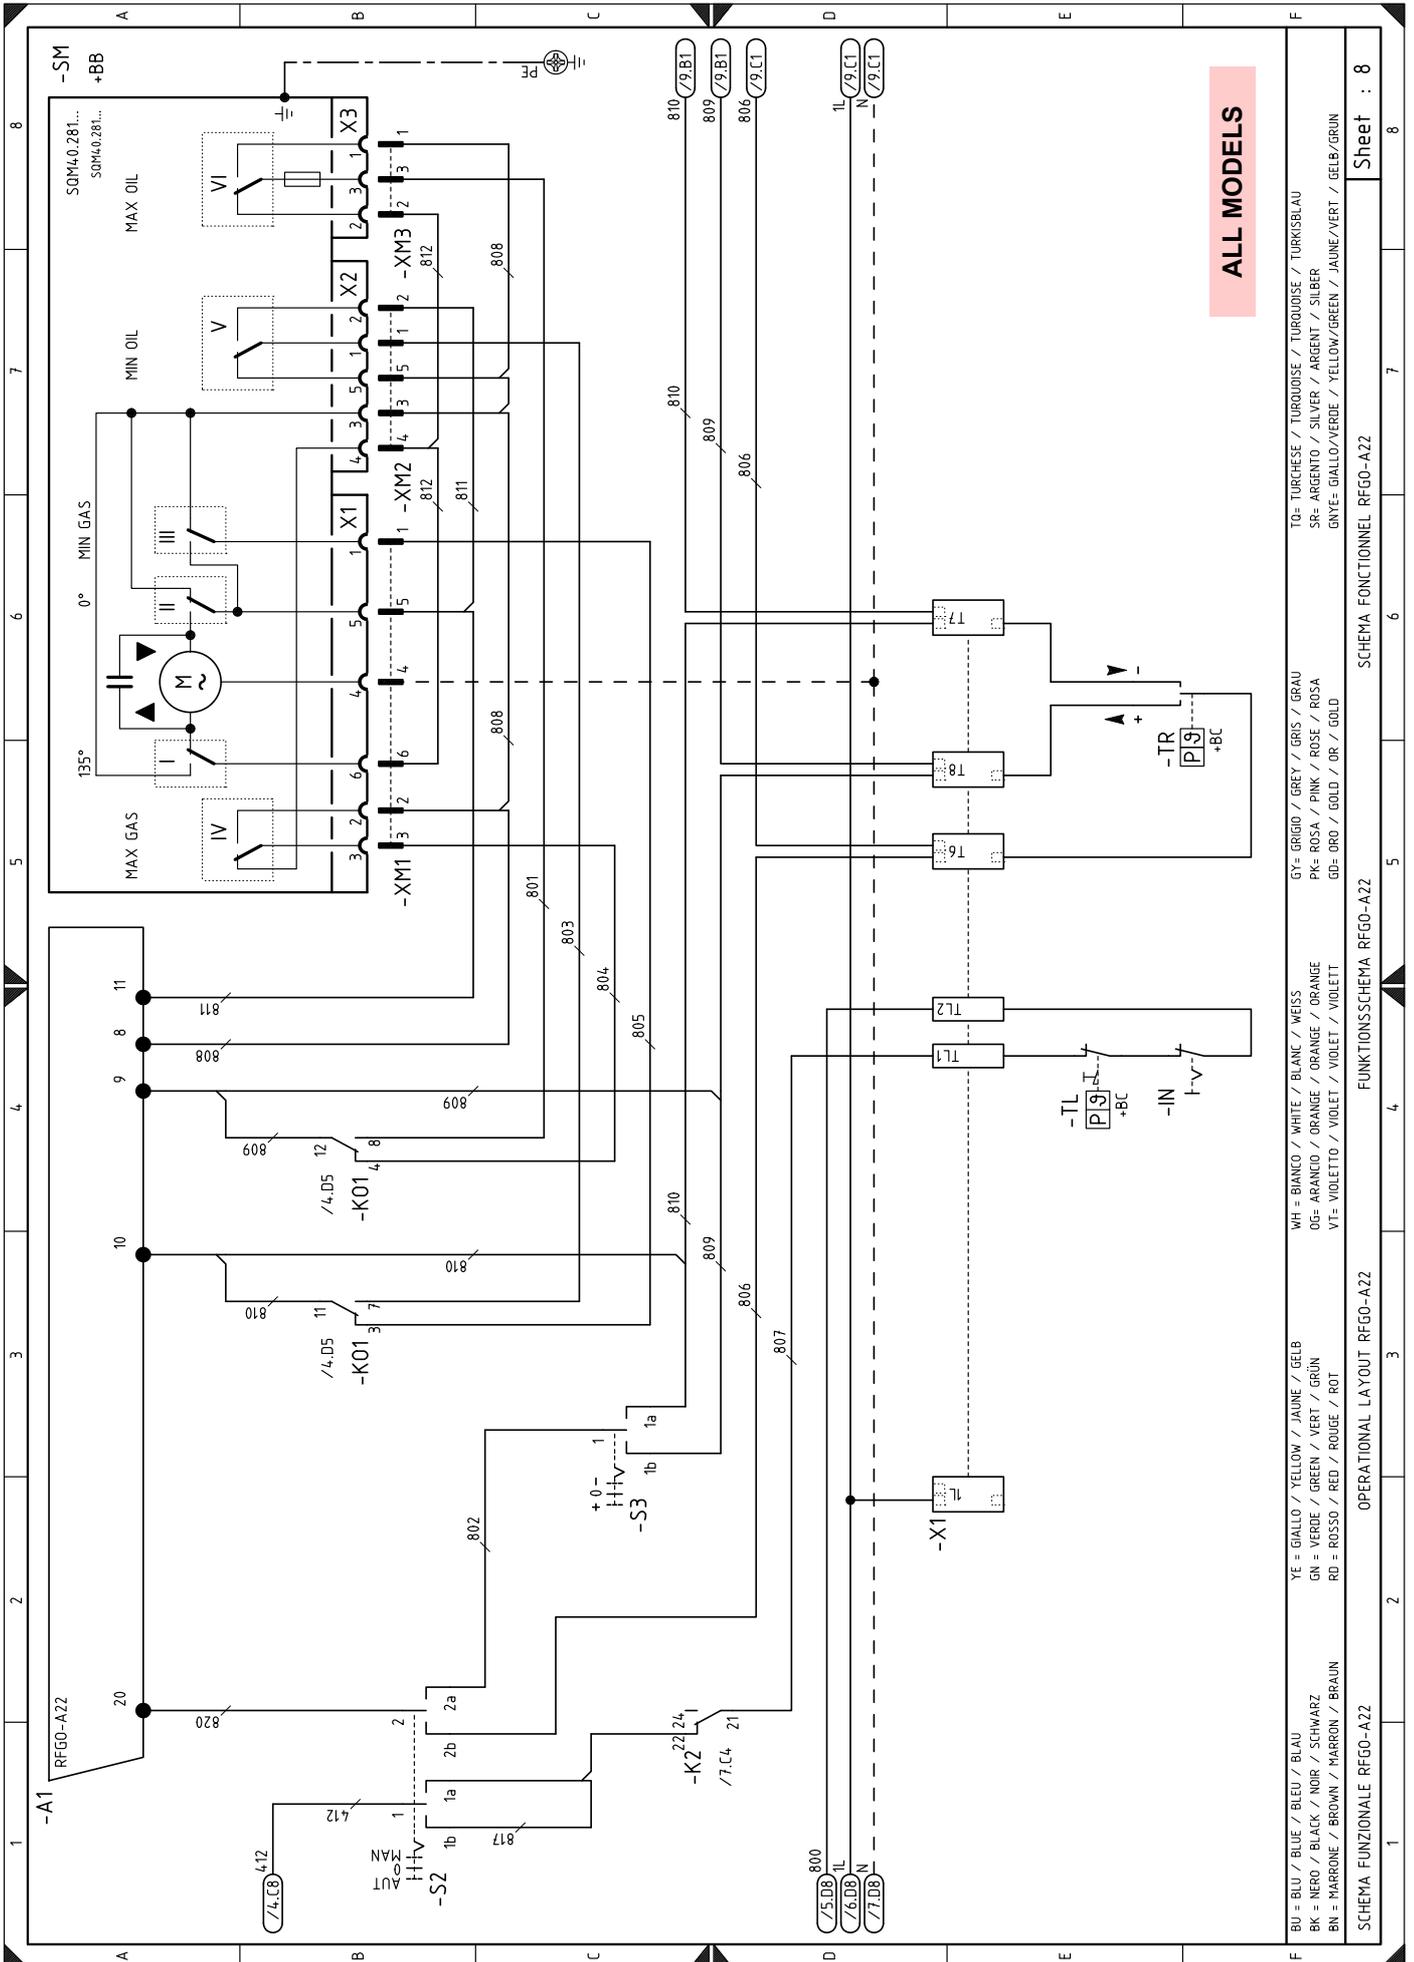


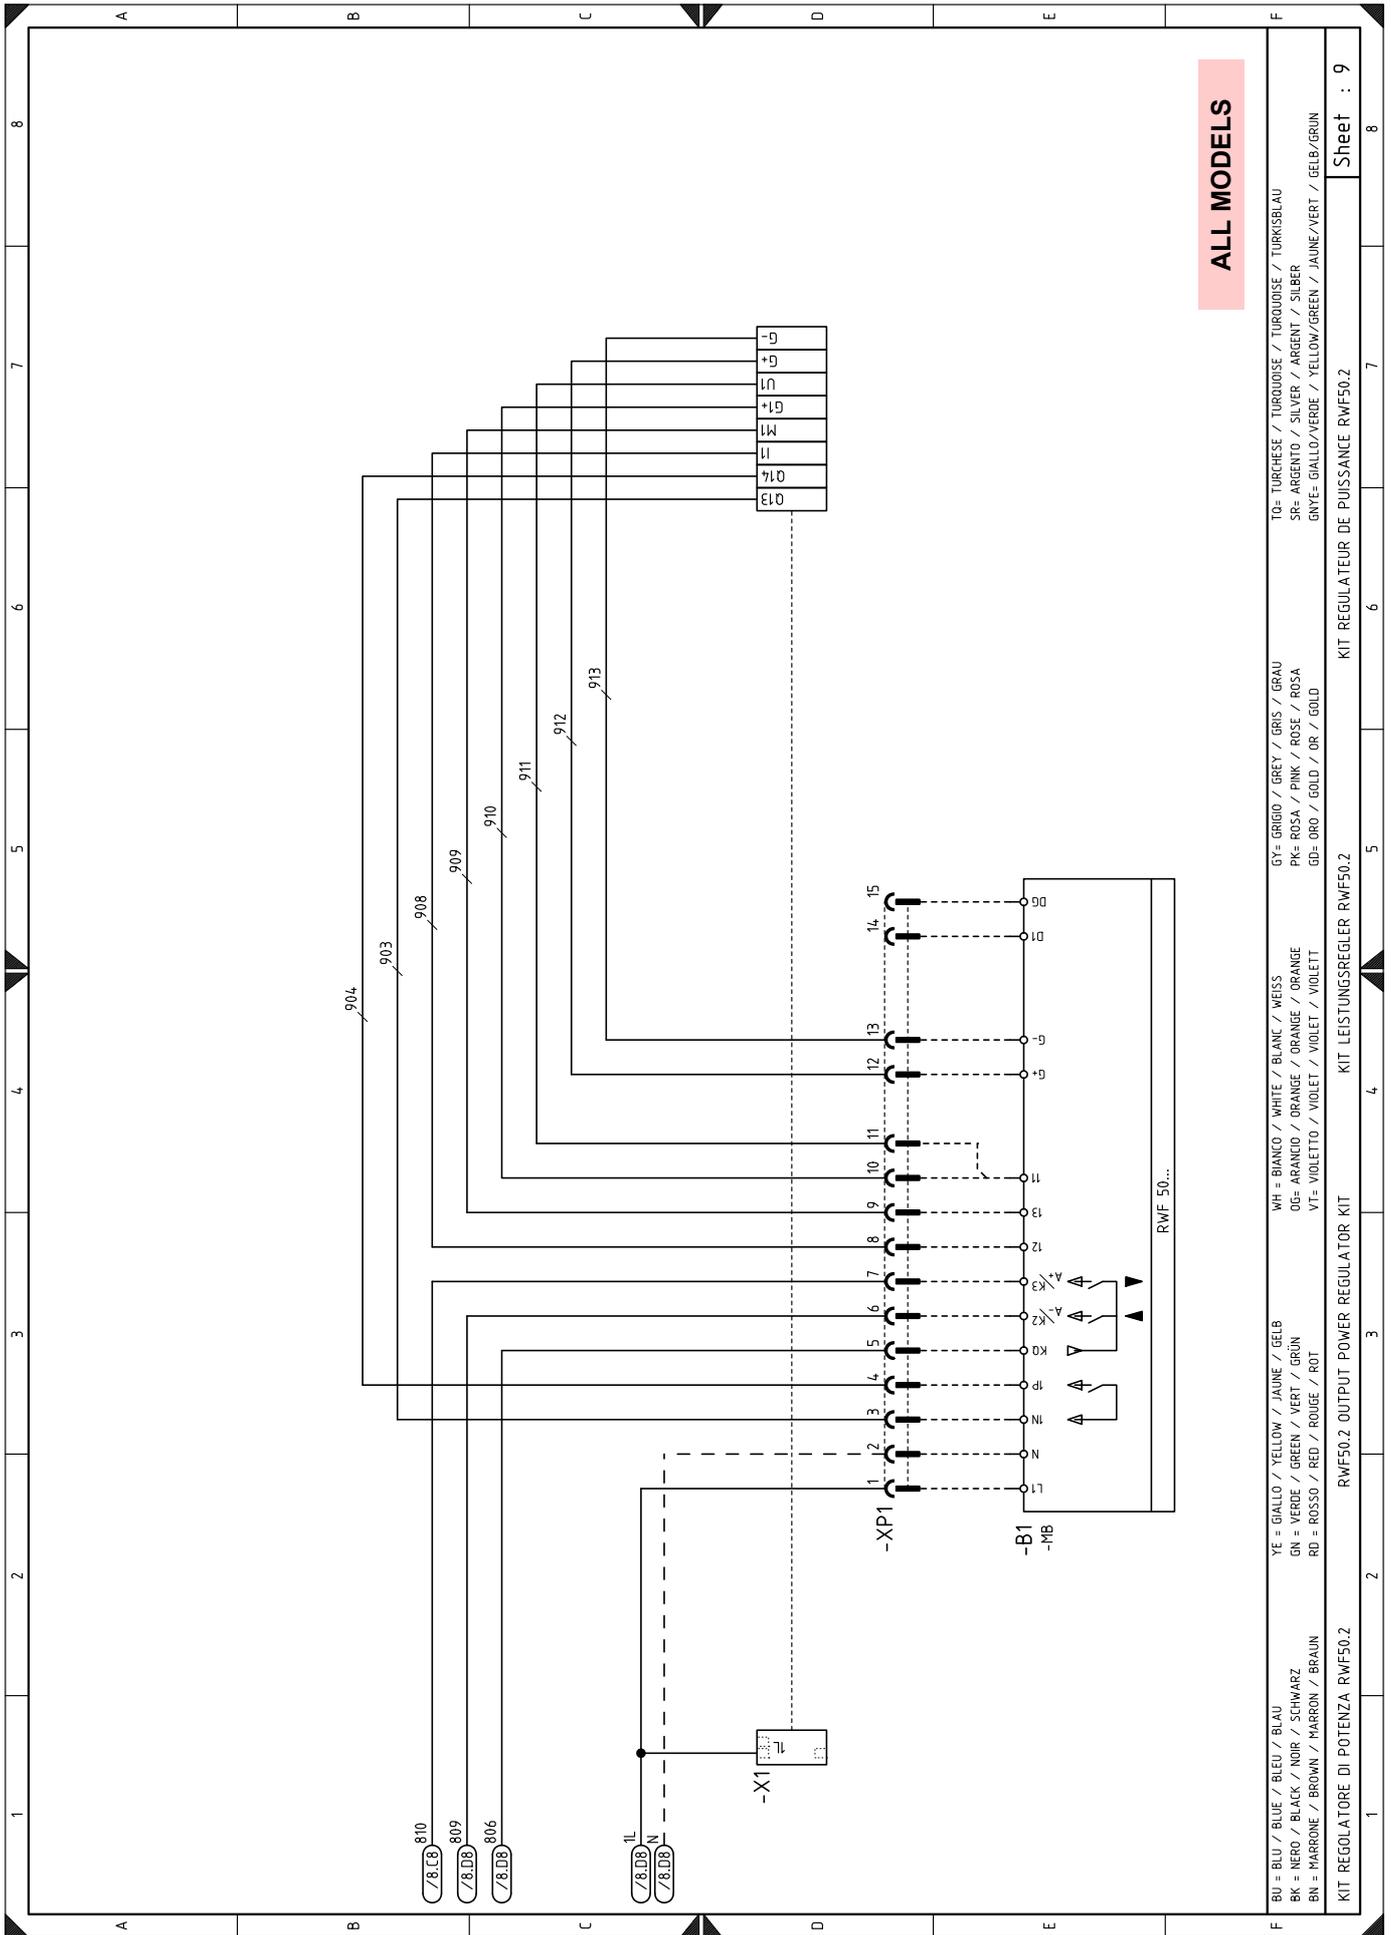

ALL MODELS

BU = BLU / BLUE / BLEU / BLAU	YE = GIALLO / YELLOW / JAUNE / GELB	WH = BIANCO / WHITE / BLANC / WEISS	GY = GRIGIO / GREY / GRIS / GRAU	TO = TURCHESE / TURQUOISE / TURKUISE / TURKISBLAU
BK = NERO / BLACK / NOIR / SCHWARZ	GN = VERDE / GREEN / VERT / GRÜN	OG = ARANCIO / ORANGE / ORANGE / ORANGE	PK = ROSA / PINK / ROSE / ROSA	SR = ARGENTO / SILVER / ARGENT / SILBER
BN = MARRONE / BROWN / MARRON / BRAUN	RD = ROSSO / RED / ROUGE / ROT	VT = VIOLETTA / VIOLET / VIOLET / VIOLETT	GD = ORO / GOLD / OR / GOLD	GNYE = GIALLO/VERDE / YELLOW/GREEN / JAUNE/VERT / GELB/GRÜN
KIT REGOLATORE DI POTENZA RWF50.2				
RWF50.2 OUTPUT POWER REGULATOR KIT				
KIT LEISTUNGSREGLER RWF50.2				
KIT REGULAEUR DE PUISSANCE RWF50.2				
				Sheet : 9

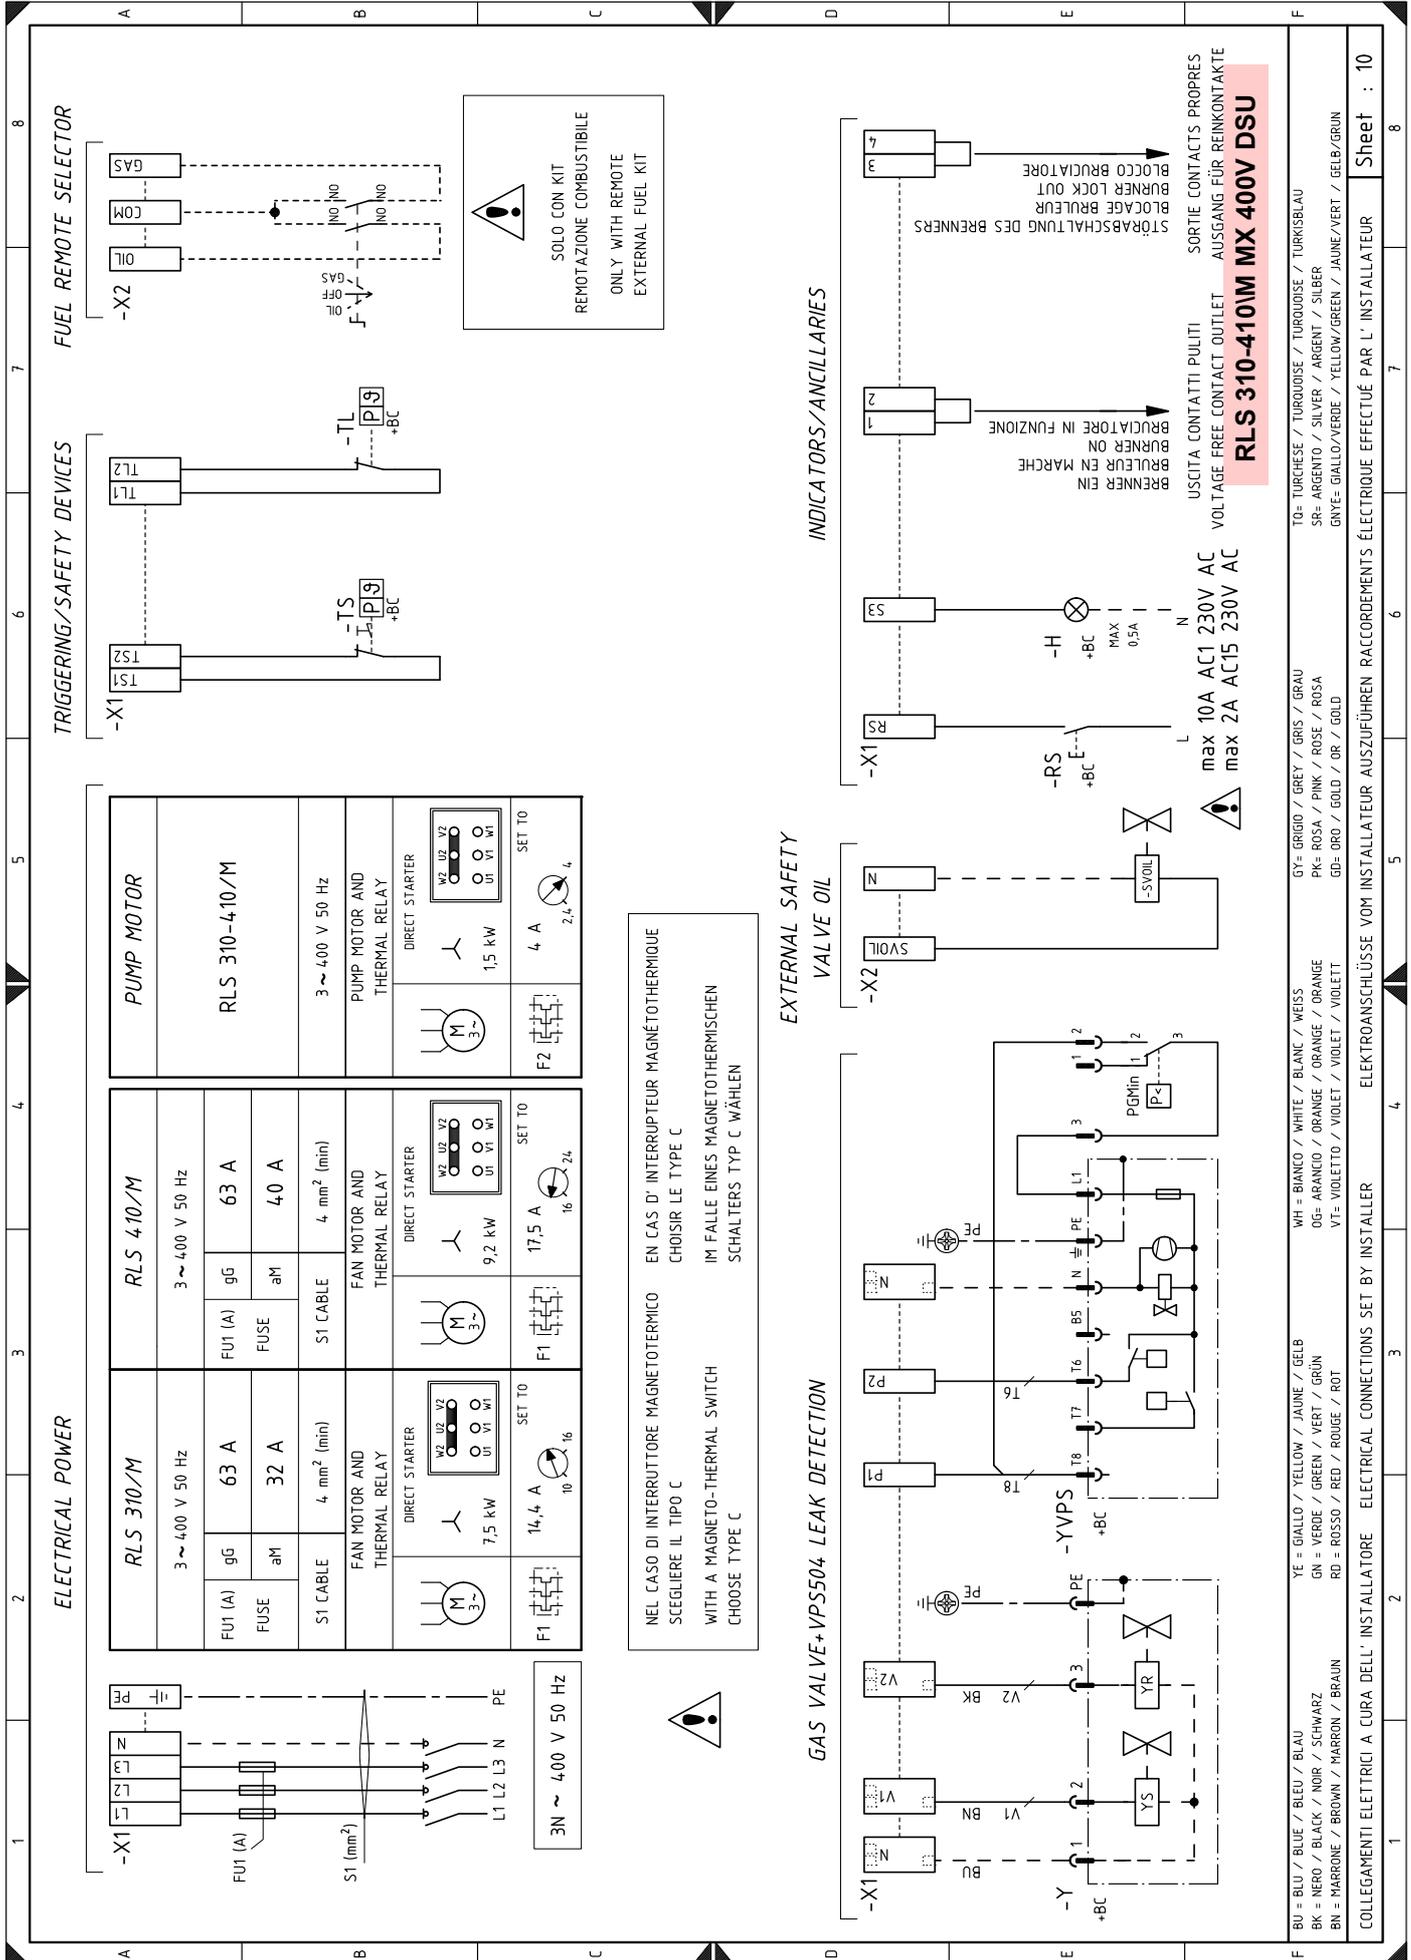


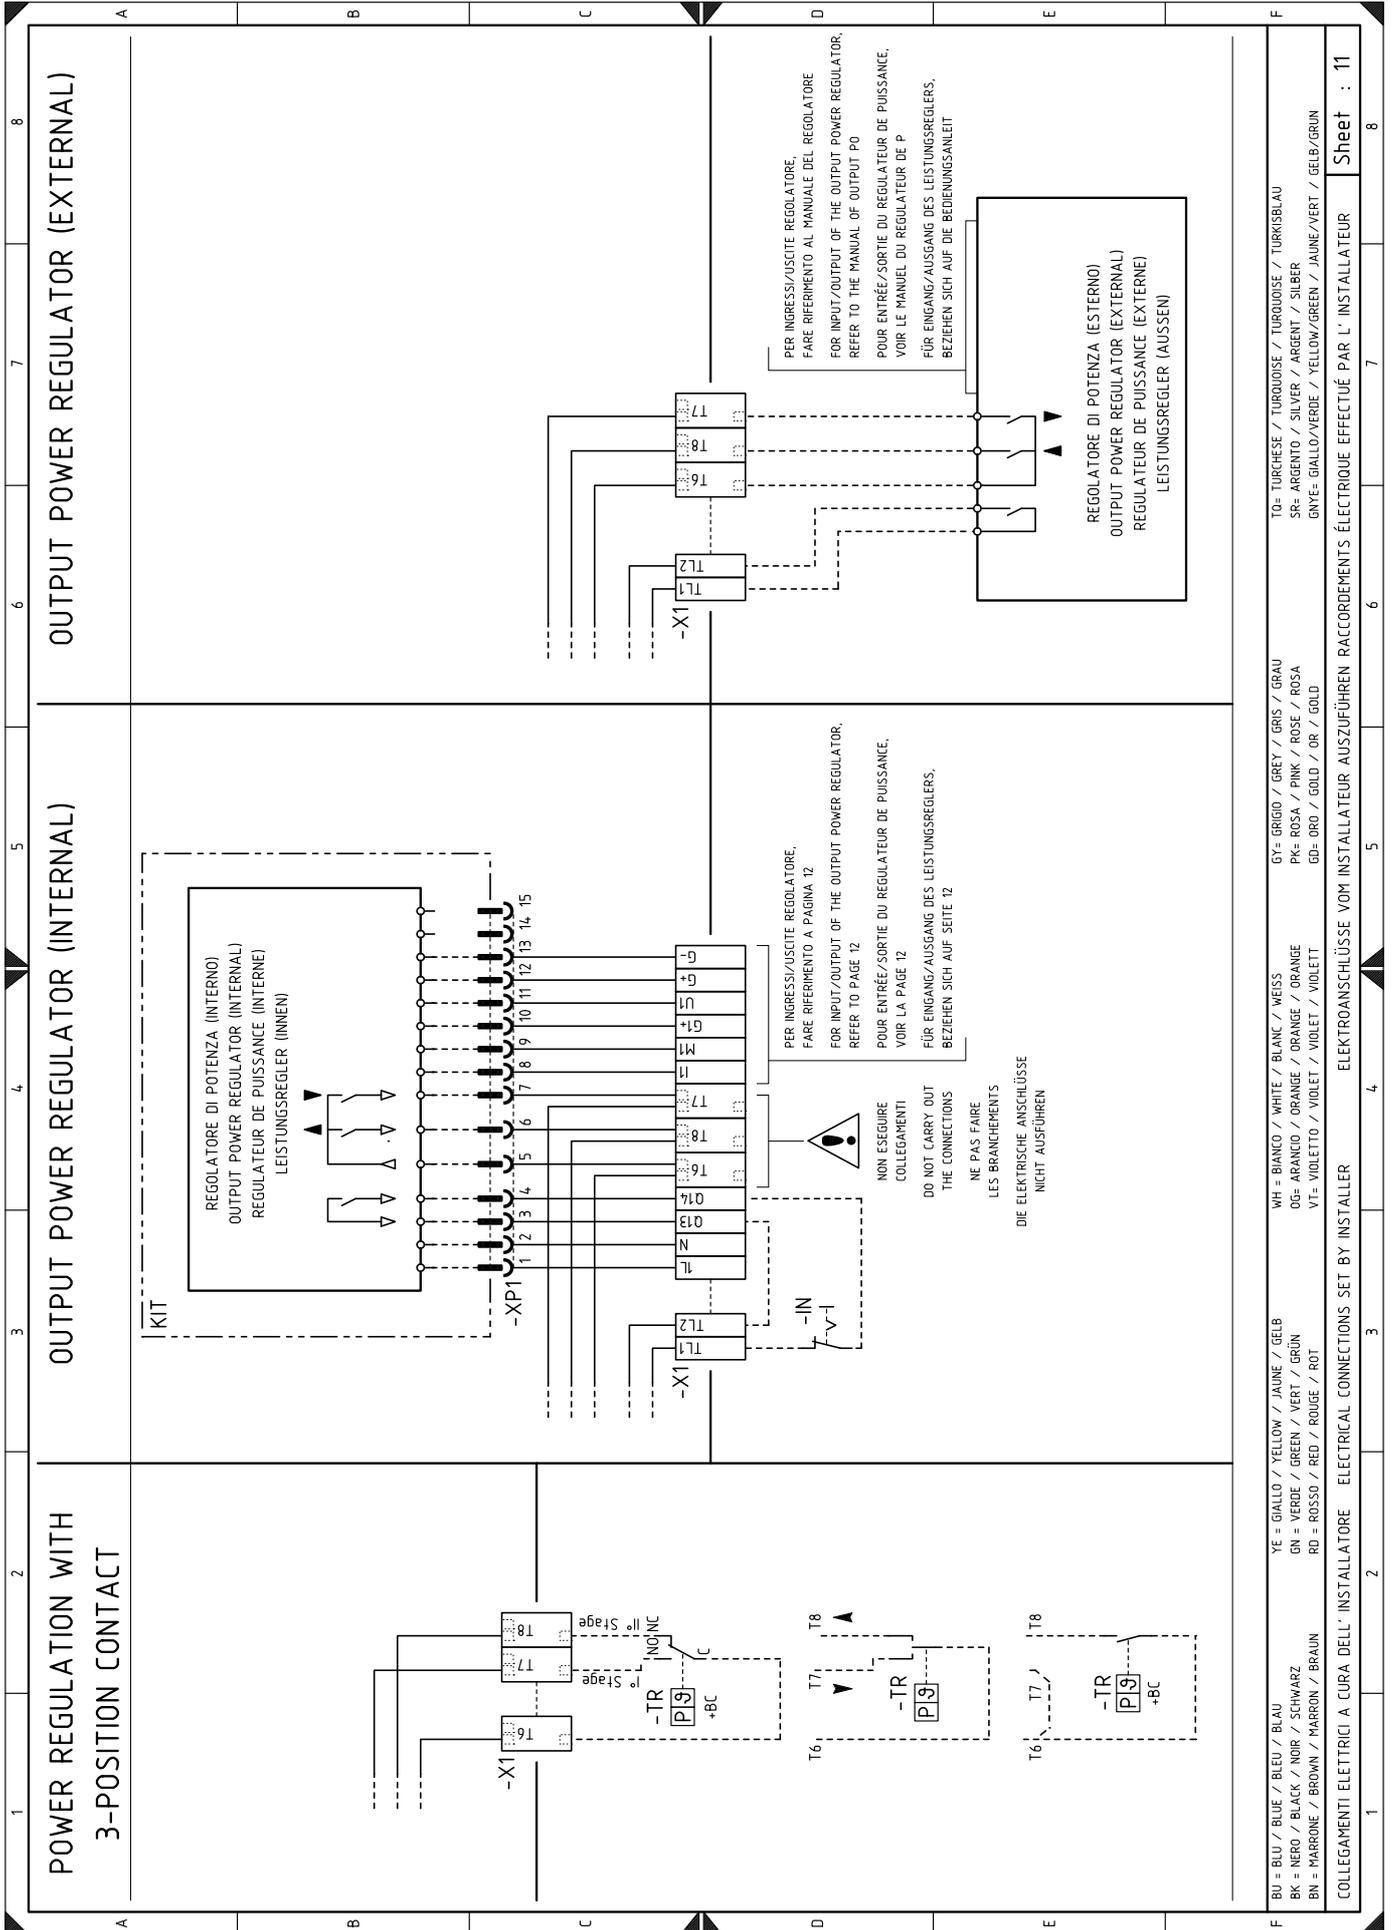

BU = BLU / BLUE / BLEU / BLAU	YE = GIALLO / YELLOW / JAUNE / GELB	WH = BIANCO / WHITE / BLANC / WEISS	GY = GRIGIO / GREY / GRIS / GRAU	TO = TURCHESE / TURQUOISE / TURKOISE / TURKISBLAU
BK = NERO / BLACK / NOIR / SCHWARZ	GN = VERDE / GREEN / VERT / GRÜN	OG = ARANCIO / ORANGE / ORANGE / ORANJE	PK = ROSA / PINK / ROSE / ROSA	SR = ARGENTO / SILVER / ARGENT / SILBER
BN = MARRONE / BROWN / MARRON / BRAUN	RD = ROSSO / RED / ROUGE / ROT	VT = VIOLETTO / VIOLET / VIOLET / VIOLETTE	GD = ORO / GOLD / OR / GOLD	GNYE = GIALLO/VERDE / YELLOW/VERT / GELB/GRÜN

COLLEGAMENTI ELETTRICI A CURA DELL'INSTALLATORE ELECTRICAL CONNECTIONS SET BY INSTALLER ELEKTROANSCHLÜSSE VOM INSTALLATEUR AUSZUFÜHREN RACCORDEMENTS ÉLECTRIQUE EFFECTUÉ PAR L'INSTALLATEUR

Sheet : 11

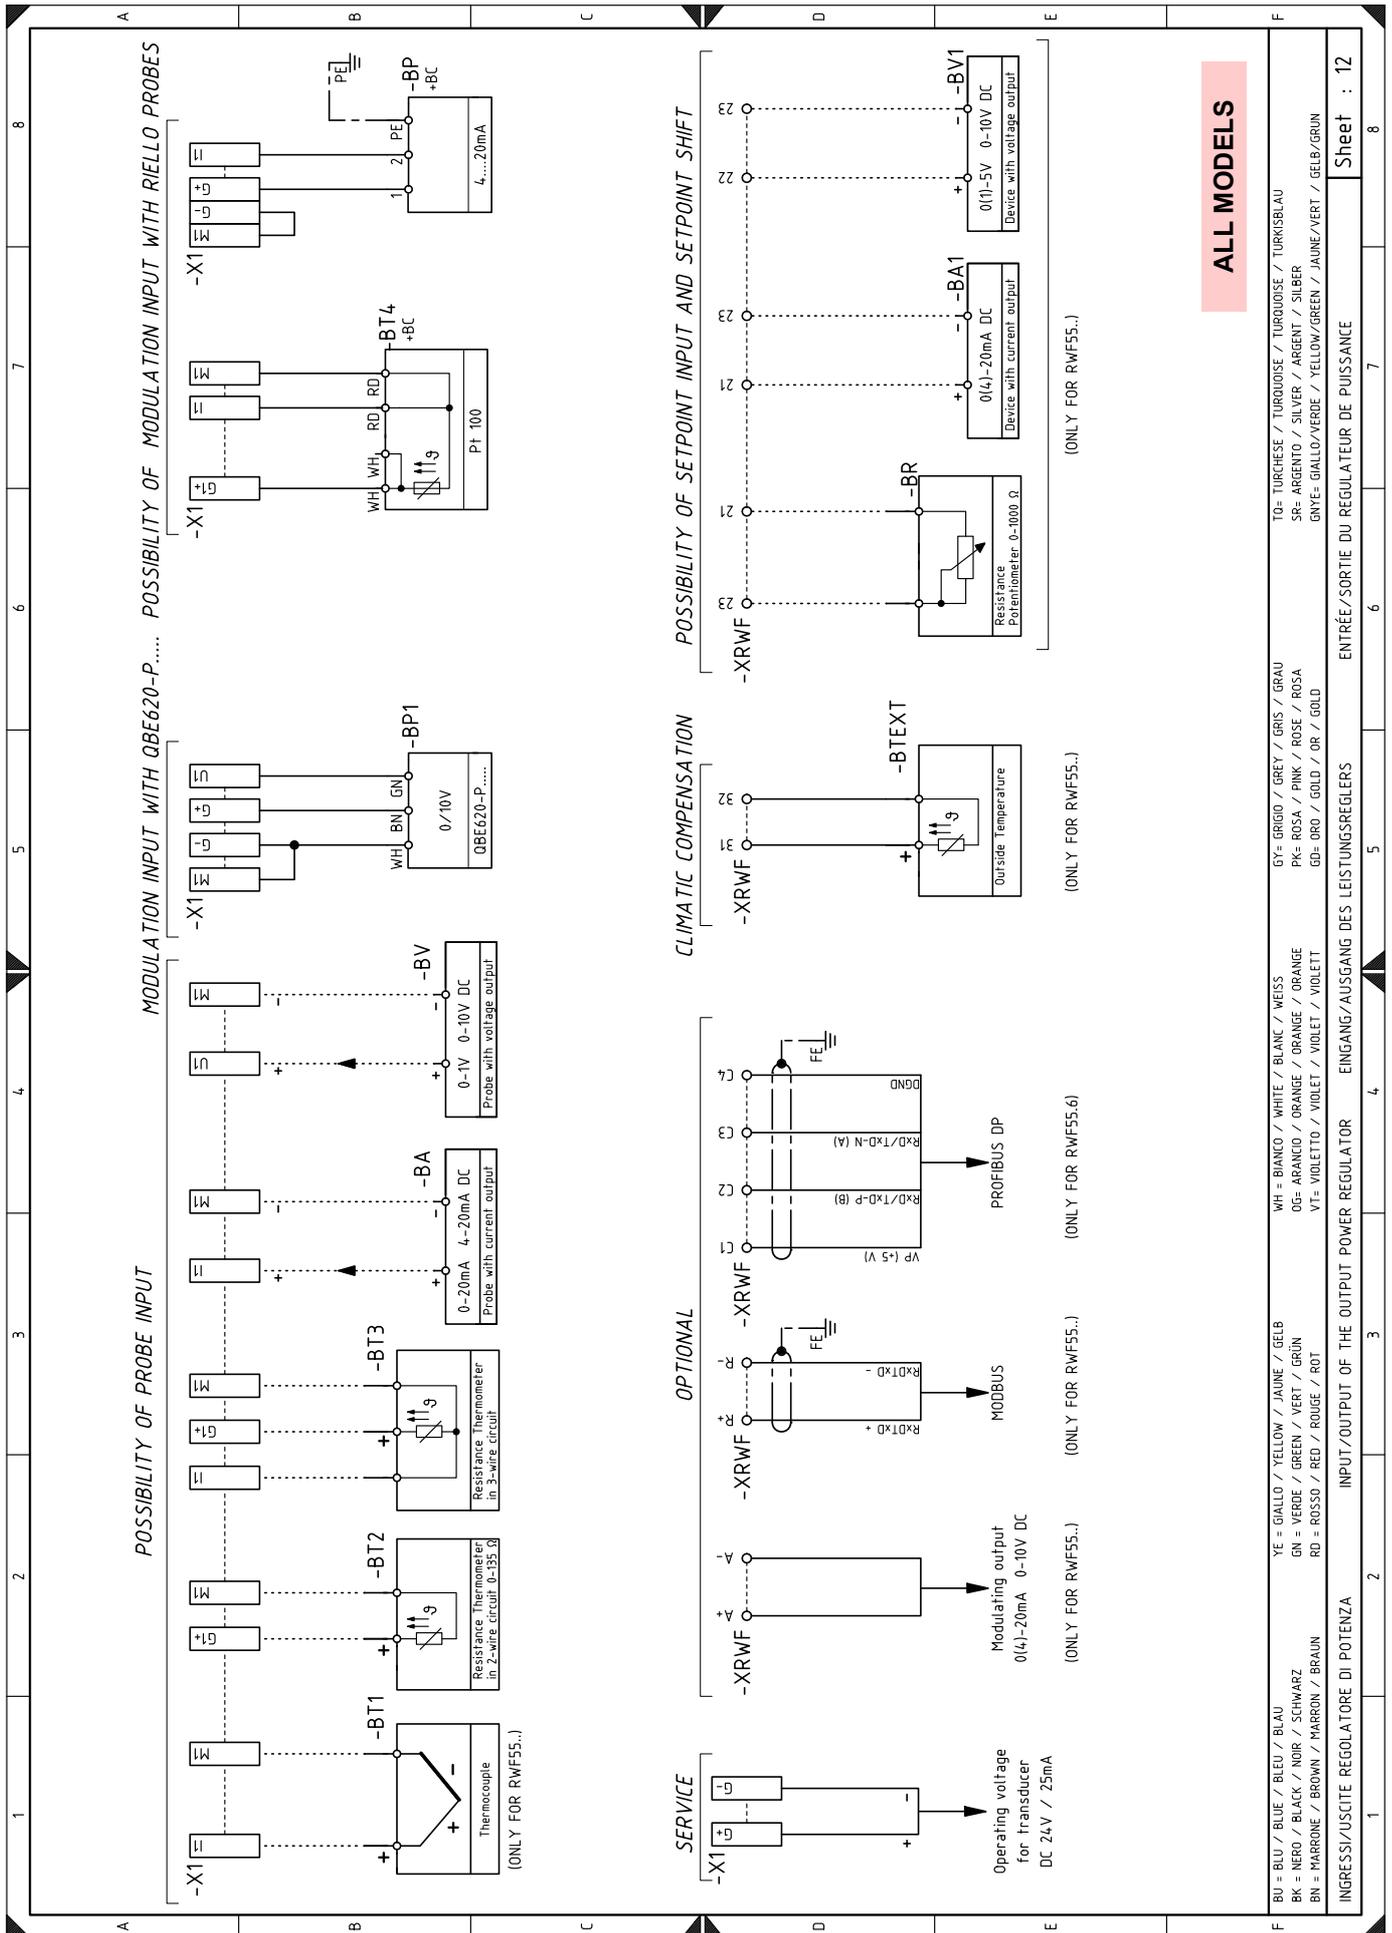

Wiring layout key

A1	Electrical control box	RS	Remote reset switch
B1	Output power regulator RWF... internal	S1	Fuel selector
BA	Input in current DC 0...20 mA, 4...20 mA	S2	Off / automatic / manual selector
BA1	Input in current DC 0...20 mA, 4...20 mA to modify remote setpoint	S3	Power increase / power reduction selector
BP	Pressure probe	SM	Servomotor
BP1	Pressure probe	SOG	Optional light oil/gas selector
BR	Remote setpoint potentiometer	VSOIL	Oil safety valve
BT1	Thermocouple probe	TA	Ignition transformer
BT2	Probe Pt100, 2 wires	TL	Limit thermostat/pressure switch
BT3	Probe Pt100, 3 wires	TR	Adjustment thermostat/pressure switch
BT4	Probe Pt100, 3 wires	TS	Safety thermostat/pressure switch
BTEXT	External probe for climatic compensation of the setpoint	VF-VR	Oil circuit valves
BV	Input in voltage DC 0...1 V, 0...10 V	VS-VS1	Oil circuit valves
BV1	Input in voltage DC 0...1 V, 0...10 V to modify remote setpoint	Y	Gas adjustment valve + gas safety valve
F1	Fan motor thermal relay	YVPS	Valve leak detection device
F2	Pump motor thermal relay	X1	Main terminal supply board
FU	Auxiliary circuits safety fuse	X2	Valve group terminal board
H	Burner working lighting signal output	XM1	Servomotor connector 1
IN	Burner manual stop electric switch	XM2	Servomotor connector 2
KG1	Relay for oil enabling	XM3	Servomotor connector 3
KL1	Star/triangle starter line contactor	XP1	Connector for RWF output power regulator kit ... or signal converter
KM	Direct start up contactor	XPGMax	Maximum gas pressure switch connector
KMP	Pump motor contact maker	XPOMax	Maximum oil pressure switch connector
KT1	Star/triangle starter triangle contactor	XPOMin	Minimum oil pressure switch connector
KS1	Start/triangle starter star contactor	XRWF	Terminal board for output power regulator RWF ...
KST1	Star/triangle starter timer	UV	UV flame sensor
K01	Oil enable relay		
K02	Oil enable relay		
K1	Clean contacts output relay burner operating		
K2	Clean contacts output relay burner lockout		
MP	Pump motor		
MV	Fan motor		
PA	Air pressure switch		
PE	Burner earth		
PGMin	Minimum gas pressure switch		
PGMax	Maximum gas pressure switch		
POMax	Maximum oil pressure switch		
POMin	Minimum oil pressure switch		



If there is a problem with the fuse **FU**, there is a spare one in the fuse holder.

RIELLO

RIELLO S.p.A.
I-37045 Legnago (VR)
Tel.: +39.0442.630111
[http:// www.riello.it](http://www.riello.it)
[http:// www.riello.com](http://www.riello.com)